



2331 Assembly Instruction


Step1: Assemble Levellers at bottom.

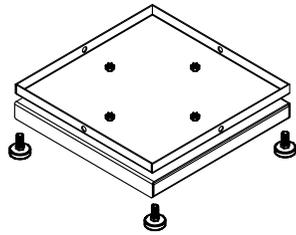


Step2: Lock the 1st piece of U pegboard.

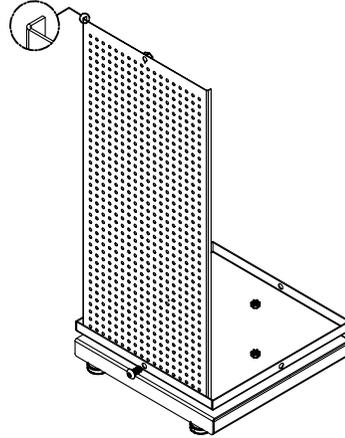


Step3: Assemble another piece of U pegboard at side of the 1st one.

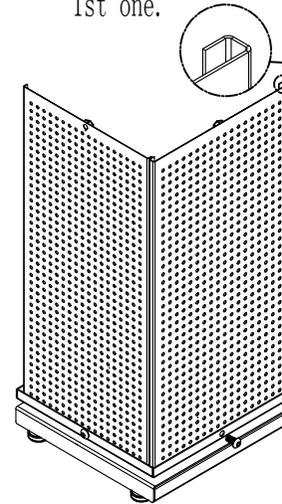


Step4: Assemble the 3rd piece of pegboard same as step2.

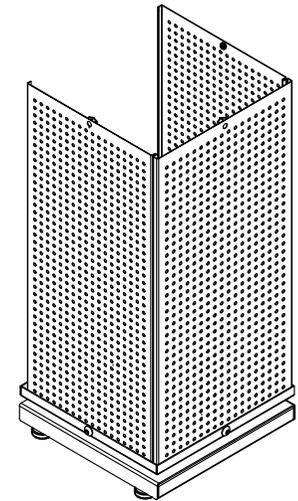

Step5: Assemble the 3th pegboard same as step3

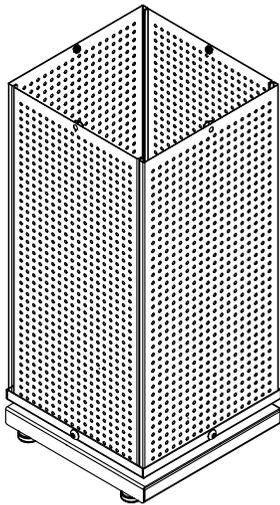

Step6: Lock the top cap

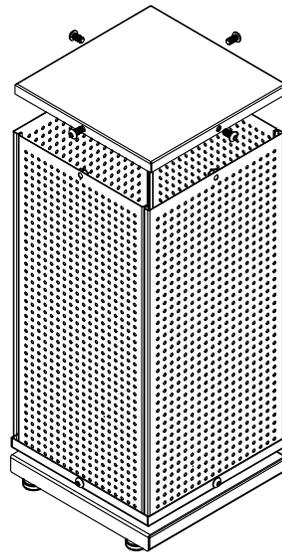

Completed

