


#257SBHTS

# Straight Back Hand Truck With Pneumatic Wheels and Stair Climbers


## ASSEMBLY TIPS

- Read instructions thoroughly before proceeding.
- Tighten all parts by hand. Don't use power tool.
- For your safety, please do not overload.
- For pneumatic wheel: Please check air pressure in tires. Maintain (30) PSI.


### PARTS LIST

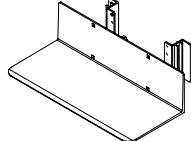

A Toe Plate (x1)

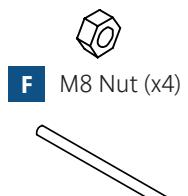

B Axe (x1)

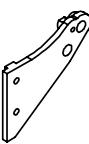

C Wheel Bracket (x2)




F M8 Nut (x4)



G M6 x 45 Screw (x4)



H Pin (x2)

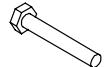


D M8 x 60L Screw (x4)



E Washer (x4)


### STEP 1

- Secure the toe plate to the support brackets using the included screws and nuts. Avoid overtightening.

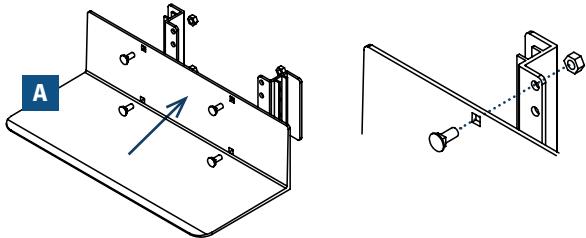


### STEP 2

- First, attach the toe plate and both wheel brackets to the frame using the M8 x 55 screws as shown. Then, insert the axle into the brackets. Ensure both brackets are fully tightened. Lastly, attach the stair climber using the M8 x 40 and M6 x 50 screws as shown above. The stair climber should be locked onto the axle boxes and hand truck frame.

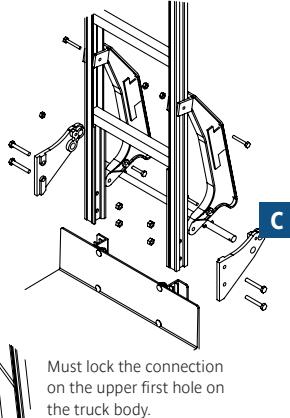

### STEP 3

- Place a washer over the axle, then the first wheel, followed by another washer as shown above. Insert the pin into the axle hole to secure the wheel in place. Repeat for second wheel.

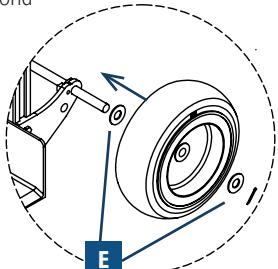

### STEP 4

- Insert the handle and U-shaped handle and secure in place using the included locking screws and nuts as shown above.

