



# Day Dot Label Dispenser Assembly Instructions


#322DAYDISPEC

## Step 1:

Partially fold all creases to make folding the box into place easier during the later steps.


## Step 2:

Lay the unfolded box printed side down on a flat surface. Rotate the box so that the curved edge is away from you and the flat edge side is closer to you.

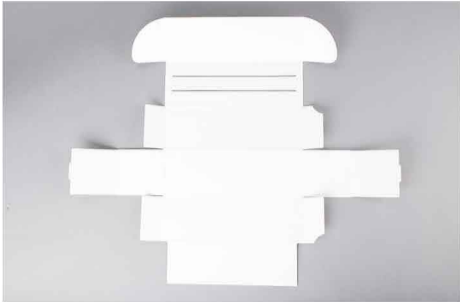


## Step 3:

Fold in the 2 bottom most tabs so they stand straight up.

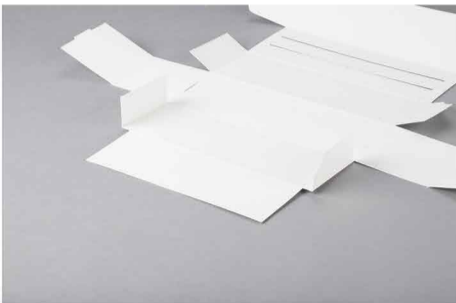

## Step 4:

Fold the large rectangular piece that the 2 side tabs are attached to so that it stands straight up. This is the back side of the box.

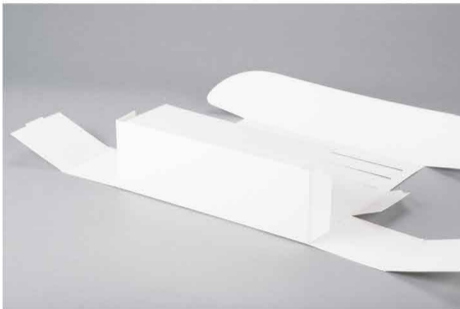

## Step 5:

Do the same thing on the curved side that's away from you. Fold in the side tabs so they stand straight up, and then fold up the piece they are attached to form the front side of the box.



## Step 6:

Fold the side flaps in and down, locking into place by putting the small tab on top of each flap into the slot on the bottom of the box. You now have the basic form of the box.



## Step 7:

Now is the time to place your sticker rolls inside the box, matching up the days of the week on the stickers with the correct slots labeled on the front. Once they are in, feed the roll through its corresponding slot with the sticker face down and the blank side of the roll face up.




## Step 8:

Fold the back flap down to sit up above the rolls sitting in the box. This will help keep the rolls in place.



## Step 9:

Now fold the curved side over to completely cover your box. The days of the week should now be showing on the front and top of the box.

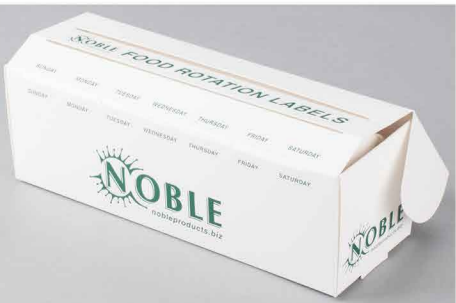

## Step 10:

Next fold the flap that has the day of the week color key down to form the back of the box. As you do that, tuck the side flaps into the open slots on the back to secure the box in place.

