


# ASSEMBLY INSTRUCTIONS

## ITEM NO.


164WAITRS3WL  
164WAITRS3BK.




### PART LIST:

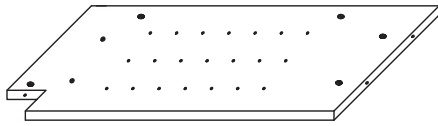


(1)/1PC  
Left Side Board  
SIZE: 31in x 22in

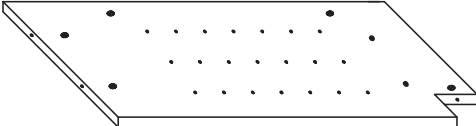


(2)/1PC  
Right Side Board  
SIZE: 31in x 22in

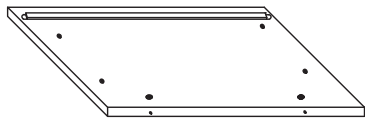


(3)/1PC  
Top Board  
SIZE: 36in x 23in




(4)/1PC  
Kick Board  
SIZE: 36in x 3in

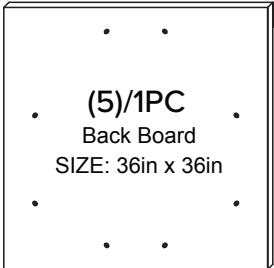

(5)/1PC  
Back Board  
SIZE: 36in x 36in

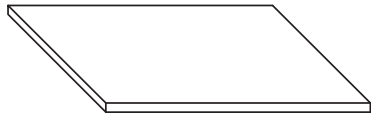


(6)/1PC  
Shelf  
SIZE: 35in x 22in

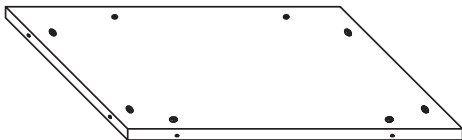


(7)/1PC  
Bottom Board  
SIZE: 35in x 22in




(8)/1PC  
Drawer Bottom  
SIZE: 33in x 12in

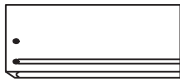


(9)/1PC  
Right Drawer Side  
SIZE: 12in x 4in

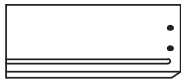

(10)/1PC  
Left Drawer Side  
SIZE: 12in x 4in

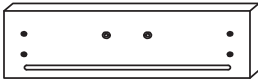

(11)/1PC  
Front Drawer Side  
SIZE: 36in x 4in

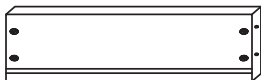

(12)/1PC  
Back Drawer Side  
SIZE: 32in x 4in

### HARDWARE LIST:



(A)  
Cam Lock  
Screw (46PCS)



(B)  
Small Cam  
Lock (4PCS)



(C)  
Screws  
(12PCS)



(D)  
Shelf Pin  
(46PCS)




(E)  
Machine  
Screw (2PCS)



(F)  
Cam Lock  
(26PCS)



(G)  
Drawer  
Track (1PC)

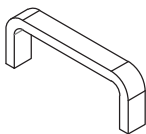

(H)  
Handle  
(1PC)

### TOOLS REQUIRED:




Phillip's Head  
Screwdriver  
(not included)

## STEP 1.

Screw cam lock screws (Ax16) onto side boards (1 and 2), top board (3), and back board (5).

- Attach tracks onto predrilled holes on side 1 and 2 using the pilot holes to guide you.

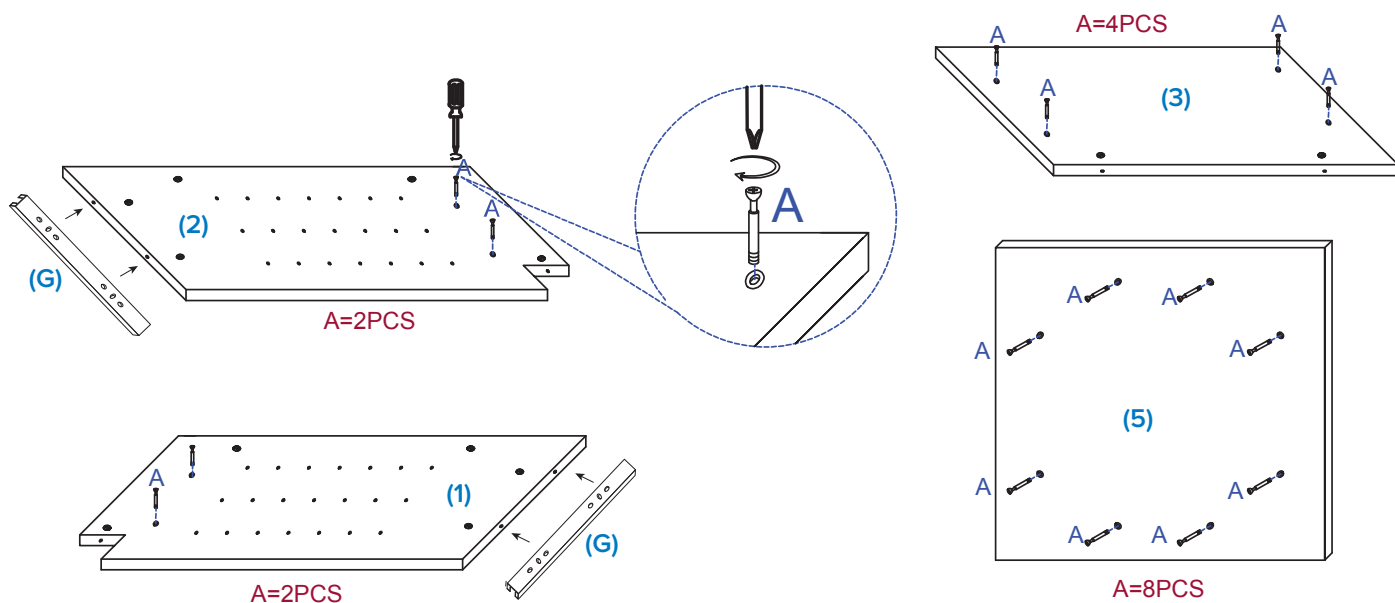


## STEP 2.

Insert cam lock (Fx18) into bottom board (7), top board (3), and side boards (1 and 2).



Arrow on cam lock should face outer edge where screw will be inserted.

- Insert cam lock screws (Ax2) into bottom board (7).

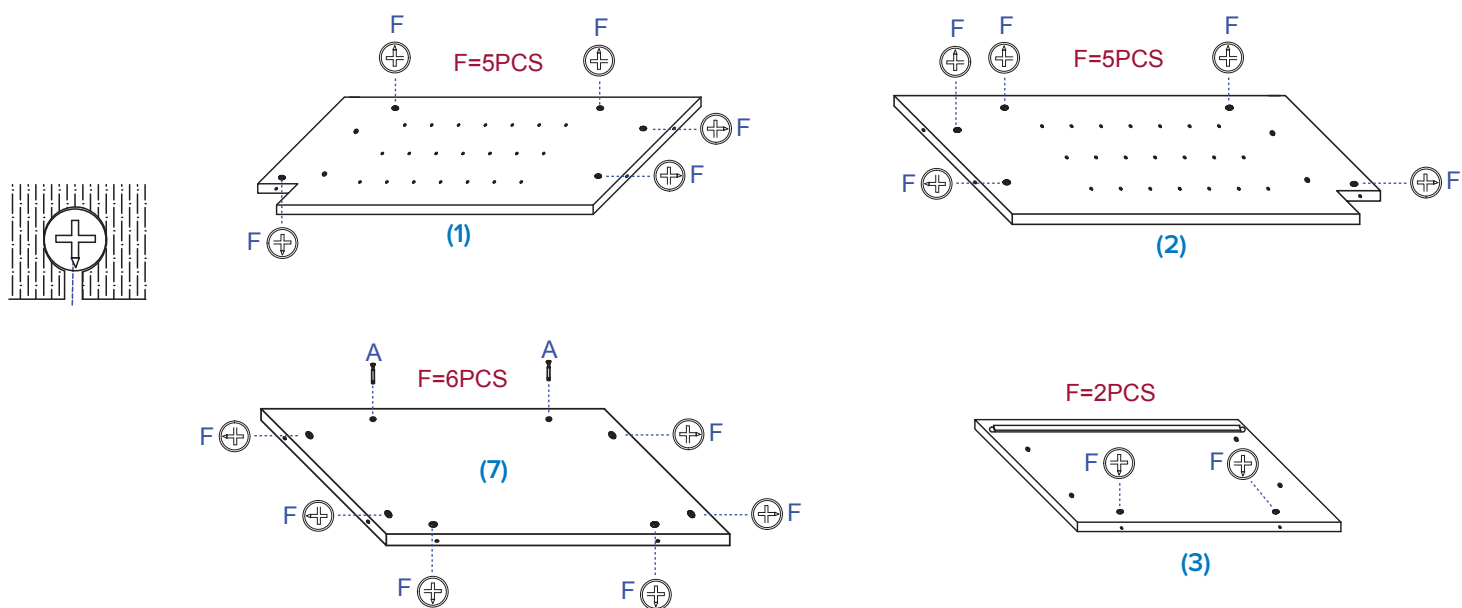


### STEP 3.

1. Lay top board (3) on ground. Add sideboards (1 and 2), and line up cam lock screw (Ax4) and cam lock (Fx4). Tighten cam lock (Fx4) with screwdriver once boards are in place.
2. Align bottom board (7) with remaining cam lock screws (A). Tighten cam locks with screwdriver.

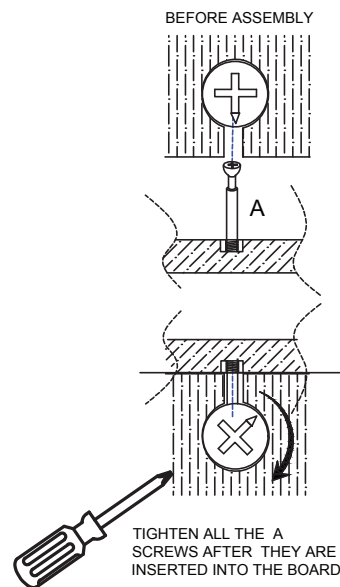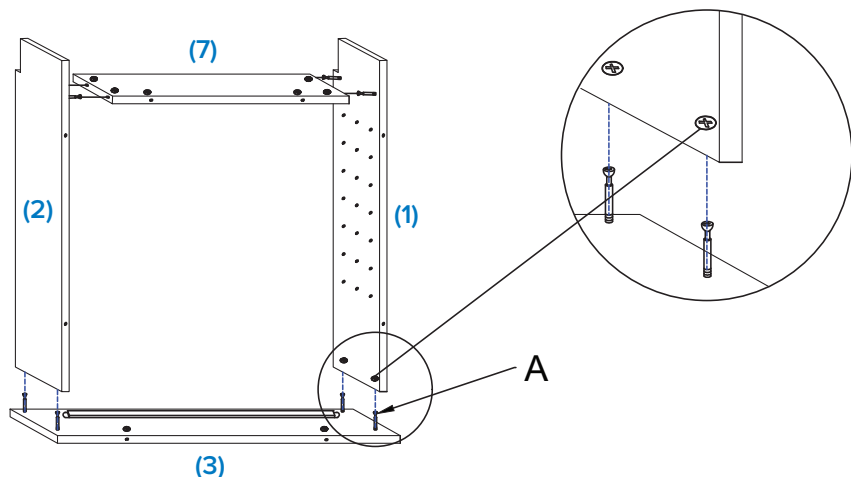


### STEP 4.

1. Rotate the rectangle made in step 3 so that right side (1) is touching the ground. Then place back board (5) onto the back side of the rectangular piece. Align the large cam lock screws (Ax8) in the corresponding holes. Tighten the cam lock (Fx5) with screwdriver.
2. Place small cam lock screws (Bx2) in the predrilled holes on the underside of bottom board (7).

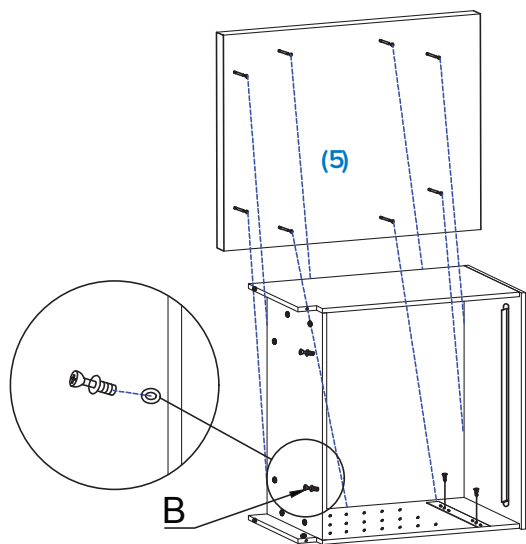


### STEP 5.

Align small cam lock screws (Bx2) on bottom board (7) with holes on kick board (4) and press kickboard onto screws.

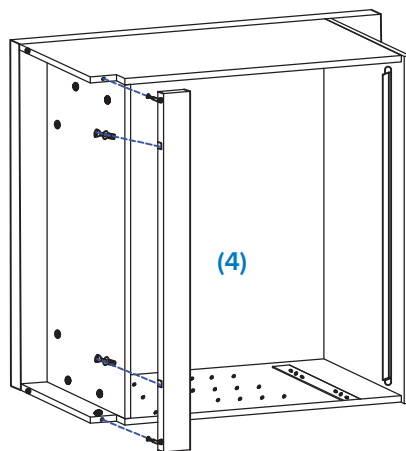

## STEP 6.


1. Place cam locks (Fx4) into back drawer (12) and place cam lock screws into front drawer (11).
2. Place cam locks (Fx2) and cam lock screws into right and left drawer sides (9 and 10).

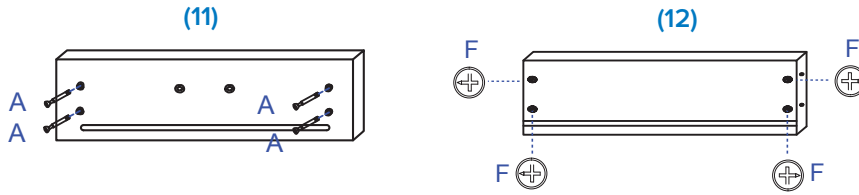

## STEP 7.

Align all 3 panels of outside of drawer (10, 12 and 9). Tighten cam locks.

- a. Slide bottom drawer (8) into notches.
- b. Put front drawer side (11) on front and tighten cam locks.
- c. Attach handle (G) to predrilled holes on the front of board (11) with (Cx2).
- d. Attach tracks to the outside of right and left drawer sides (9 and 10).
- e. Insert drawer into tracks on assembled waitress station.

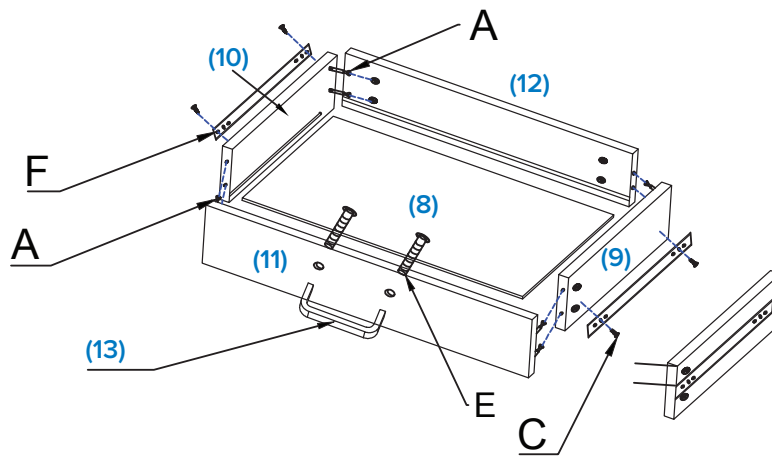

## STEP 8.

1. Insert shelf pins (Dx6) on each side of the waitress station at desired height. Place the shelf (6) on pins.
2. Adjust track to ensure tight fit if needed.

