



# UCMT010 / UCMT012 Two-Shelf Heavy-Duty Metal Cart Assembly Instructions

## PARTS KEY:

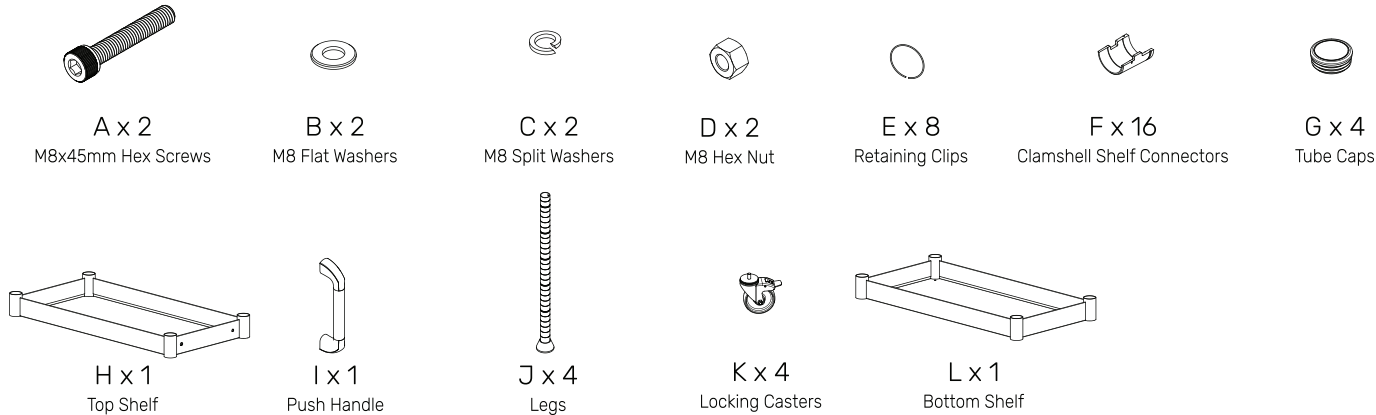


**IMPORTANT:** Shelves are reversible. Face the recessed side up for use as a tub shelf. Face the flat side up for use as a flat shelf.

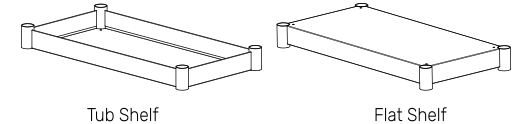


## ASSEMBLY INSTRUCTIONS:


- 1** Remove the plastic corner panels from the Push Handle (I). Attach the Push Handle (I) to the Top Shelf (H) using two Flat Washers (B), two Split Washers (C), two Hex Nuts (D), and two Hex Screws (A) as shown. Once assembled, re-attach the plastic corner panels.

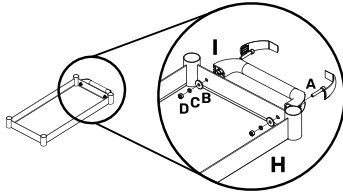


- 2** Attach each Caster (K) to a Leg (J).

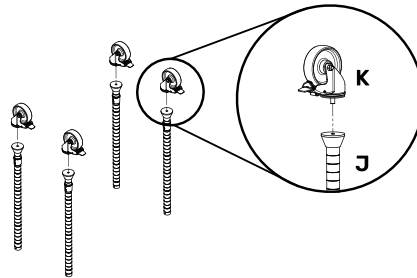


- 3** Determine the desired height of the bottom shelf. Attach two Clamshell Shelf Connectors (F) to each Leg (J), making sure the ridges inside each Connector line up with the grooves on each leg.

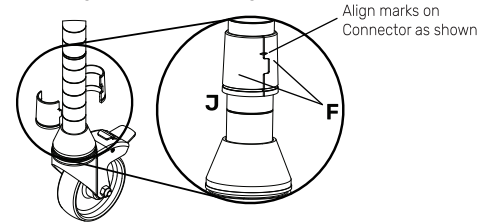


- 4** Lock each Clamshell Shelf Connector (F) in place with a Retaining Clip (E).

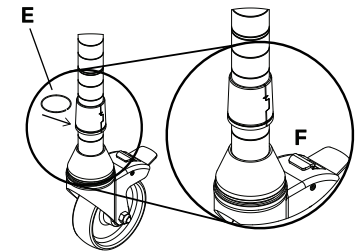


- 5** Place a Bottom Shelf (L) on its side. Insert a Leg (J) into the hole on each corner until each Clamshell Shelf Connector (F) is fully inserted.

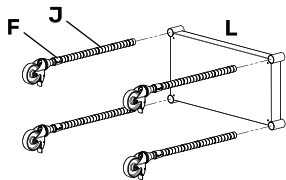

- 6** Set the cart assembly upright on the floor. **TIP:** Lock the casters to keep the cart assembly stable while attaching the bottom shelf.

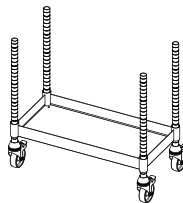

- 7** To install the top shelf, repeat steps 3, 4, and 5.

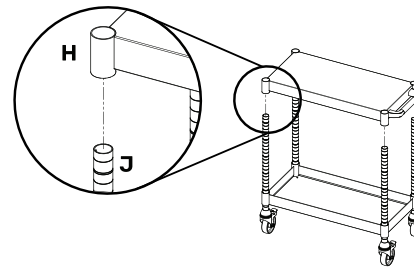

- 8** Insert the Tube Caps (G) into the top of the Legs (J).

