


CHANNEL®

ASSEMBLY INSTRUCTIONS

KNOCK DOWN BUN PAN RACKS

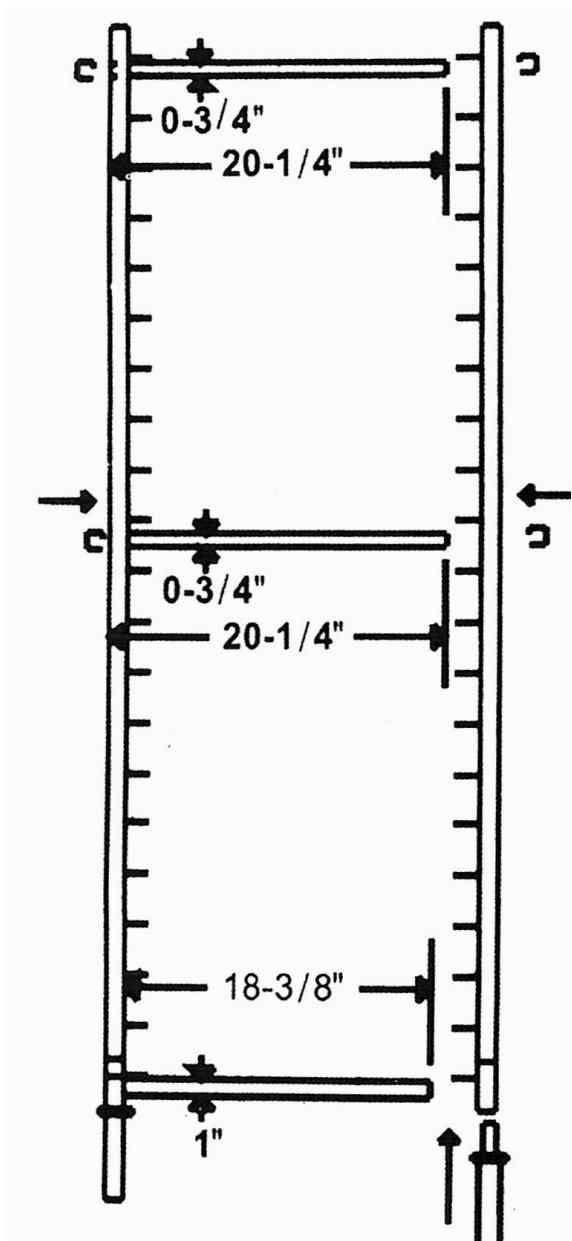

PARTS LIST

- 4 - CROSSBARS (3/4")
- 2 - CROSSBARS (1")
- 4 - CASTERS
- 2 - SIDE FRAMES
- 8 - CHANNELBRACKETS
- 4 - LARGE HEX HEADBOLTS
- 8 - SMALL HEX HEADBOLTS

TOOLS NEEDED:

- WRENCH OR SOCKET SET

At the top of the rack (plastic cap on edge) take the 3/4" crossbar and insert into the hole. Tighten down with small hex head bolt and the enclosed reinforcement channel piece.

Follow the same instructions for the middle crossbar.

Insert the casters into the opening at the bottom of the frame making sure to align the hole in frame with the hole in the caster stem. Pass large bolt through frame and caster stem holes. Place the 1" crossbar on the bolt as it passes through frame and tighten.



TOP VIEW