



ASSEMBLY INSTRUCTIONS

6600B SERIES | BACKREST FOR THE ELEPHANT Z-STOOL


STOOL PARTS

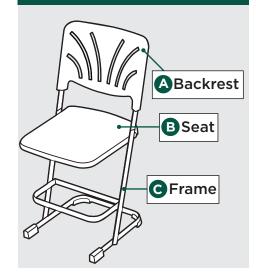

TOOLS NEEDED




INCLUDED HARDWARE

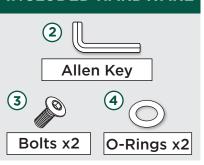


BACKREST INSTALLATION

Carefully remove Tube Closures Contact that are located on top of each side Frame Cofthe Stool. This should be done by gently inserting a thin Screwdriver Ounderneath the Tube Closure and carefully prying upwards.

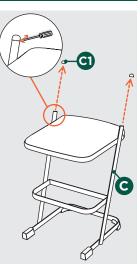


Remove Backrest A from Carton and place Rubber O-Rings 4 over inner Backrest Tubes A1.

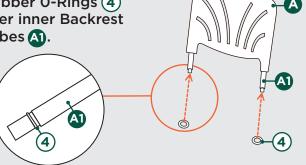

Begin installation by aligning Metal Tubes that protrude from the Backrest (A) with the opening of the Stool Frames (C).

Simultaneously insert both ends of the Backrest Tubes into the Stool opening. Gently push until Backrest Tubes are flush with Stool.

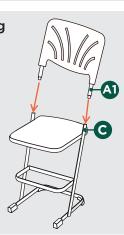

Insert the Bolts 3 into the holes that are located just below the Seat B on each side of the Stool and tighten them using the provided Allen Key 2.

BACKREST REMOVAL

Remove Bolts 3 from Frame C with provided Allen key 2.

The Backrests A are built to fit very tightly into the Stool Frame and some resistance may be encountered while attempting to remove. For easiest removal do not pull from plastic part of Backrest but rather place hands at the bottom of the Tubes Alon each side and pull while wiggling the Tubes upwards.



Double check all Bolts to be tightened securely before use. Check all Bolts periodically. Failure to completely tighten the Bolts may result in tipping and possible injury!

Congratulations, your ELEPHANT Z-STOOL WITH BACKREST is now assembled and ready to be used!

Dear Customer, Thank you for your purchase. Although extreme care goes into manufacturing & packaging of this product, mistakes are possible. If you encounter any missing parts or difficulty in assembly, please contact our customer service Toll Free at **1-800-261-4112** or **info@nationalpublicseating.com** for courteous & immediate resolution to your problem.