

Adirondack Chair


ASSEMBLY INSTRUCTIONS




LANCASTER™
TABLE & SEATING

PARTS


A Seatback (1)

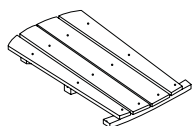

B Seat Base (1)

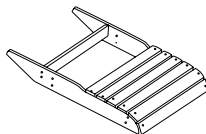

C Left Armrest (1)

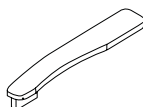


D Right Armrest (1)




E Vertical Backrest Supports (2)




F1 Left Front Leg (1)




F2 Right Front Leg (1)



G Cross Beam (1)

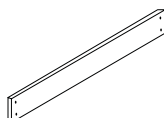

H Rear Seat Slat (1)

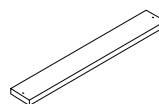

NOTES

- Before assembly, make sure all components are free from defects.
- Do not assemble if anything is broken or damaged.
- A screwdriver and allen wrench are required.

HARDWARE

AA Screws (6)



BB M6-60 Bolts (2)



CC M6-70 Bolts (2)



DD M6-60 Bolts (6)



EE M6-45 Bolts (4)



Allen Wrench (1)




Screwdriver (1)




STEP 1

Lay the seat base (B) on a flat, clean surface with the slats facing up. Attach rear seat slat (H) to the seat base (B) using 2 screws (AA).

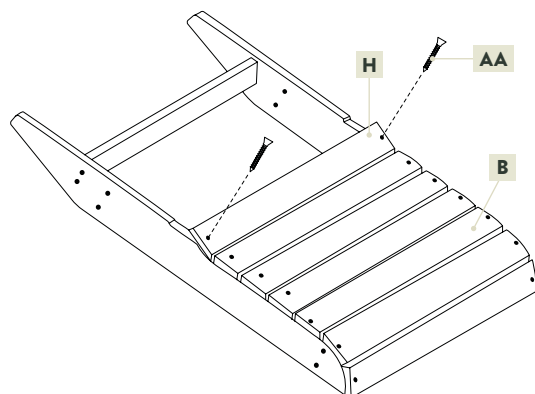

STEP 2

Attach the front legs (F1, F2) onto the seat base (B) using 4 bolts with nuts (DD). Align with predrilled holes facing out. Ensure all bolts are in before fully tightening. Ensure all nuts are flush with the inside of the seat base (B) as shown.

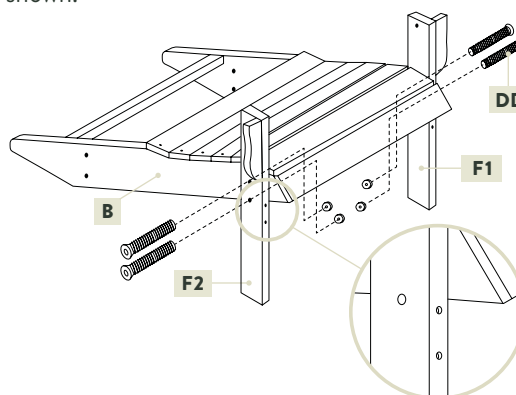

Adirondack Chair


ASSEMBLY INSTRUCTIONS



LANCASTER™
TABLE & SEATING


STEP 3

Attach the vertical backrest supports (E) to the back of seat base (B). Back rest supports should be attached on the inside with 4 bolts and nuts (EE). Ensure all bolts are in before fully tightening. Ensure all nuts are flush with the inside of the vertical backrest supports (E) as shown.

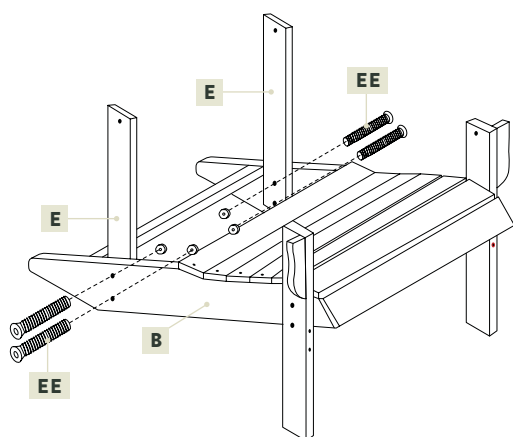


STEP 4

Attach the armrests (C, D) to the front of the legs (F1, F2) using 2 bolts and nuts (DD). Armrests should be on the outside of the legs and vertical backrest supports. Bolts will be attached from the inside with the nut facing the outside as shown.

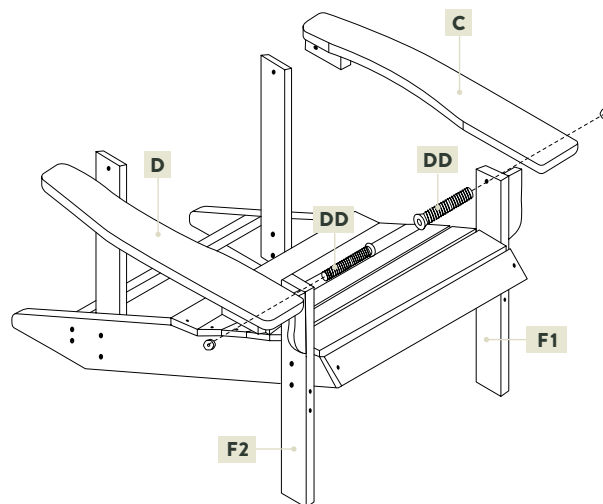

STEP 5

Attach the seatback (A) to the seat base (B) using 2 bolts (BB).

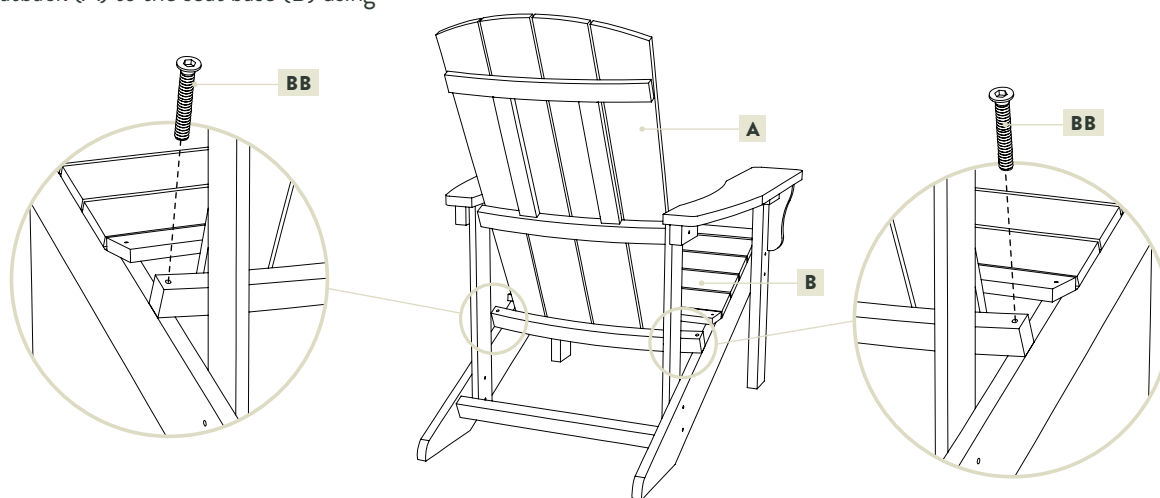

Adirondack Chair


ASSEMBLY INSTRUCTIONS



LANCASTER™
TABLE & SEATING


STEP 6

Align the armrests (C, D) and vertical backrest supports (E) and attach to the seatback (A) with the bolt (CC) coming in from the outside as shown.

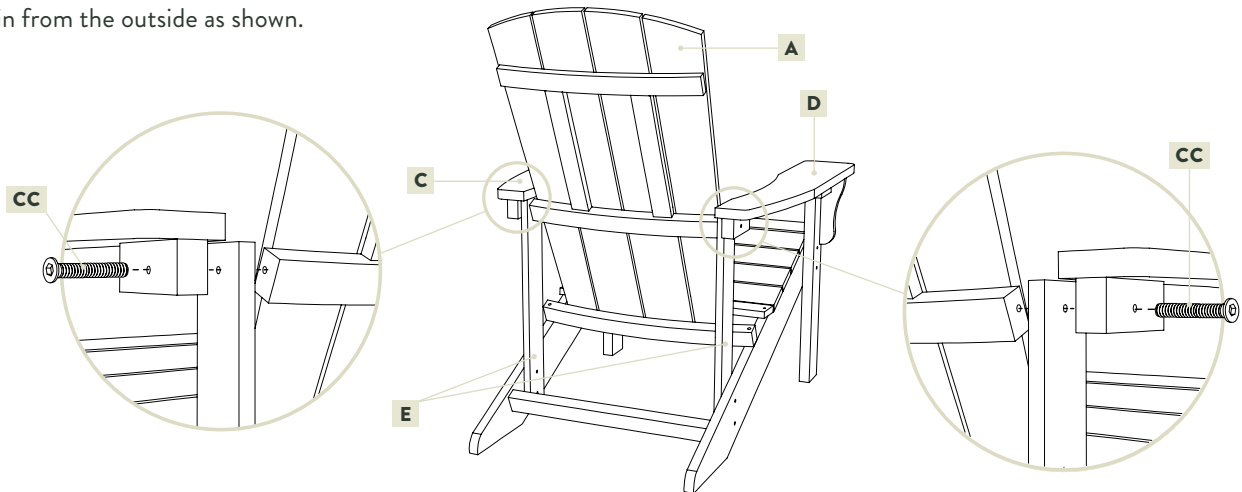

STEP 7

Attach the cross beam (G) to the front of the legs (F1, F2) using 4 screws (AA).

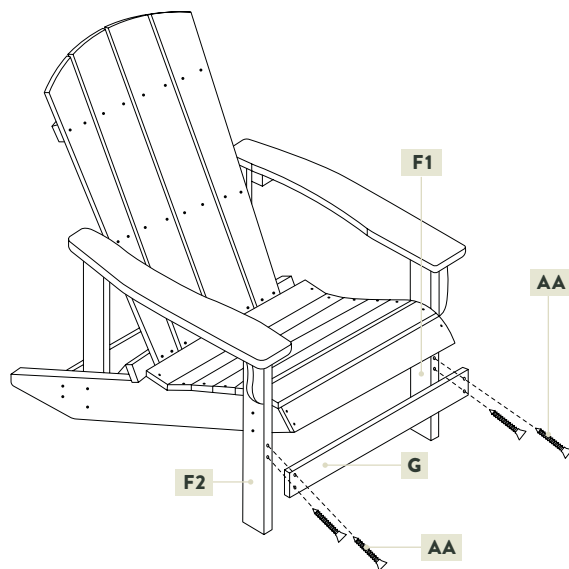

STEP 8

Ensure all screws, nuts and bolts are fully tightened before use. Assembly complete.

