


## MONTEREY SECTIONAL ARMLESS CHAIR (MT10)

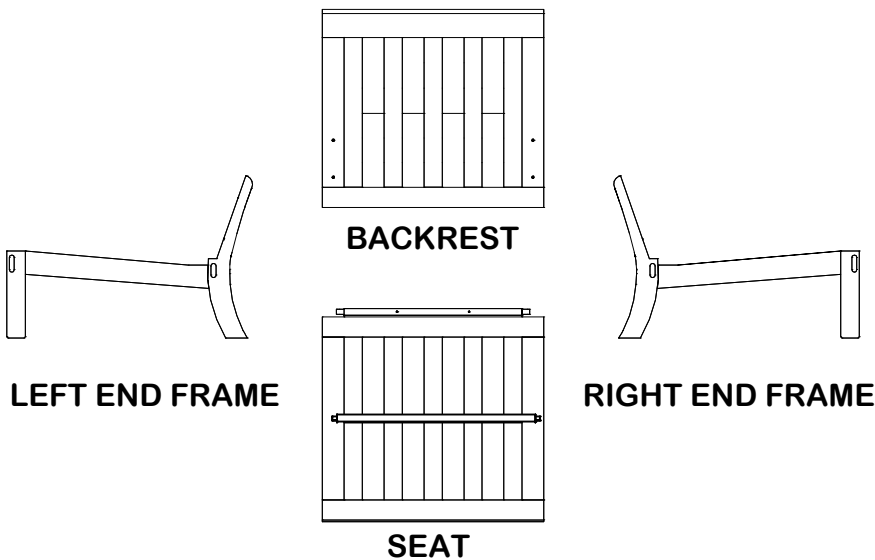

### Hardware Pack:

- Dowel A - 27 mm length (4 + 1 spare)
- Dowel B - 62 mm length (4 + 1 spare)
- Stainless Steel Threaded Bolts (4 pcs)
- Stainless Steel Screws (8 pcs)
- 2 Bottles of Wood Glue
- Stick for Glue Application
- Wooden Block
- Sandpaper
- Allen Wrench
- 2 Stainless Steel Connectors

### Required Tools :


- Hammer
- Rubber Hammer
- Screwdriver
- Enclosed Allen Wrench

### Step 1:

Unpack and place components on a clean, soft, flat surface to avoid scratching or marring the surface during assembly. Identify and match the components and hardware pack.


### Step 2:

Before assembling the components in each of the steps below, please apply a thin coat of wood glue on each tenon (male) and the surface area around the tenon. Take care not to apply glue to exposed wood surface. Wipe off excess glue with a damp cloth.

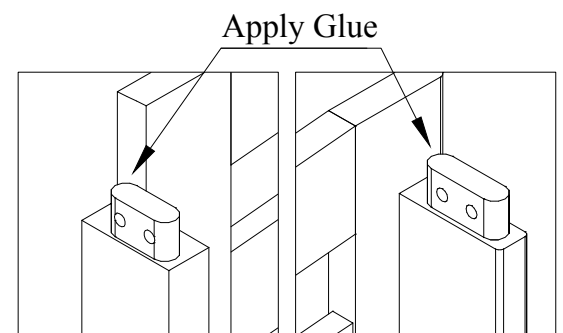

### Step 3:

- Gently insert the tenons of seat into the mortises of the corresponding end frame.
- Assemble the components so that matching letters are aligned (i.e. label A with corresponding label A).
- Insert the tenons of the connected pieces into the mortises of the other end frame.
- Use a rubber hammer to drive the mortises and tenons together until all joints fit snugly

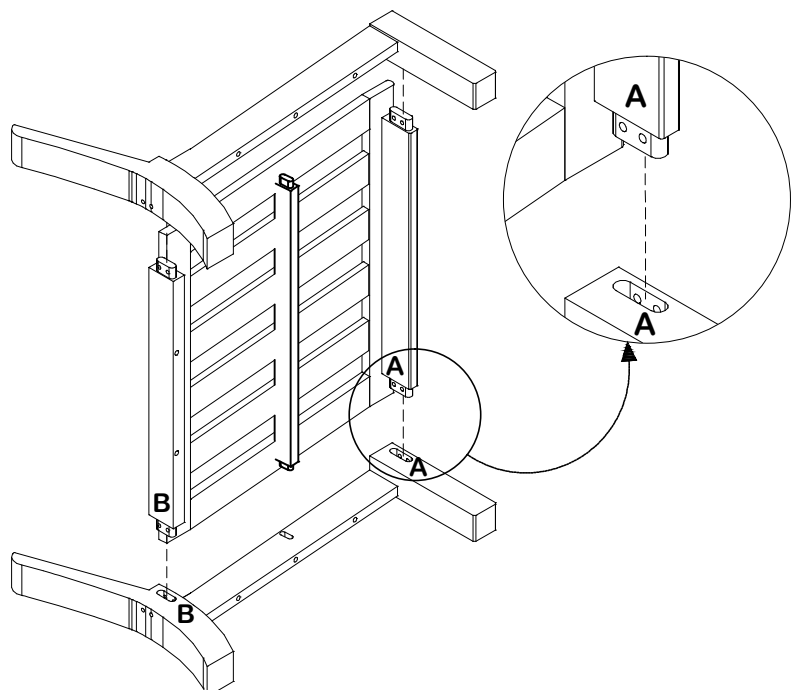




# Three Birds *Casual*

## MONTEREY SECTIONAL ARMLESS CHAIR (MT10)


### Step 4:

- Make sure all joints are tight before inserting the dowels.
- Locate dowels A and B from the hardware pack and match them to components A and B of the chair.
- Apply glue around the tapered ends of the dowels and insert using a metal-head hammer.
- Drive the dowels into the tenons until they are flush with the wood surface, taking care not to mar or dent the surface (you may consider placing the enclosed wooden block between the dowel head and hammer to prevent marring the wood).
- If dowels still protrude after hammering simply saw off the ends and use the enclosed sandpaper to smooth the top.
- Wipe off excess glue with a damp cloth.

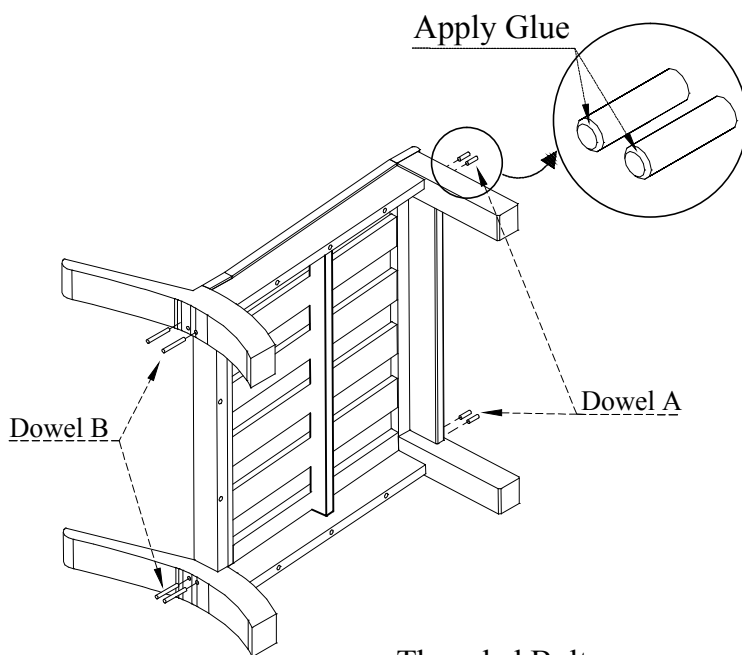


### Step 5:

- Attach the backrest onto the backleg.
- Insert the threaded bolts and tighten with enclosed allen wrench.

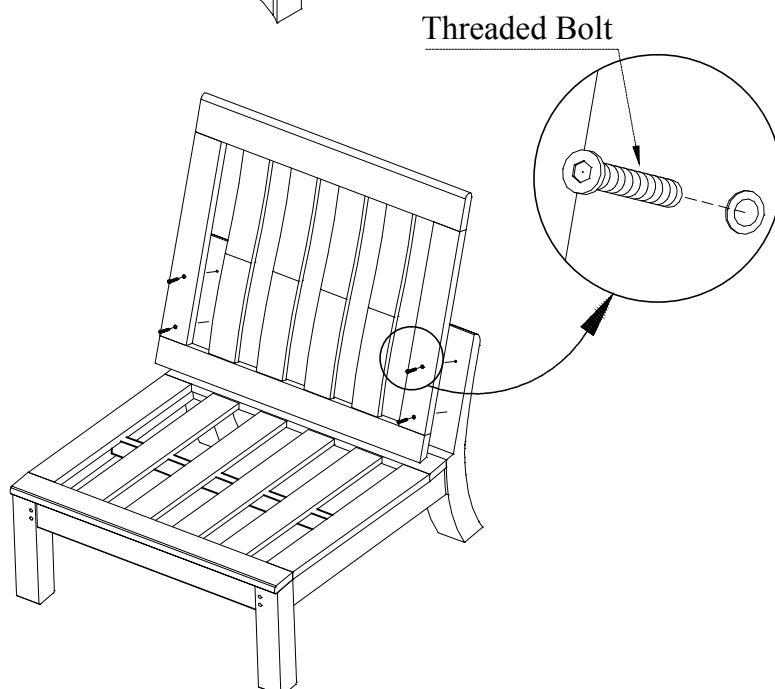

### Step 6:

Using a proper screwdriver, attach the backrest to the seat and the seat to the end frames with the enclosed screws.

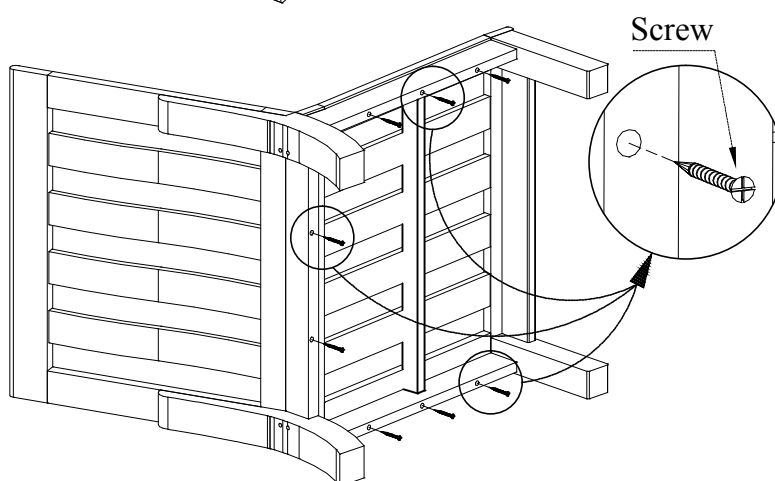

71 E 400 S Albion, IN 46701

Tel: (260) 244-4334 Fax: (260) 244-4634

Website: [www.three-birds.com](http://www.three-birds.com) Email: [info@three-birds.com](mailto:info@three-birds.com)

Page 2 of 2