



1

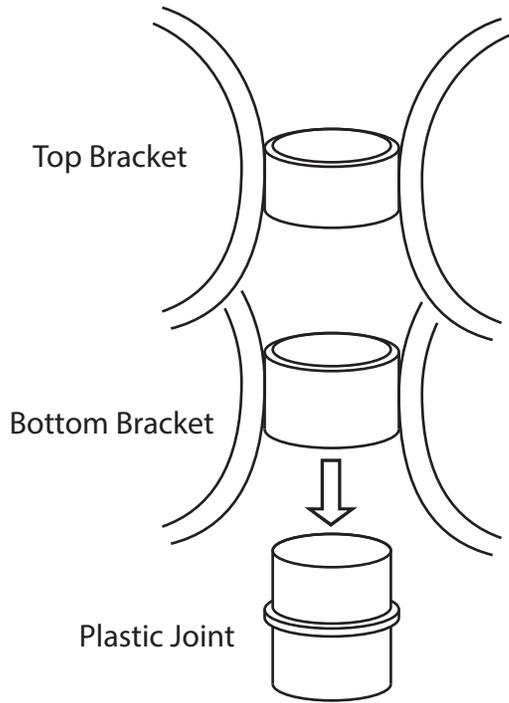


1. Pull Out the Plastic Joint From the Bottom Bracket

2

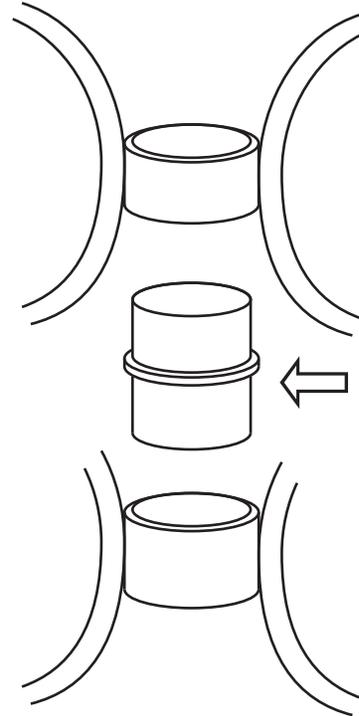

2. Place the Plastic Joint Between the Top and Bottom Brackets

3

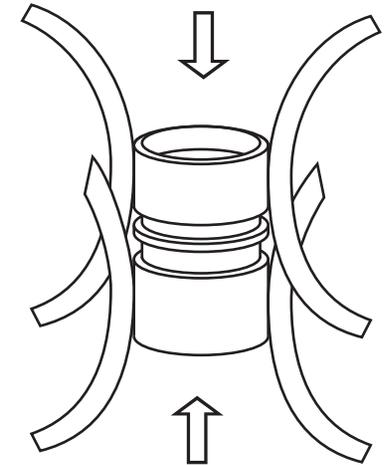

3. Sandwich the Plastic Joint Between the Top and Bottom Brackets Firmly