

Stackable Drawer


Assembly Instructions

① (1pc)	② (1pc)	③ (4pcs)	④ (2pcs)	⑤ (3pcs)
⑥ (3pcs)	⑦ (3pc)	⑧ M6*12 (12pcs)	⑨ Nut (12pcs)	⑩ Screws (4pcs)

Assembly Instructions




Note: Set the tabletop upside down on a surface that won't scratch it before assembling the drawer.

1. Attach the Z bracket to the top of the frame with screws. Make sure that the top of the bracket goes outward and the bracket extends a bit further back than the rear of the frame. (Fig. 1)

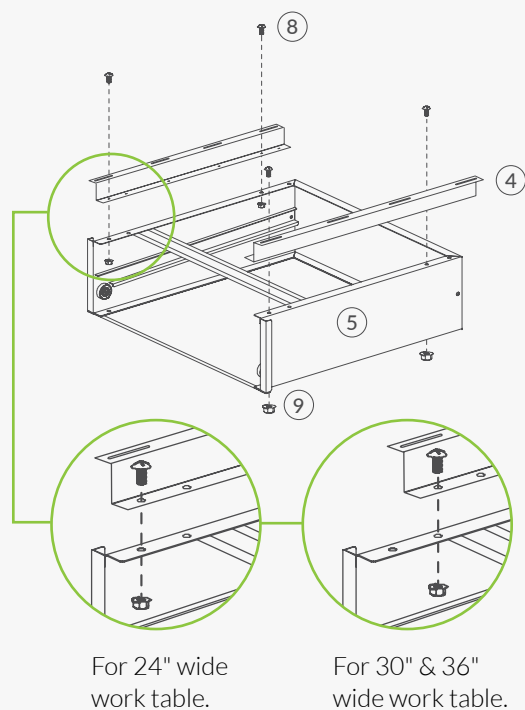


(Fig. 1)

2. Drill holes in the hat channels and attach the drawer to the table with self-tapping sheet metal screws. Try this once with the drawer in the frame to make sure the door will clear the lip of the table. If it doesn't, you'll need to shim with some nuts between the hat channel and the brackets. Flip the drawer over and align it where you want to mount it. (Fig. 2)
3. Line up the stackable drawers and use the provided M6*12 screws and nuts to secure the drawers together. (Fig. 3)
4. Install the undershelf or cross bracing onto the four legs and secure the set screws. (With an undershelf, make sure to measure the height of the drawers so the undershelf can clear the drawers), (Fig. 4)

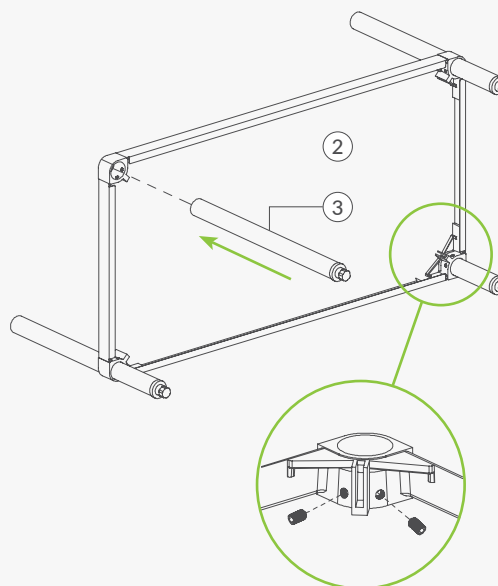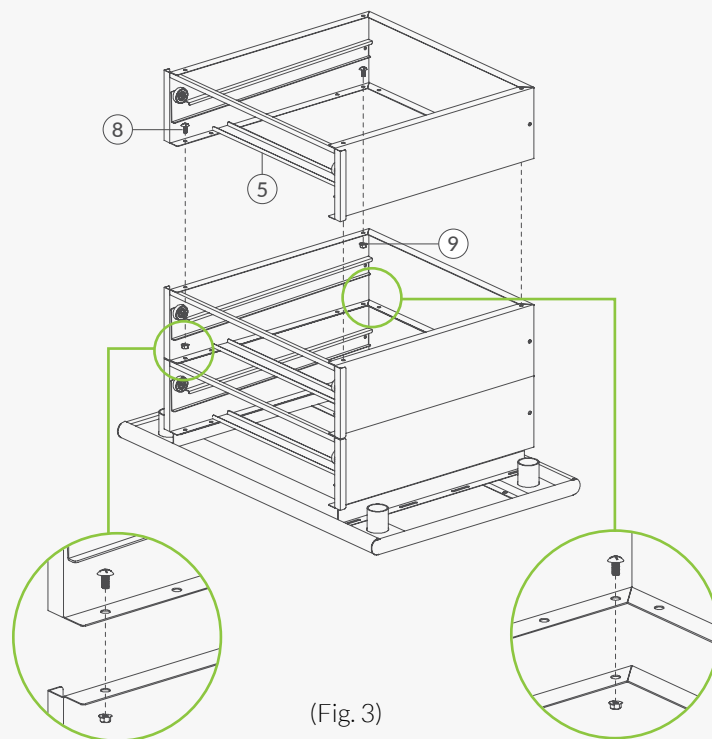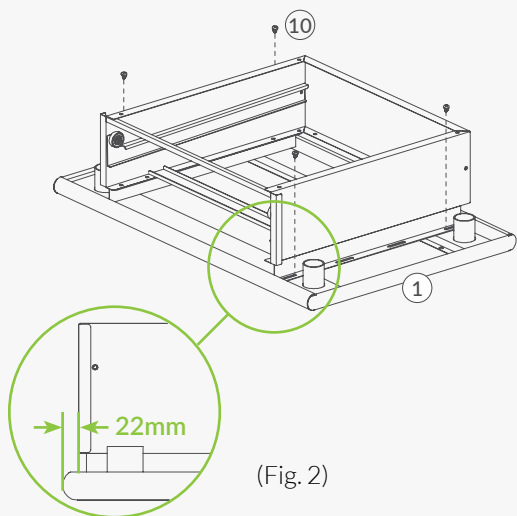


5. Reattach the legs to the tabletop and secure set screws. (Fig. 5)
6. Place the pan inside the drawer and insert the drawer. (Fig. 6)

Final Assembly. (Fig. 7)

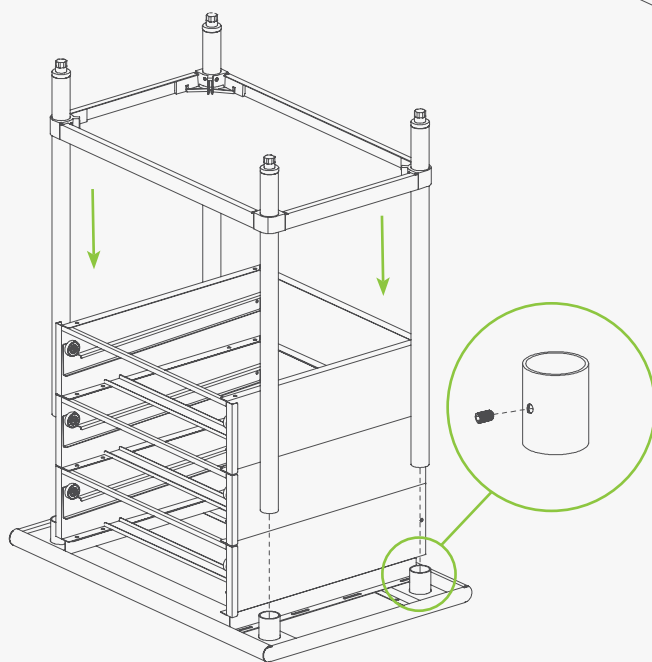

(Fig. 5)

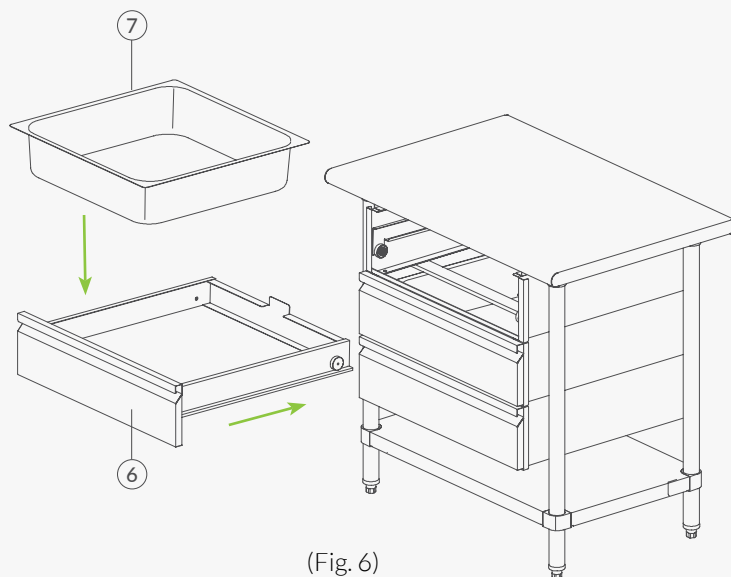






(Fig. 6)



(Fig. 7)

Cajón Apilable


Guía de Instalación

① (1pc)	② (1pc)	③ (4pcs)	④ (2pcs)	⑤ (3pcs)
				
⑥ (3pcs)	⑦ (3pc)	⑧ M6*12 (12pcs)	⑨ Nut (12pcs)	⑩ Screws (4pcs)
				

Instalación Del Cajón

Nota: Coloque la superficie del cajón boca abajo sobre una superficie que no la raye antes de ensamblar el cajón.

1. Fije el soporte en Z en la parte superior del marco con tornillos. Asegúrese de que la parte superior del soporte apunte hacia afuera y que el soporte se extienda un poco más allá de la parte trasera del marco. (Fig. 1)



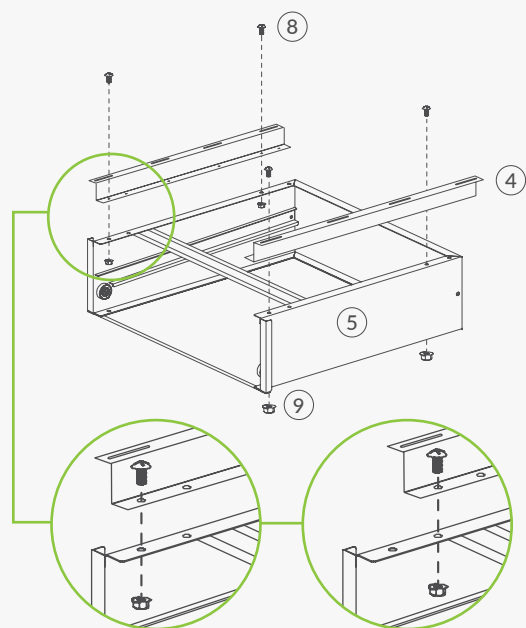


Para mesa de trabajo
de 24" de ancho.

Para mesa de trabajo
de 30" y 36" de ancho.


(Fig. 1)

2. Perfore orificios en los canales tipo sombrero y fije el cajón a la mesa con tornillos autorrascantes para lámina metálica. Pruebe esto una vez con el cajón colgado en el marco para asegurarse de que la puerta pase por encima del borde de la mesa. Si no lo hace, tendrá que usar algunas tuercas para calzarlo entre el canal tipo sombrero y los soportes. Voltee el cajón y alinéelo en el lugar donde desea montarlo. (Fig. 2)
3. Alinee los cajones apilables y utilice los tornillos y tuercas M6*12 provistos para fijar los cajones entre sí. (Fig. 3)
4. Instale el entrepaño inferior o los refuerzos cruzados en las cuatro patas y asegure con los tornillos de fijación. (Si se utiliza un entrepaño inferior, asegúrese de medir la altura de los cajones para que el entrepaño pueda pasar por encima de ellos), (Fig. 4)

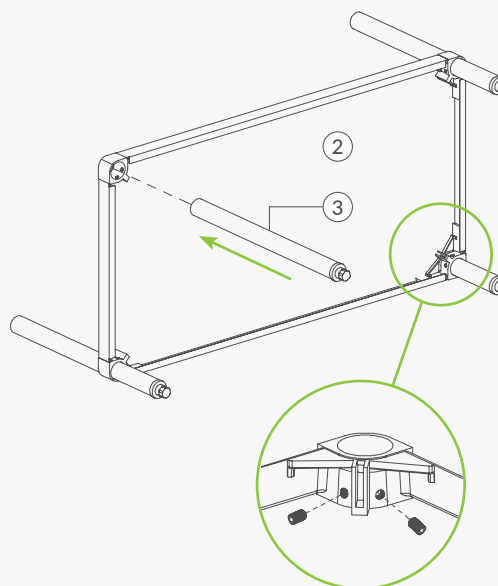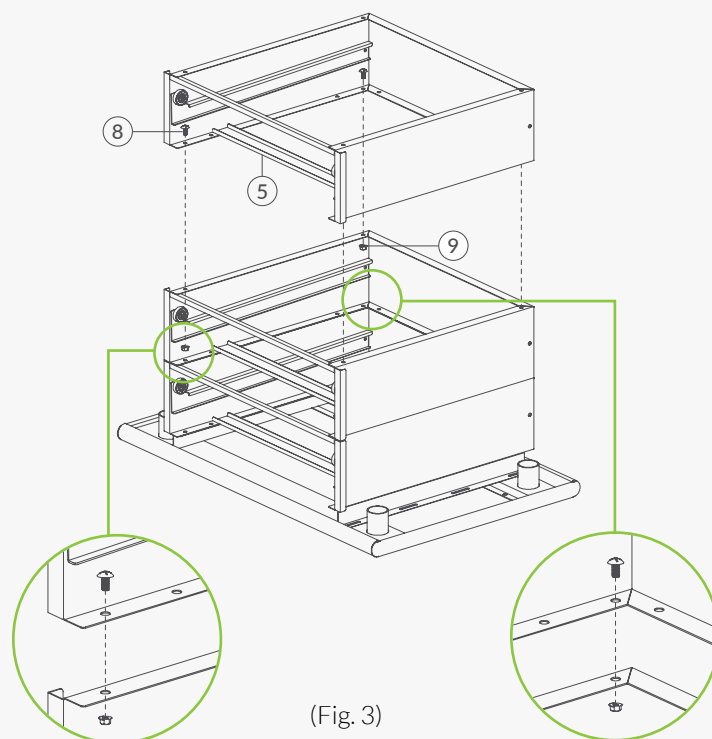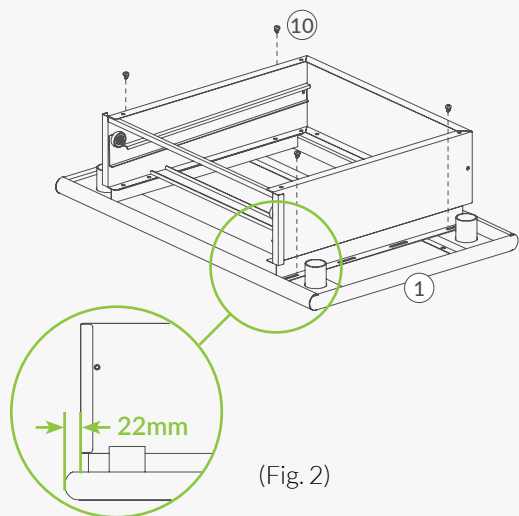


5. Vuelva a colocar las patas en la superficie de la mesa y asegúrelas con los tornillos de fijación. (Fig. 5)
6. Coloque la bandeja dentro del cajón e inserte el cajón en el cajón. (Fig. 6)

Ensamblaje final. (Fig. 7)

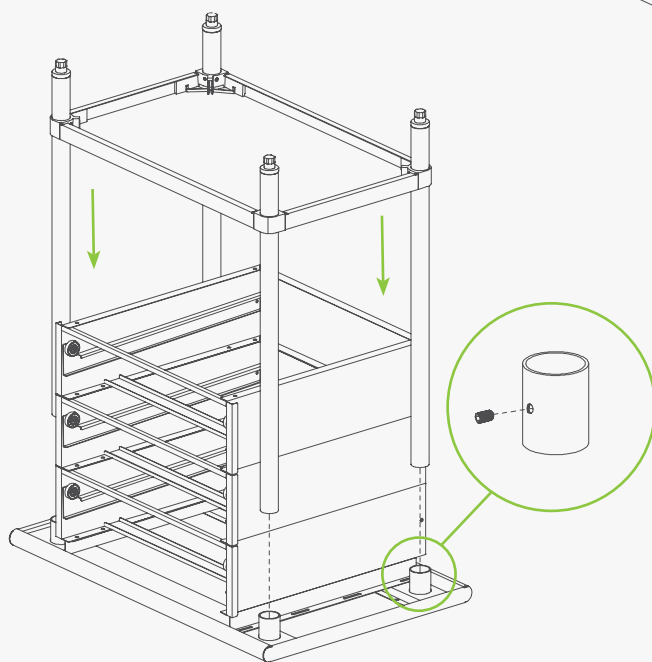

(Fig. 5)

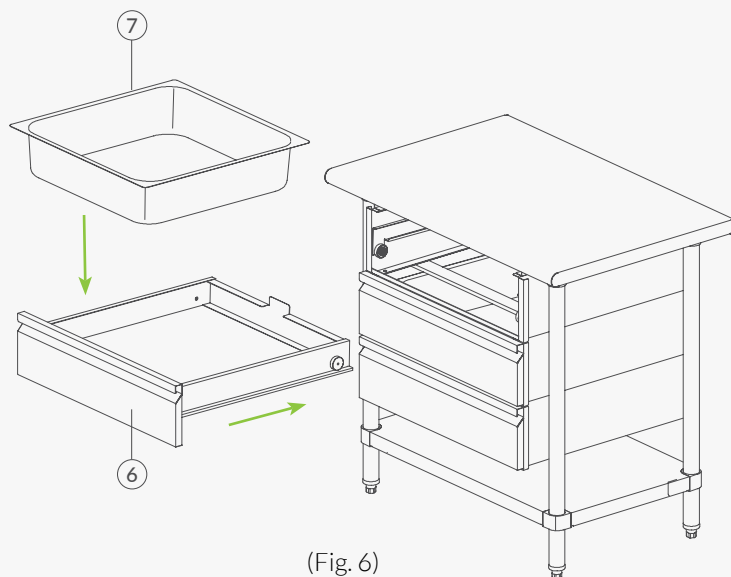

(Fig. 6)



(Fig. 7)