

## BAR GUARD INSTALLATION INSTRUCTIONS

1. Adhere (1) rubber pad to the bottom of the base plate in each corner to prevent the partition from sliding around when in use as shown in Figure 1.
2. Using the provided 5/32" Allen Wrench, mount the (4) "L" brackets to the top of the base plate with the shorter 5/16" screws. Be sure to note there are (2) different "L" brackets included. (2) of the brackets are using through holes on both arms, and the other (2) brackets will instead have a threaded hole on the longer arm. The "L" brackets should be oriented facing back-to-back with the longer arm of the brackets sticking upwards. The threaded brackets should be facing the same edge as shown in Figure 2.

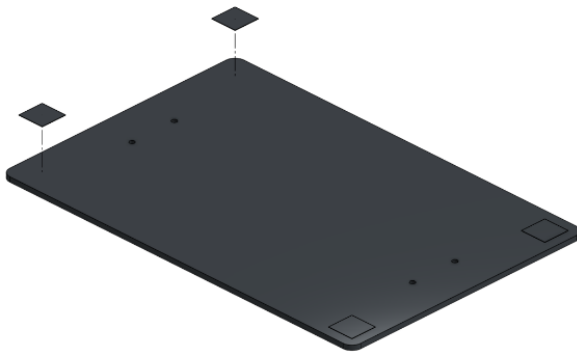


Figure 1

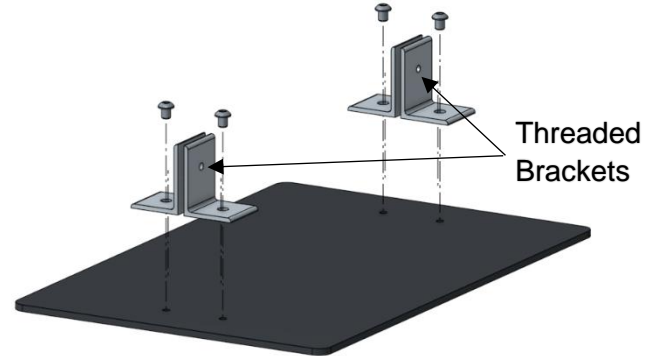


Figure 2

3. Align the holes of the polycarbonate partition with the upper holes in the "L" bracket. It may help to use a soft rubber mallet to help align all the holes.
4. Using the provided 5/32" Allen Wrench, mount the polycarbonate partition to the "L" brackets using the longer 1/2" screws as shown in Figure 3. Make sure the screws are going into the "L" brackets with the through hole side first, then through the partition, and finally into the threaded "L" bracket to fasten everything together. Your assembly is now complete.

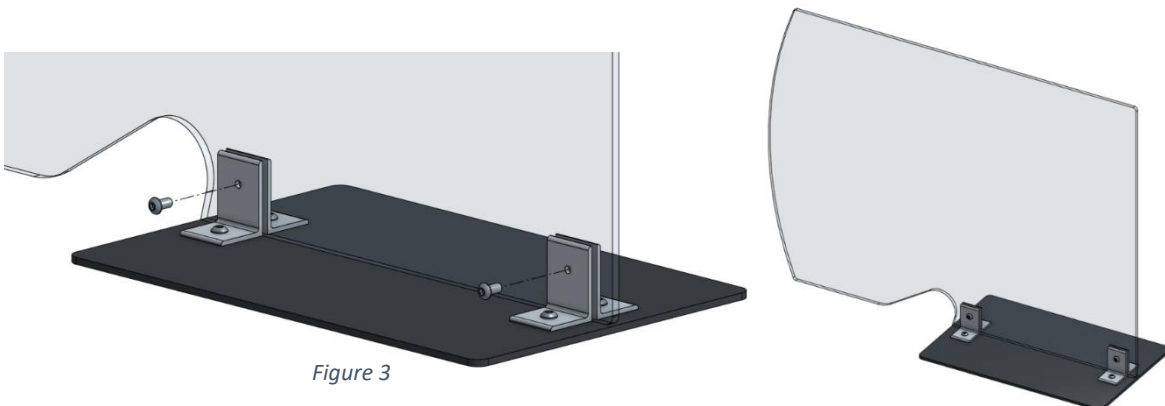


Figure 3