








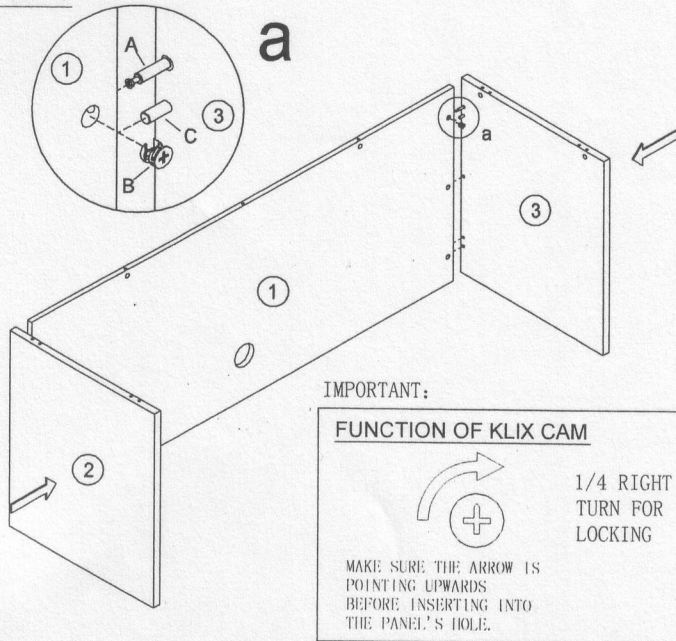
Assembly Instructions

MODEL NO.:N143


CREDENZA SHELL

TUN010CL	TUN011KC		TUN021AG	TUN013LB	TUN018SC	TUN015BG
A  Cam Lock 12Pcs+2Pcs(spare)	B  Klix Cam 12PCS+2Pcs(spare)	C  Dowel 9Pcs+2Pcs(spare)	D  Adjustable Glide 4Pcs	E  6 Hole L-Bracket 5Pcs	F  Screw #4*5/8 30Pcs+5Pcs(spare)	G  80mm Black Grommet 2Pcs



STEP1



STEP3

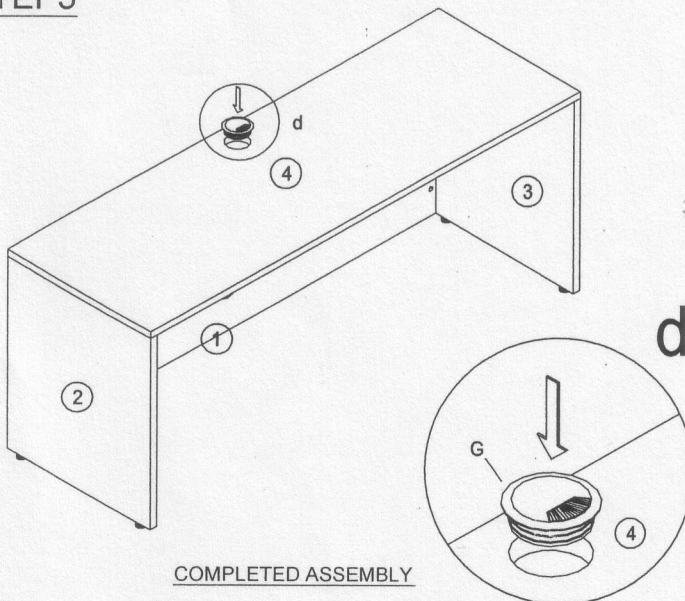

STEP2

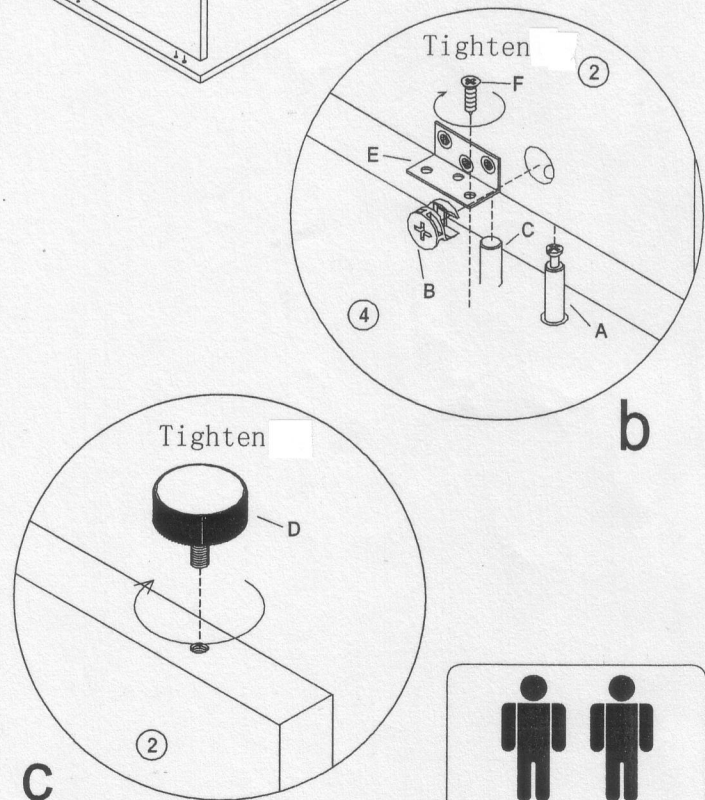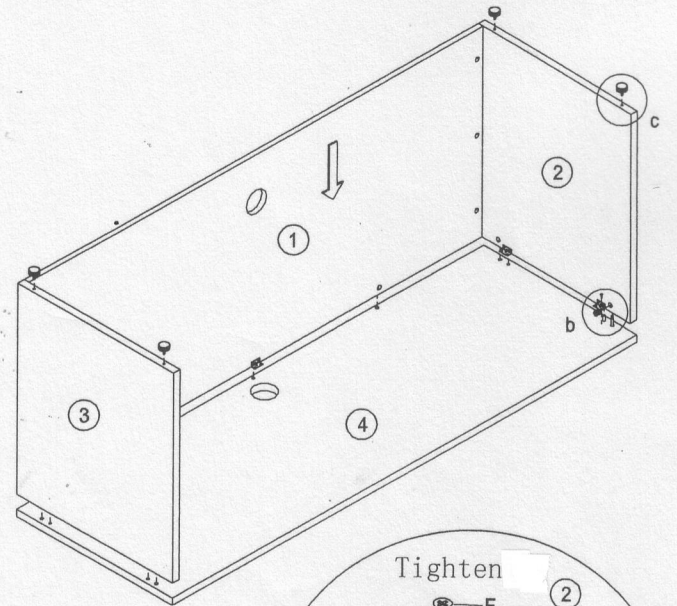

TWO PEOPLE ARE REQUIRED TO ASSEMBLE AND MOVE THIS MODEL

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.