














Assembly Instructions

MODEL NO.:N192


Return

TUN010CL	TUN010KL		TUN020	TUN021AG	TUN013LB	TUN016SC	TUN016IB			TUN016BG	
 Cam lock 7Pos+1(Polypass)	 KLX Cam 7Pos+1(Polypass)	 Cam Cover 7Pos+1(Polypass)	 Dowel 3Pos+1(Polypass)	 Adjustable Glide 4 Pos	 Glide L-Bracket 3Pos	 Screw #11 12Pos	 L-Bracket 2Pos	 Cover 3Pos	 Cover 3Pos	 80mm Black Grasket 2 Pos	 Screw #12 screw 13Pos


STEP1

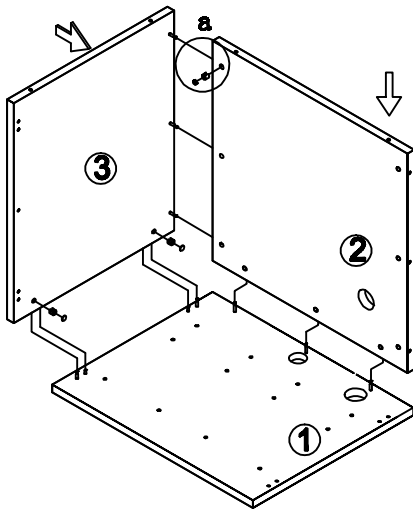




IMPORTANT:
FUNCTION OF KLX CAM

 1/4 RIGHT TURN FOR LOCKING


MAKE SURE THE ARROW IS POINTING UPWARDS BEFORE INSERTING INTO THE PANELS HOLE

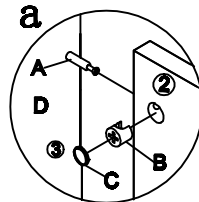





STEP2

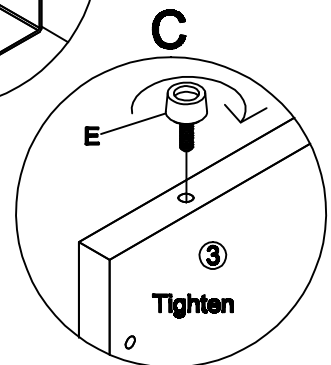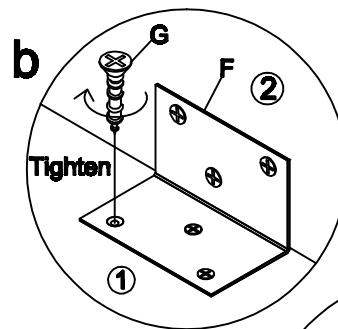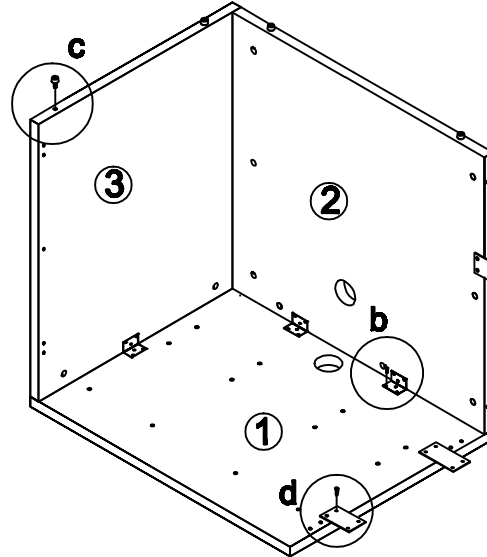

STEP3

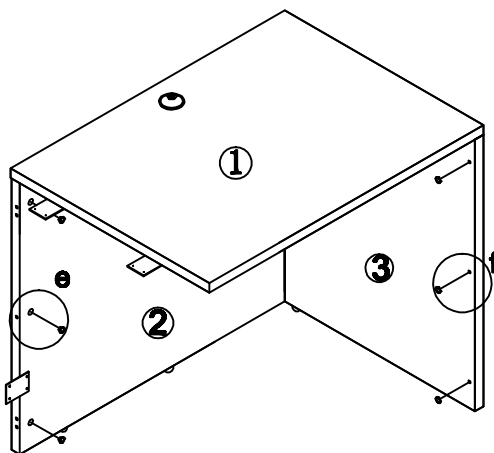

COMPLETED ASSEMBLY

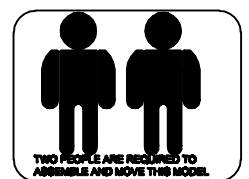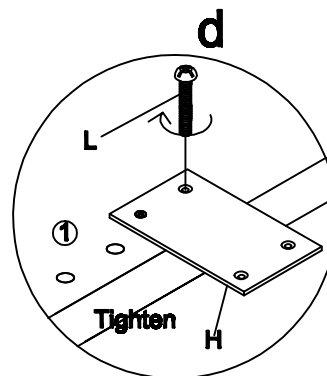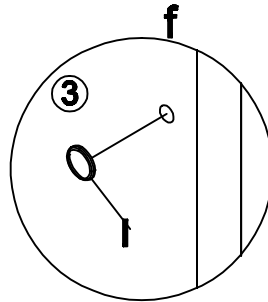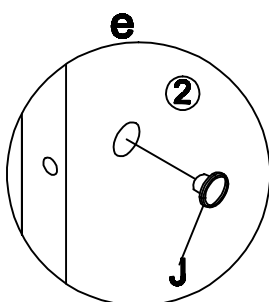

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children