

CALIFORNIA UMBRELLA

Assembly Instructions

UMBRELLA BASE: CRL - (070 OR 100)

Part List:


	Part Name	Image	Size	Qty		Part Name	Image	Size	Qty
A	Rubber Feet (2 pre-assembled and 2 extra)		*Fits four circular cutouts on base	4	E	Double Sided Wrench		for M8 & M10 bolts	1
B	M10 Hex Bolts and washers For CRL070		M10-20mm	4	F	Hex Key		*Fits M12 bolts used in casters	1
C	M8 Hex Bolts and washers For CRL100		M8-20mm	4	G	Base Tube		CRL070: 12" x 1.5" dia CRL100: 24" x 1.5" dia	1
D	Casters with Bolts		35mm casters (3.82" L x 1.42" W x 1.57" H) with M12-35mm bolts	2	H	Base Plate		CRL070: 50cm x 50cm plate CRL100: 60cm x 60cm plate	1

ASSEMBLY STEPS:

Step 1: Use the corresponding bolts and washers, to attach base tube with base plate, **shown on Figure 1.** (please note depending on the base purchased you will be provided with either M10 or M8 bolts)

Step 2: To attach the casters, first remove bolts already installed (see image below.) Align cutouts on casters to the cutouts on the base plate, **shown on Figure 2.** Ensure all bolts are tightly secured to avoid damage

(Use hex key to tighten and untighten the bolts provided on the casters.)

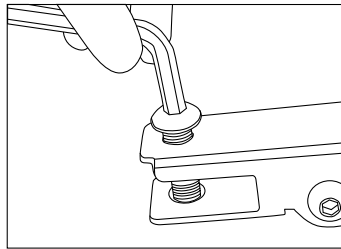

**Plate comes standard with two rubber feet pre-installed. Use the side without the rubber feet to install casters, or insert extra rubber feet. **

Figure 1



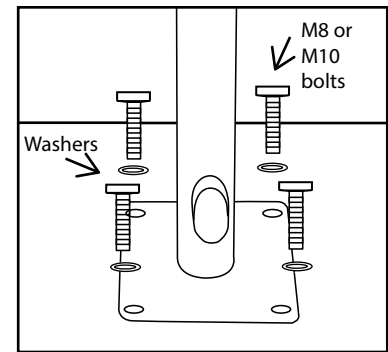


Figure 2

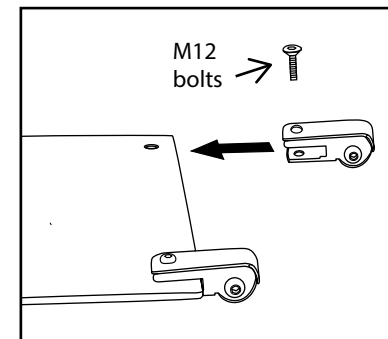

CARE:

- Do not submerge base in water.

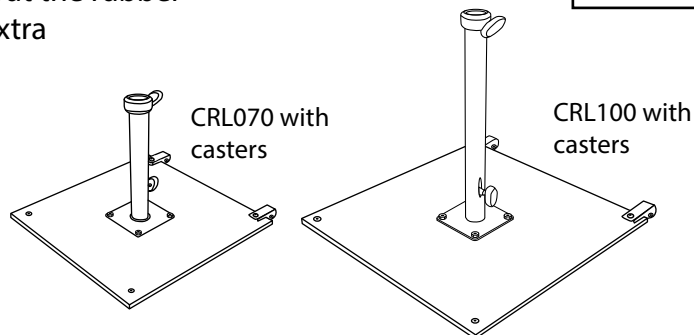

CAUTION:

Two person team is required to complete assembly.