

# CONGRATULATIONS

## ON RECEIVING YOUR NEW NEON SIGN!




WATCH THIS  
VIDEO TUTORIAL!

Let's get started with installation!


### REQUIRED TOOLS




- pencil • level • hammer
- drill • drill bit 5mm / 13/64" • x4 standoffs + included hanging accessories

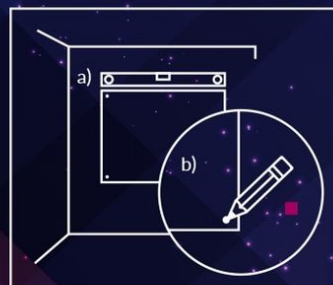

- 1) Place your sign on the wall (optional: Use leveler). With the pencil, mark the center of the holes where the screws will go.

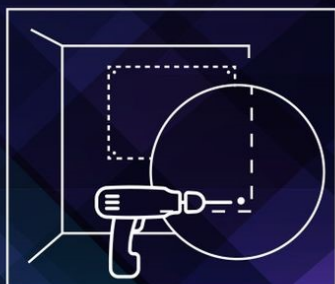


- 2) Place your sign down. With your drill make a hole in the center of your marks

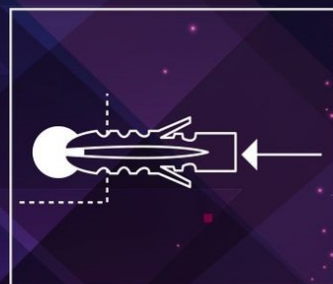

- 3) Insert your anchors in the holes. Hammer the anchor lightly until it is flush with the wall.



- 4) Take your standoffs and unscrew the cap from the barrel. Secure the barrel on the wall using a screwdriver and the screws included. \*Make sure it is tightly secured as this will be holding your sign.

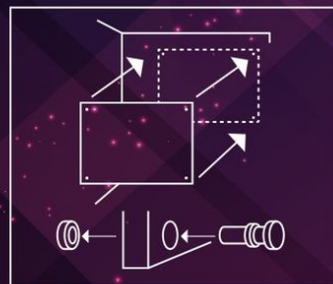

- 5) Align your sign with the holes and screw the caps with the rubber washer through the sign into the barrel.

PLUG IN AND ENJOY!