

Bulkhead Fitting & Spigot Installation Instructions


(475CRSP20BIN, 475CRSP32BIN)



Installation Steps


Step 1

Install spigot housing (A) and black gasket (B) on the inside of the bottom bin with the black gasket positioned over part A.

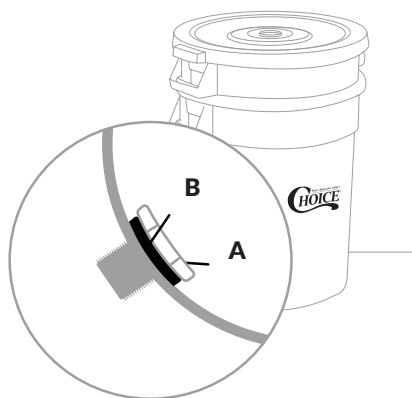


Step 2

On the outside of the crisper bin, install the white gasket (C) and the plastic nut (D) with the white gasket (C) sandwiched between the plastic nut (D) and the exterior wall of the crisper bin. Rotate the plastic nut (D) clockwise via the threads of the spigot housing (A) until firmly secure.

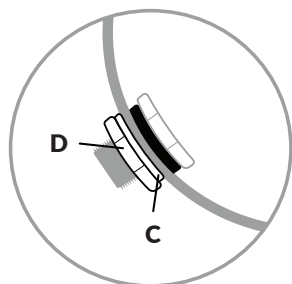

Step 3

Next install the spigot by aligning the spigot threads with the bulkhead fitting threads. Rotate clockwise until firmly secure.

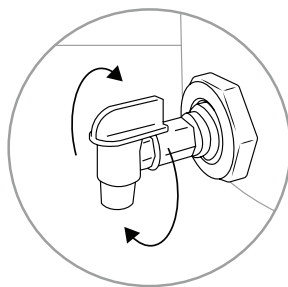

Part List

- A - Spigot Housing
- B - Black Gasket
- C - White Gasket
- D - Plastic Nut

