



Cigarette Receptacle Assembly Instructions

10/2026

Hazard Statements

Caution - Do Not Use if Damaged: Product should not be used if damage is found. Contact customer service for next steps.

Caution - Safe Handling: Do not empty the cigarette receptacle if any cigarettes are still lit. Failure to do so could result in burns.

Initial Setup

Unboxing: Carefully remove packaging. Avoid using sharp tools that could damage the unit.

- Do not force a box cutter or knife through packaging, as it may damage the product or accessories.
- Ensure you do not damage the product or its components when removing it from the packaging.
- If any damage is present, contact customer service immediately.
- Confirm all components found in the assembly section are present in the box.

Required Tools and Hardware




Drywall Screws

Note: For use on drywall ONLY. Not designed for brick or exterior walls.




Drywall Anchor



Drill Bit




Screwdriver

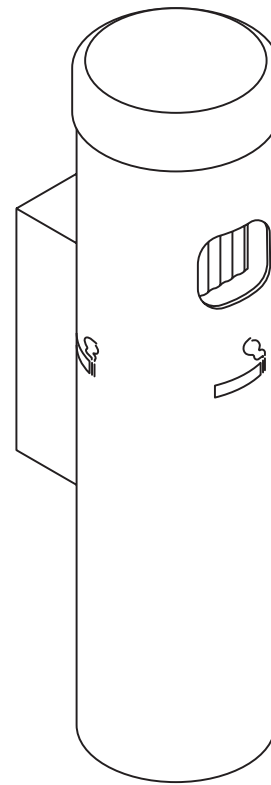

Assembly & Installation


Step 1

Installation Steps: The body attaches to the mounting bracket in a pattern to prevent theft. Disassemble the unit by lifting the body up, over, and out of the mounting bracket using the pattern below.

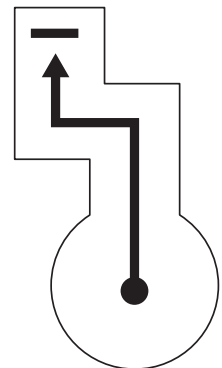


Step 2

Pre-drill Holes: Using the mounting bracket as a template, pre-drill the 4 screw holes. Ensure bracket is level.

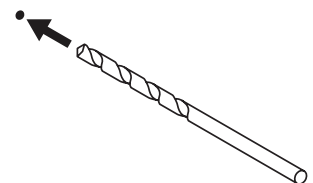

Optional: If mounting to drywall, it is required that the drywall anchors be used. Using the pre-drilled holes, align the anchors and carefully hammer them into the wall.

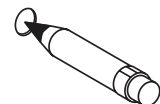


Cigarette Receptacle Assembly Instructions




Step 3

Screw Mounting: Holding the mounting bracket in place, install the screws in an X pattern doing opposite corners first.

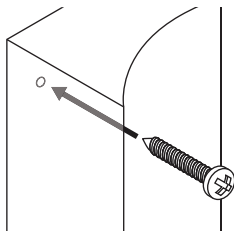


Step 4

Ensure Solid Anchoring: Once all screws are installed, check each corner of the bracket for movement. Tighten screws as needed to ensure flush, level mounting.

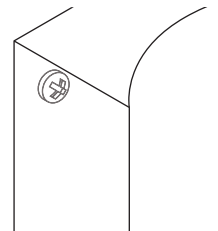


Step 5

Reattach the Receptacle: Assemble the unit by lowering the body down, over, and into the mounting bracket using the pattern below.

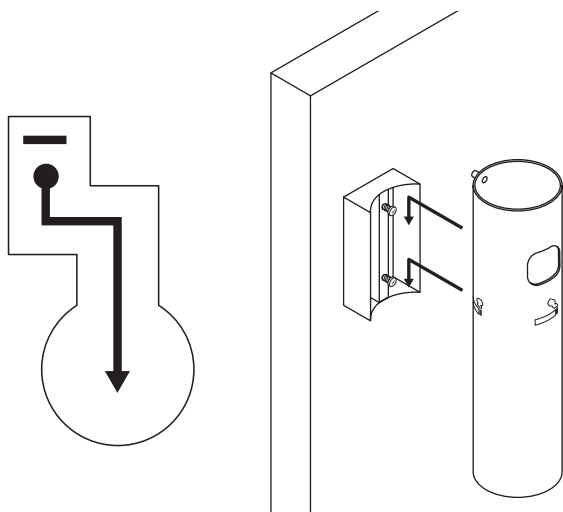

Step 6

Attach Lid: Slide the lid onto the top of the receptacle with the long fan piece facing towards the opening. Press in the pin on the back to help it snap into place.

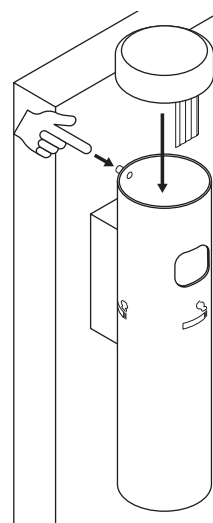

Cleaning

Powder-coated finishes are durable and, with gentle, regular cleaning, are designed to last.

- **Caution:** Never scrub the surface of the product.
- **Caution:** Never use anything that might scratch the surface, such as a wire brush or scrubbing sponge.

Wipe Spills Immediately: Wipe up spills and splashes right away using a slightly damp (**not wet**) soft cloth.

Use Mild Soap if Needed: Use only a mild, non-abrasive soap, such as dishwashing liquid.

Dry the Surface: Wipe the surface with a dry, soft cloth.

CLEANING TIPS

Clean Regularly: Wipe the unit down regularly with a soft, damp cloth to keep the finish clean and vibrant.

Treat the Finish With Care: To keep the unit looking new, treat the surface with the same care as you would the finish of a car.