LAVEX™

Stainless Steel Double Roll with Utility Shelf

Toilet Paper Dispenser

Use & Care Instructions

11/2026

Hazard Statements

WARNING – To prevent personal injury.

- **Do Not Use if Damaged:** Product should not be used if damage is found. Contact customer service.
- **WARNING:** Before drilling, check for concealed utilities to avoid potential injury / property damage.

Initial Setup

Unboxing: Carefully remove packaging.

- Avoid using sharp tools. Do not force a box cutter or knife through packaging, as it may damage the product or accessories.
- Ensure you do not damage the product or its components when removing it from the packaging.
- If any damage is present, contact customer service immediately.

Mounting Hardware: Select mounting hardware appropriate for the wall substrate. The supplied hardware may not be compatible with all installation surfaces.

Installation Height: Mount the dispenser in accordance with all applicable federal, state, and local codes.
For accessibility and ease of use, a mounting height between 15" and 48" above the finished floor is generally recommended, consistent with ADA reach range requirements for unobstructed operable parts.

Installation

Step 1 - Inspect Installation Location

1. Inspect the wall where the dispenser will be installed.
2. Determine the wall substrate and verify that no electrical wiring, plumbing, or other concealed utilities are present in the mounting area.


NOTE: Additional hardware may be required if the supplied mounting hardware is not compatible with the wall substrate.

Step 2 - Position the Dispenser


1. Hold the dispenser against the wall at the desired mounting location.
2. Use a level to ensure the dispenser is properly aligned (Fig. 1).

Parts List


Included

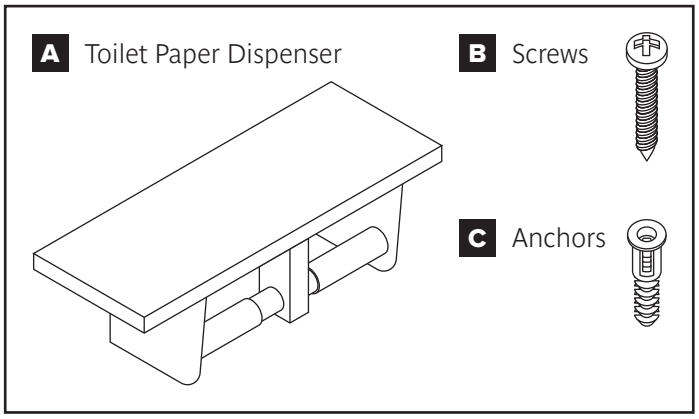

Tools (Not Included)

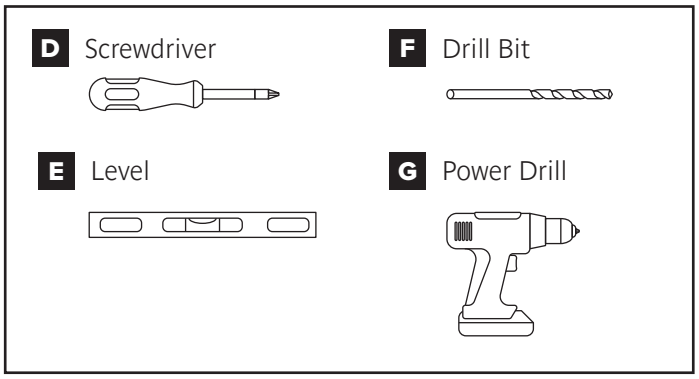

NOTE: If you use your own hardware, use the same number provided.

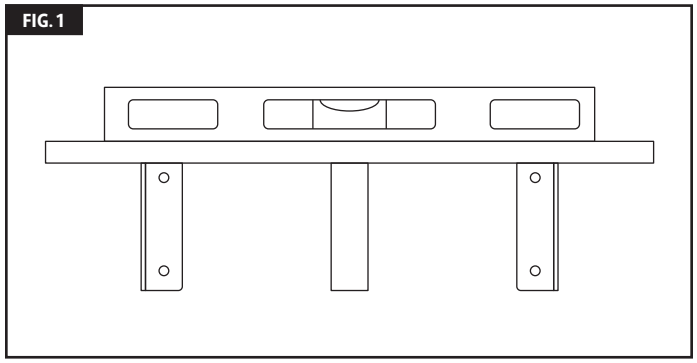

Step 3 - Mark Mounting Locations

1. Mark the mounting slot(s) or hole(s) to be used for installation (Fig. 2).

NOTE: Distribute the mounting fasteners evenly among the available mounting slots to ensure proper load distribution and secure installation.

Step 4 - Drill Mounting Holes

1. Using an appropriately sized drill bit, drill holes at each marked mounting location (Fig. 3).

Step 5 - Installation Methods

Solid Wall / Wood Stud Installation (Fig. 4)

1. Align the dispenser mounting slots / holes with the pre-drilled holes in the wall.
2. Install the mounting screws, but do not fully tighten them.
3. Verify that the dispenser is level and properly aligned.
4. Fully tighten all mounting screws.

Drywall Installation (Fig. 5)

1. Install wall anchors into the pre-drilled holes according to the anchor manufacturer's instructions.
2. Align the dispenser mounting slots / holes with the installed anchors.
3. Install the mounting screws, but do not fully tighten them.
4. Verify that the dispenser is level and properly aligned.
5. Fully tighten all mounting screws.

FIG. 2

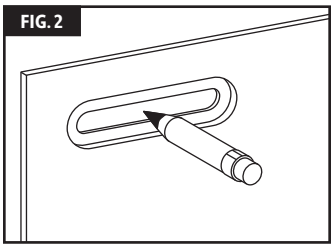


FIG. 3

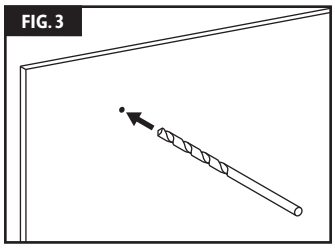


FIG. 4


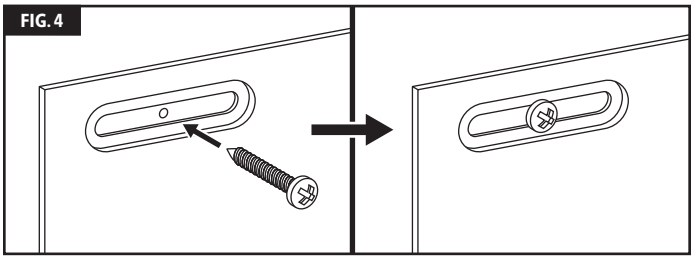


FIG. 5

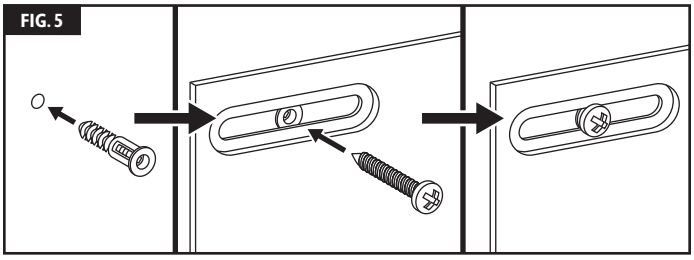

Operation

1. **Remove the Roll Shaft:** Compress the roll shaft by pushing the ends inward (Fig. 6).
2. **Toilet Paper Holder:** Place the toilet paper roll onto the shaft before installing it (Fig. 7).
3. **Install the Roll Shaft:** Align the shaft with the brackets, press the ends inward, then release the shaft to allow it to expand into the sides of the toilet paper holder (Fig. 8).

FIG. 6

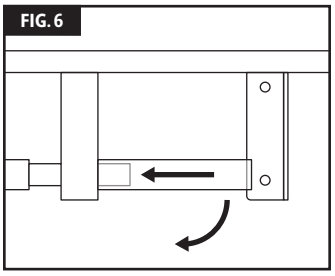


FIG. 7

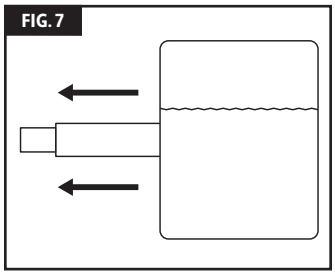


FIG. 8

