


STEP 6. SECURING THE URINAL

Parts Required:

- Urinal
- 3 - Rivet large flange 3/16"
- 3 - rivet washer 3/16" stainless steel

1. With urinal tube inserted into small opening at front left of tank, ensure proper seating of urinal by aligning mounting hole in urinal top with pre drill marks on side panel.
2. Using 3/16" drill bit, drill holes through side panel using mounting holes in urinal as guide.
3. Insert rivets from outside the toilet through the holes in toilet wall and urinal. Place rivet washers over ends of rivets and secure using rivet gun/ rivet tool.

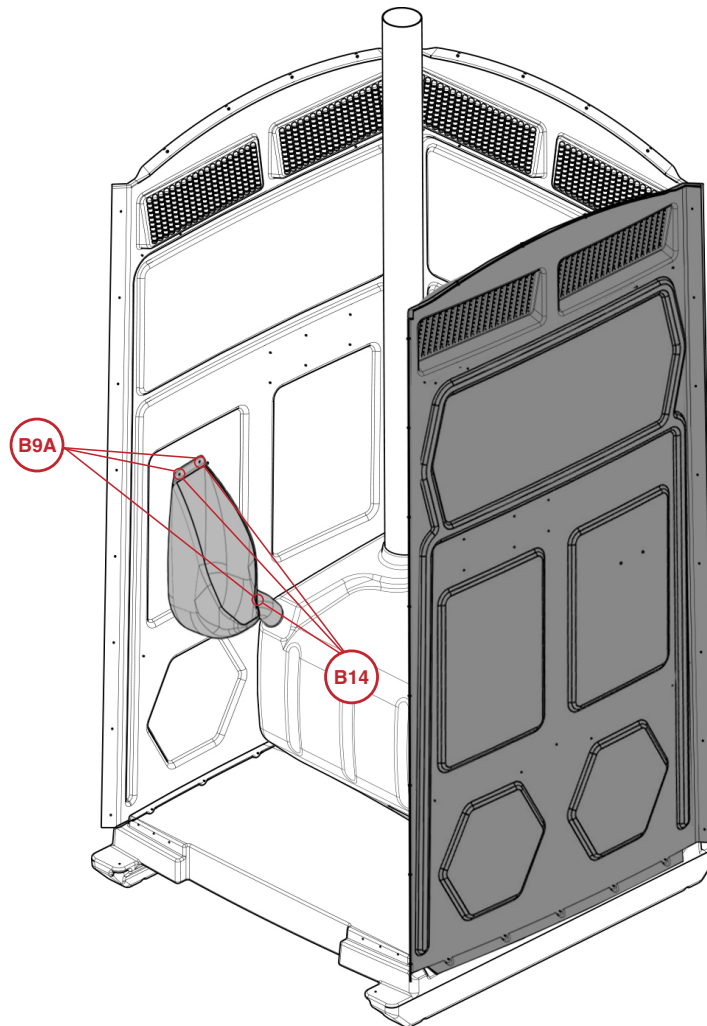

B14



B9A

