


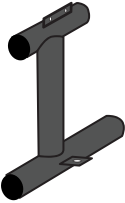
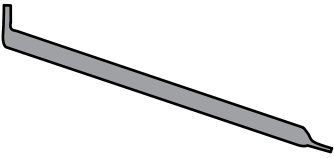


Seat	Legs	
		
1pcs	2 pcs	V-Link 2pcs
L -- Dia. 5/16" x L. 1 3/8" Hex Cap Screw and 5/16" Hex Nut One set S -- Dia. 5/16" x L. 1" Hex Cap Screw and 5/16" Hex Nut Six sets		

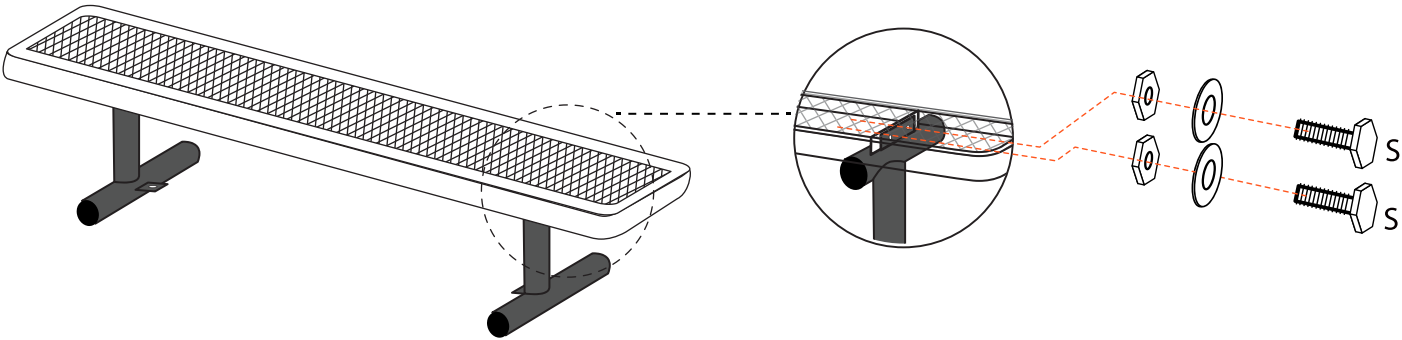

Step 1

Assembly of the Legs and Seat

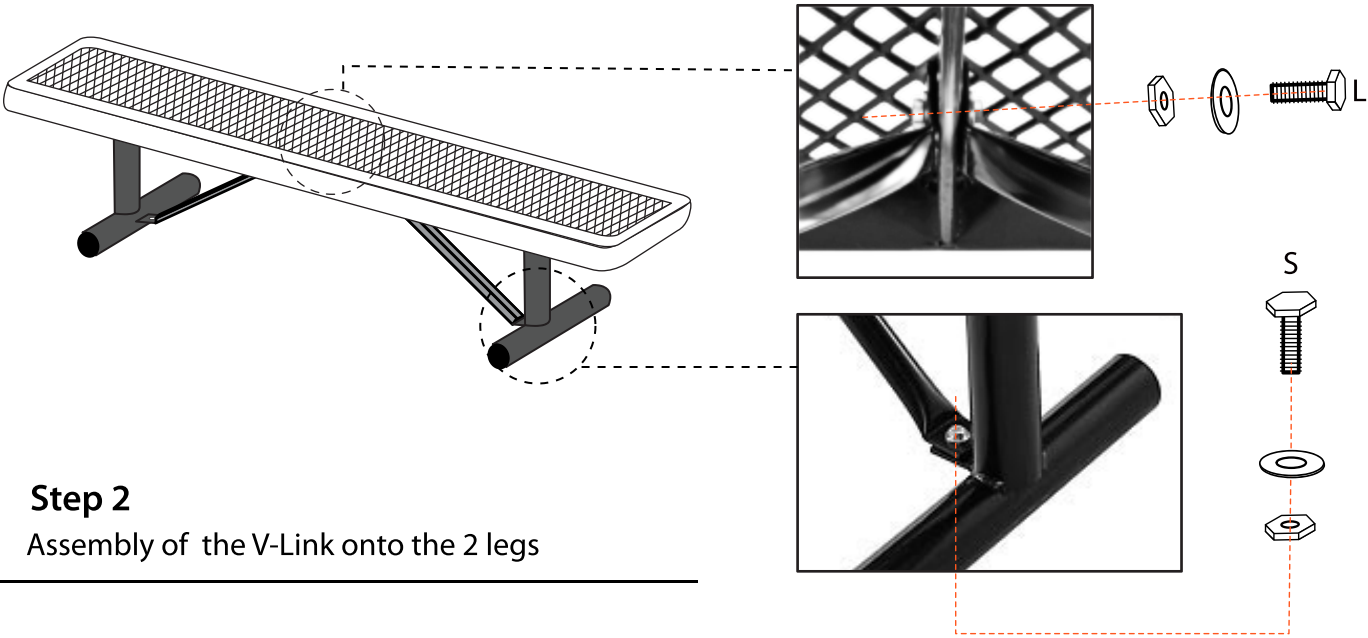

Step 2

Assembly of the V-Link onto the 2 legs

Mounting Hardware Instruction

Step 3

1. Using provided drill bit, drill hole into the concrete, block or stone to a depth of 2 -1/2".
2. Blow out the dust in the hole.
3. Place bracket over tubing.
4. Secure screw flush with bracket into drilled hole.
5. Repeat on remaining screws.

