





Backrest and Seat = A	Right Leg =B	Left Leg =C	
			
2pcs			
 Dia. 5/16" x L. 1 3/16" Hex Cap Screw and 5/16" Hex Nut eleven sets			
 Bracket x 2  Screw x 4 Dia. 1/4" x L. 1-1/4"  Drill Bit x 1 Dia. 1/5" x L. 3-1/8"	1pc	1pc	V-Link 2pcs

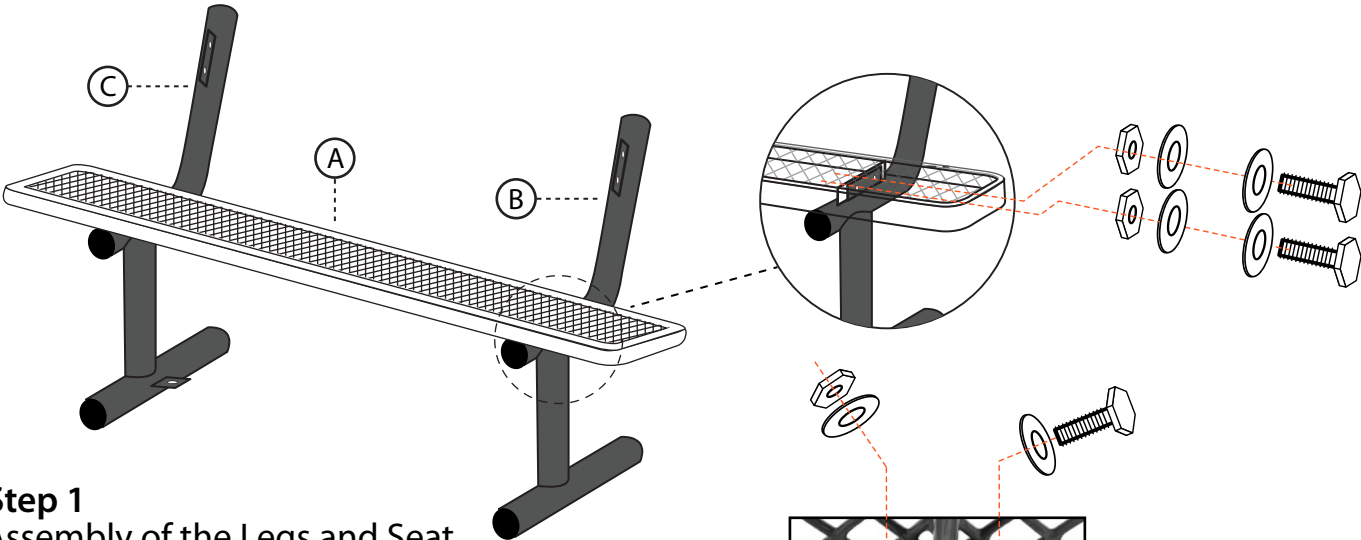

Step 1
Assembly of the Legs and Seat

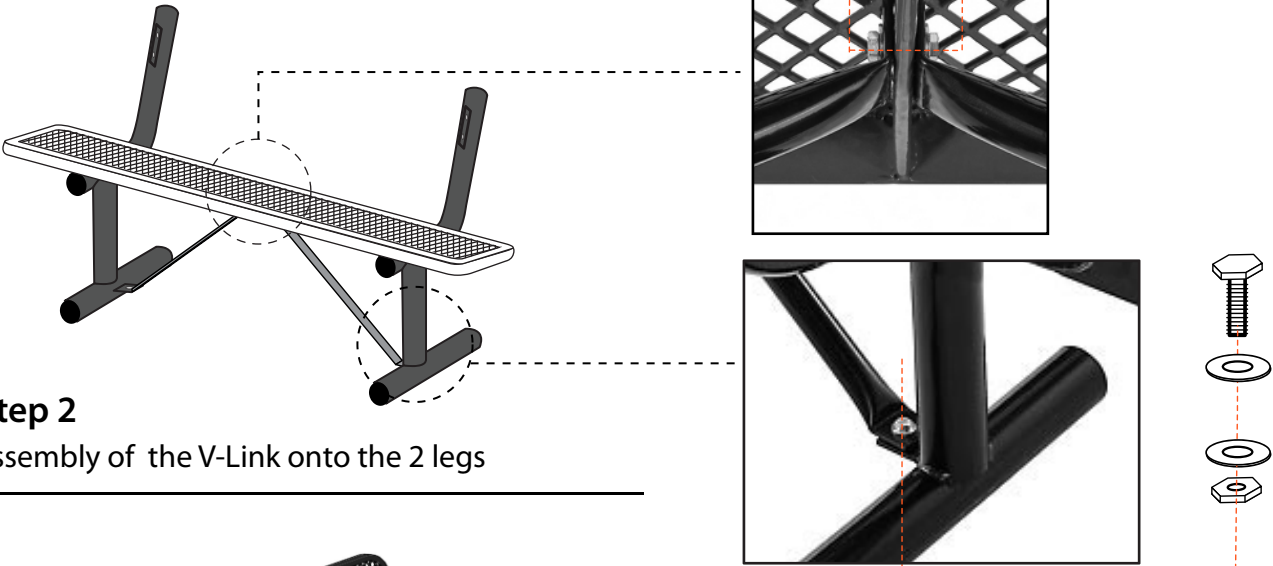

Step 2
Assembly of the V-Link onto the 2 legs



Step 3
Assembly of the Backrest
onto the top of the legs

Mounting Hardware Instruction

Step 4

1. Using provided drill bit, drill hole into the concrete, block or stone to a depth of 2 -1/2".
2. Blow out the dust in the hole.
3. Place bracket over tubing.
4. Secure screw flush with bracket into drilled hole.
5. Repeat on remaining screws.

