

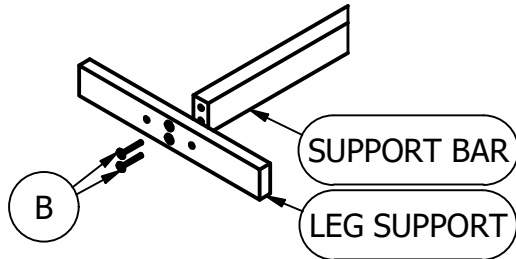


Sequoia Professional Exeter 6' Garden Bench


Assembly Guide

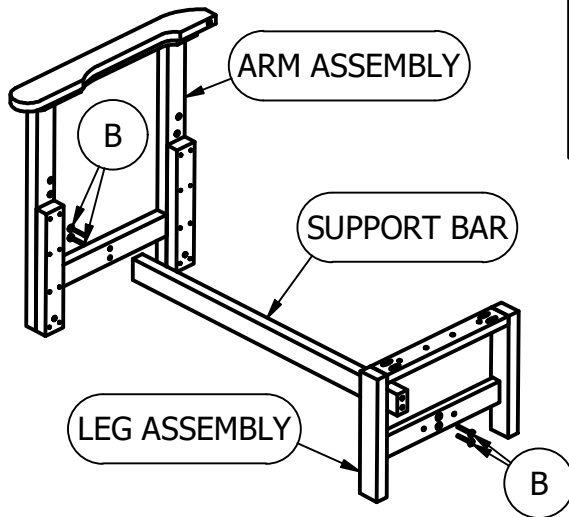

1) Attach (1) Support Bar to Leg Support using (2) "B" Bolts as shown.

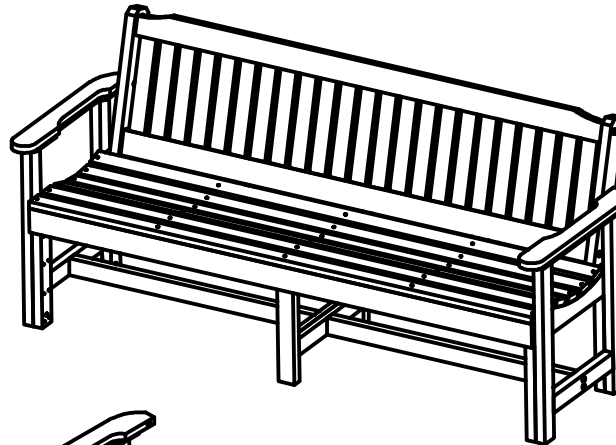



2) Attach (1) Support Bar to Arm Assembly and Leg Assembly using (4) "B" Bolts as shown.

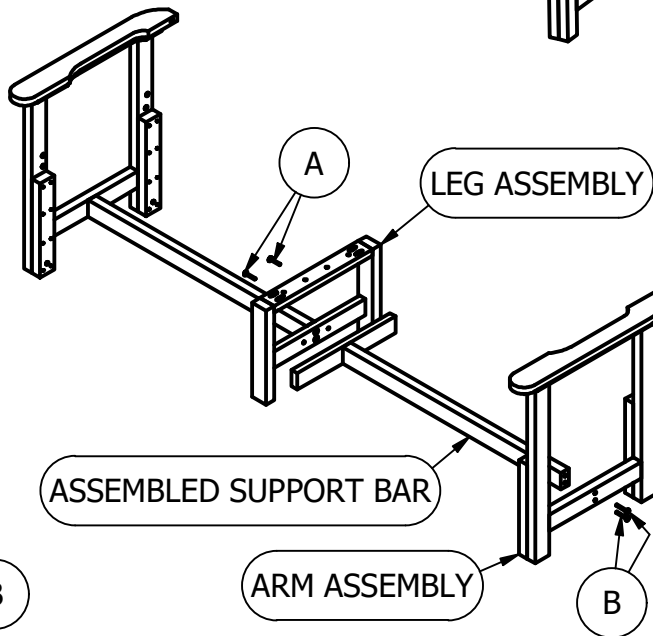



3) Attach the Assembled Support Bar to the Arm Assembly and Leg Assembly using (2) "A" Bolts and (2) "B" Bolts as shown.

HARDWARE

A  x2
1/4"-20 X 1-1/2"

B  x12
1/4"-20 X 1-3/4"

C  x10
1/4"-20 X 2"


D  x9
1/4"-20 X 3"

VERY IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.

Retain these instructions for future reference

INCLUDED TOOLS

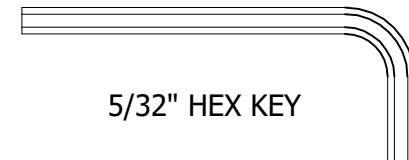

5/32" HEX KEY




**SEQUOIA
PROFESSIONAL®**

For information on Care and Cleaning or to register your SEQUOIA PROFESSIONAL product, please visit www.sequoiaprofurniture.com


CM-BENSQ62
07.16.19

PAGE 1 OF 2


4) Attach (1) Seat Assembly to Arm Assemblies and Leg Assembly using (4) "B" Bolts and (4) "C" Bolts as shown

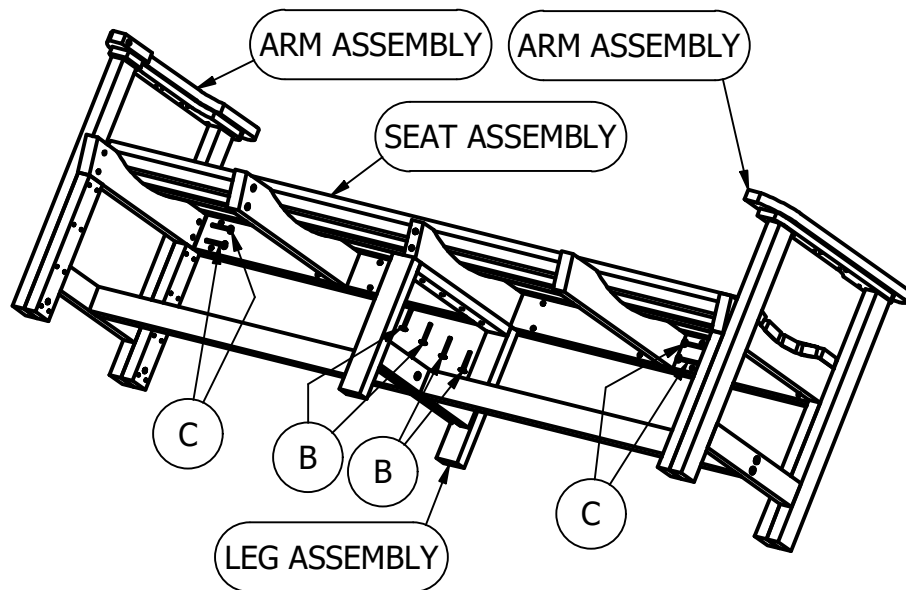


5) Attach Back Assembly to Back Supports using (3) "D" Bolts as shown

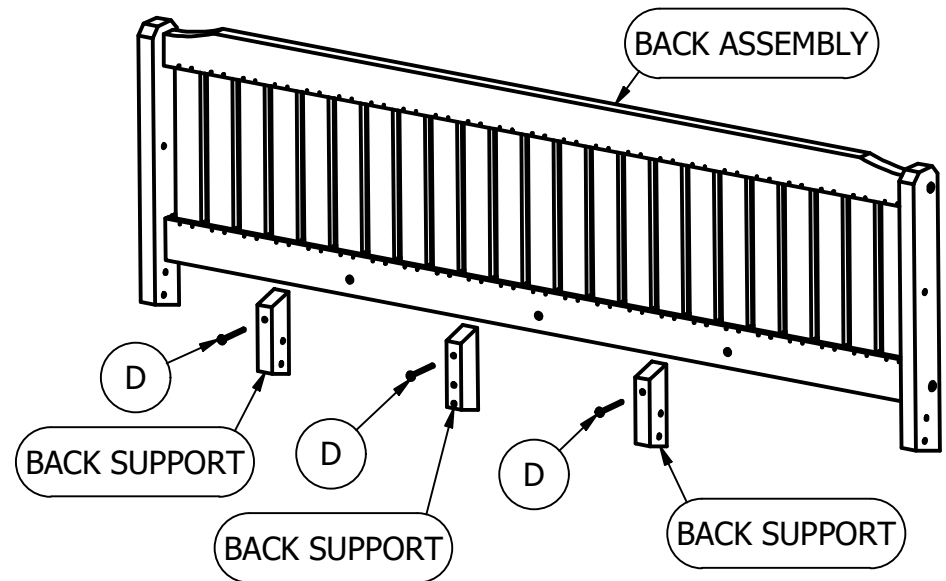

6) Attach (1) Back Assembly to Seat Assembly and Arm Assemblies using (6) "C" Bolts and (6) "D" Bolts as shown

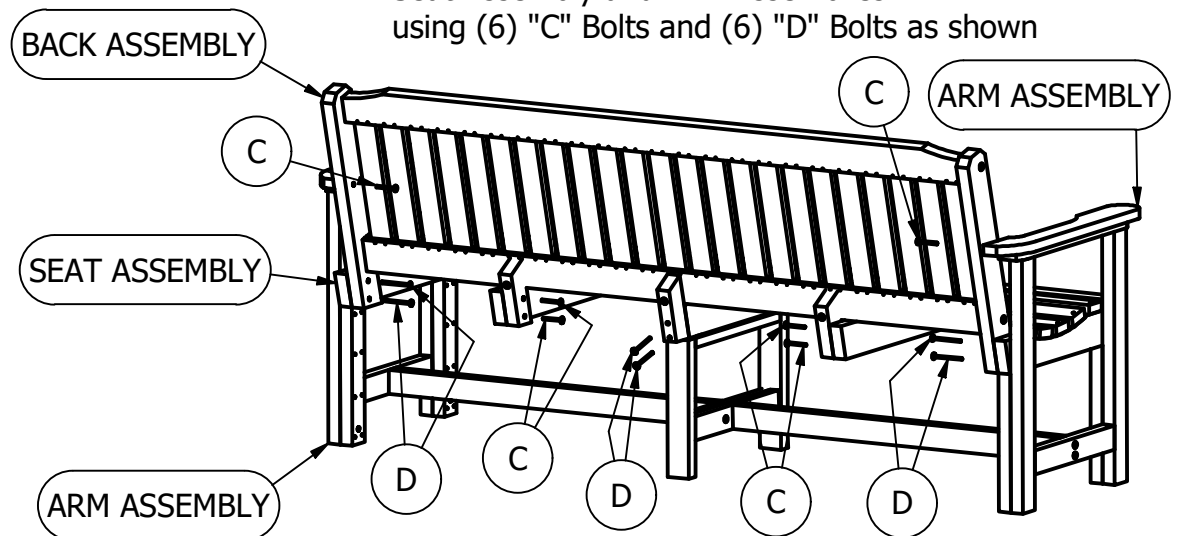

Included Hardware for Optimal Surface Mounting - 4X

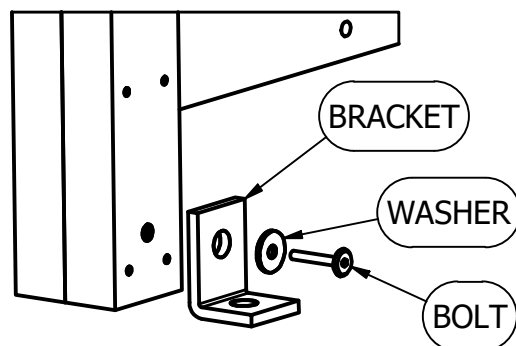

Note: Ground Anchors not included



**SEQUOIA
PROFESSIONAL®**

For information on Care and Cleaning or to register your SEQUOIA PROFESSIONAL product, please visit www.sequoiaprofurniture.com

CM-BENSQ62
07.16.19

PAGE 2 OF 2