



STEP 1. Install the mounting extrusion in the lowest rack insert from the ground.




STEP 2. Slide the plastic bracket into the metal piece from the top. Make sure the plastic bracket is secure.



STEP 3. Count **18 rack inserts** up from the installed mounting extrusion.



STEP 4. Install the second mounting extrusion.

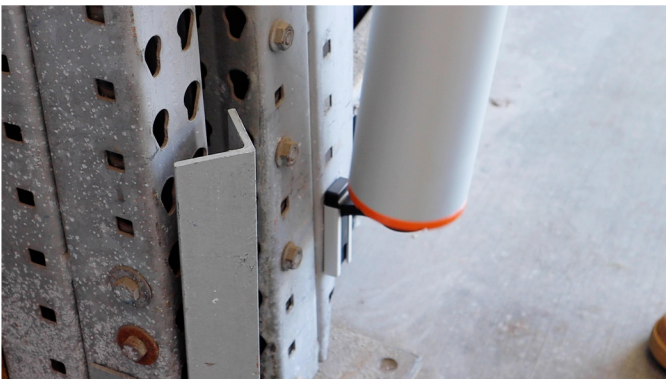

STEP 5. Securely place the bottom of the ZonePro® canister on top of the plastic bracket.



STEP 6. Straighten the canister so it is parallel with the wall. Then, install the 2nd plastic bracket so it slides into the top of the canister.

