


DOMINO'S WALL COVERING MURAL INSTALLATION

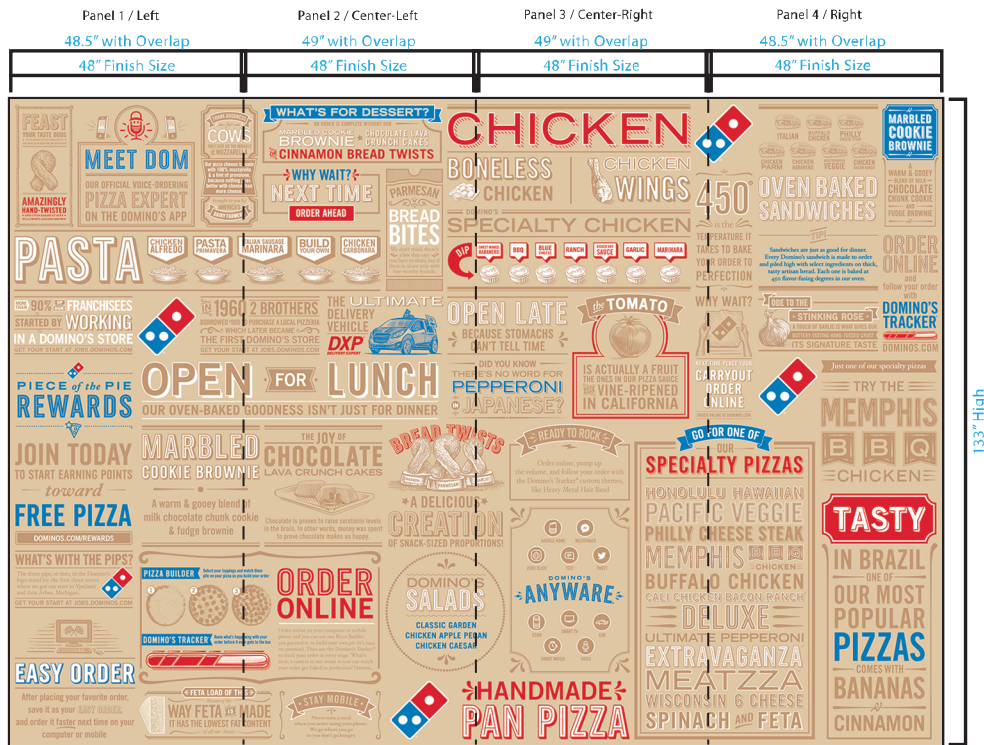

Surface Preparation:

All wall surfaces must be clean, smooth and dry. Remove any existing wall covering prior to installation of this product.

We recommend a coat of wallcovering primer before application of wallcovering. This will greatly aid in removability at a later date. Specific brands recommended are Zinssers Sheilds V. P. primer or Roman Ultra Plus primer. The primer should be one that dries to a solid color and be mold inhibiting.

Application:


Apply a commercial grade wallcovering adhesive. Zinsser and Roman both make an acceptable product. Apply the adhesive to the back, with either a pasting machine or paint roller and work it in, fold both ends to the middle carefully aligning the edges to prevent them from drying out. Allow to set for 10 minutes.

Hang the first panel to a plumb line. Use a smoothing brush or plastic smother to remove any air bubbles and to make sure the wallcovering has made good contact with the wall. Use the smoothing tools gently in order not to damage the image surface. Use light pressure. Do not press hard enough to remove the adhesive from underneath.


Overlap the second strip (if you have ordered more than one) by 1". It is important to line up the pattern at eye level allowing any drift in the pattern to run off toward ceiling and floor. The standard allowance is one quarter inch up and down. It is possible to manipulate or stretch the material to reduce misalignment if necessary.




The panels are now overlapped by 1" and aligned from top to bottom

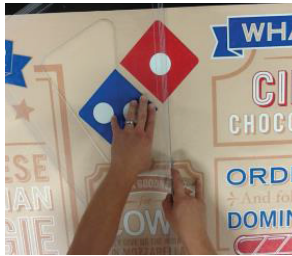

Using a straight edge, cut through both layers taking care to not cut deeply into the wall behind

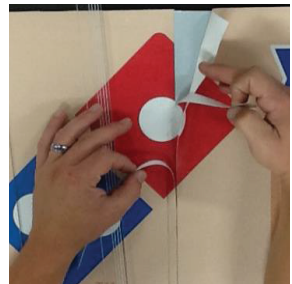

Remove both cut away layers and discard

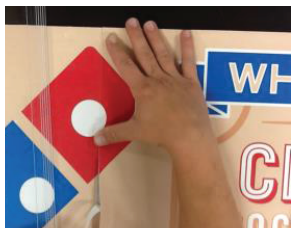

Smooth the layers down and sponge off any excess adhesive with a clean, damp sponge