


# TACK BOARD

Illustration 1

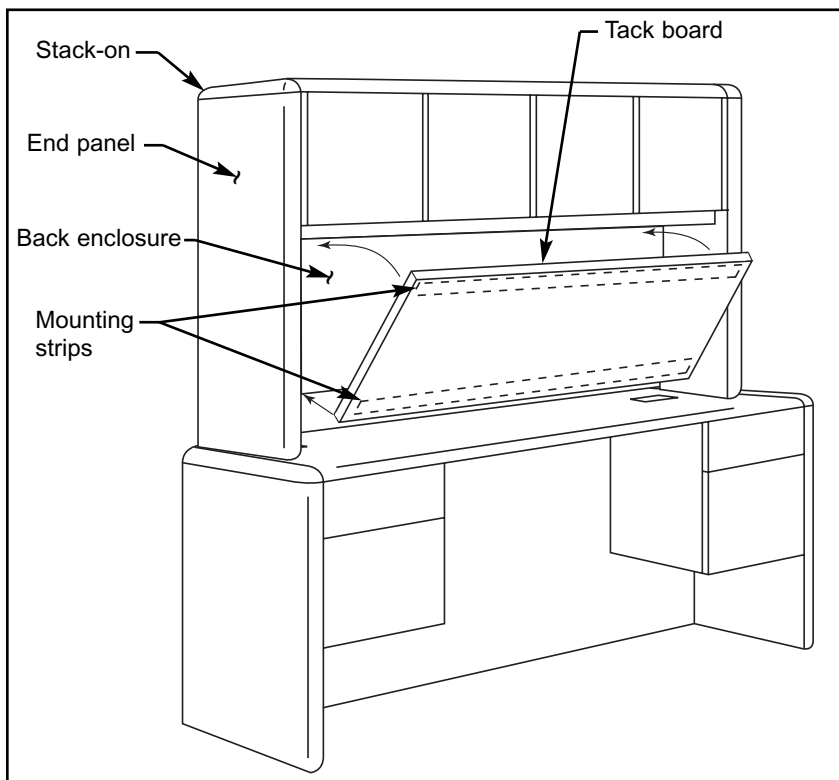

**Stack-On Mount Installation (refer to Illustration 1):**

**Read all instructions and review illustrations before installing.**

Tools required for assembly:  
None

This assembly includes:  
(1) Tack board


1. On back of tack board, remove protective backing from mounting strips.

## IMPORTANT

Ensure mounting surface of stack-on back enclosure is clean and free of any wax or oil residue.

2. With mounting strips facing stack-on back enclosure, carefully align bottom edge of tack board with bottom edge of stack-on back enclosure. Center tack board between stack-on end panels.
3. Press tack board firmly onto stack-on back enclosure.

Illustration 2

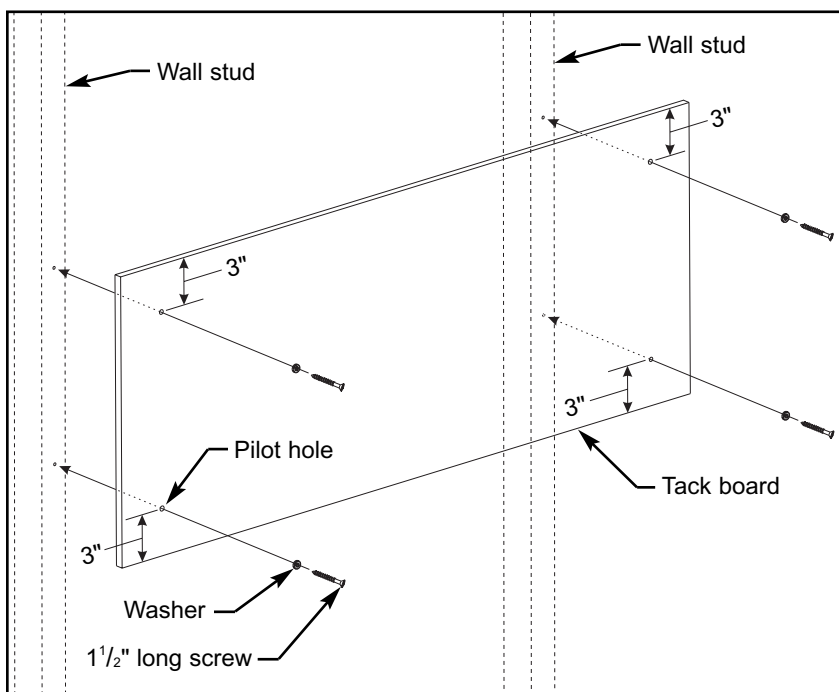

**Wall Mount Installation (refer to Illustration 2):**

**Read all instructions and review illustrations before installing.**

Tools required for assembly:  
Phillips screwdriver      Drill  
Safety glasses              1/8" drill bit

This assembly includes:  
(1) Tack board                      (4) Washer  
(4) 1 1/2" long screw

## ⚠ WARNING

**To prevent the possibility of serious eye injury, always wear eye protection when using power tools.**

1. Locate wall studs.
2. Center tack board over wall studs.
3. At approximately 3" from top and bottom edge of tack board, use the drill and 1/8" drill bit to drill four pilot holes through tack board and into wall studs as shown.
4. Position washers onto 1 1/2" long screws (from hardware pack).
5. Use the Phillips screwdriver to install screws through pilot holes in tack board and into wall studs.

**INSTALLATION INSTRUCTIONS**