

1. WHEN INSTALLING THIS UNIT, LOCAL, STATE, OR FEDERAL CODES SHOULD BE ADHERED TO. INSTALL A TRAP IN THE WASTE LINE AND A SCREWDRIVER STOP IN THE SUPPLY LINE IF **REQUIRED**

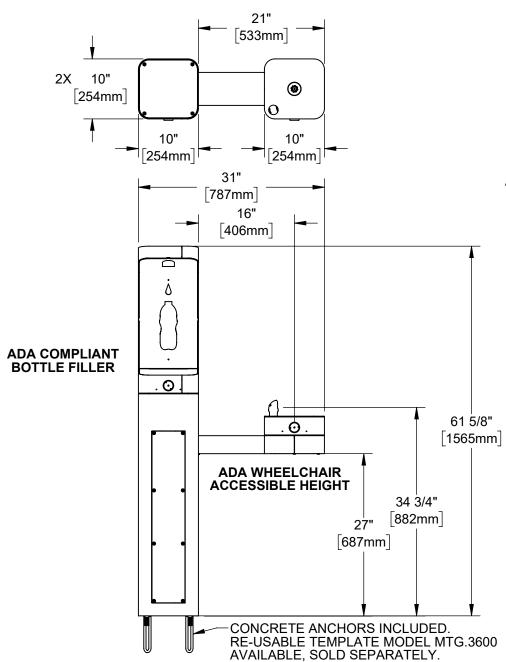

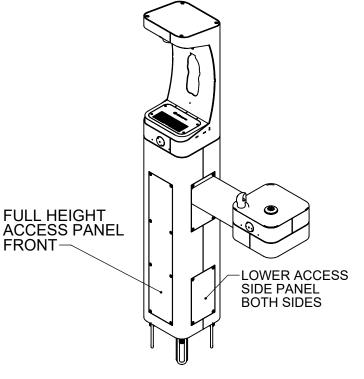

HAWS MODEL 3611/3611F IS FULLY COMPLIANT WITH THE FEDERAL 2010 AMERICANS WITH DISABILITIES ACT (ADA) ACCESSIBILITY REQUIREMENTS WHEN INSTALLED AS SHOWN HERE AND WHEN INSTALLED WITH PROPER **CLEARANCES AND ACCESS. LOCATE THE** PEDESTAL BASE WITH AT LEAST 8" OF CLEAR **UNOBSTRUCTED HARDSCAPE BEHIND THE** PEDESTAL. IT IS THE RESPONSIBILITY OF THE INSTALLER TO ADHERE TO LOCAL, STATE, AND FEDERAL CODES WHEN INSTALLING THIS UNIT. **DISTANCE TO SURROUNDING OBJECTS.** APPROACH SURFACES, ETC. SHOULD BE CONSIDERED.




ECN: 5666

1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM

2

WEBSITE: WWW.HAWSCO.COM REV. ECN: BY: 5719 FV
DATE: CHK'D.: 6/11/20 BJM MODEL(S) PART NUMBER 0510001189.D 3611 & 3611F

DHP SHEET 1 OF 6

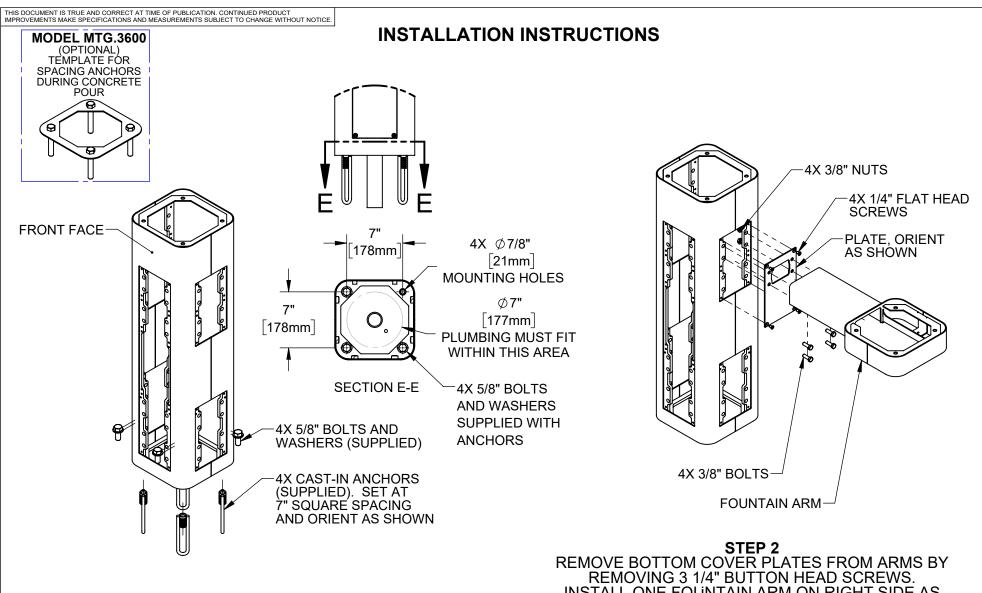


STEP 1

MOUNT PEDESTAL TO CONCRETE SLAB IN DESIRED
ORIENTATION. SLAB TO BE 30" MINIMUM SQUARE
AND 6" MINIMUM THICK (BY OTHERS). PLUMBING CAST
IN CONCRETE MUST FIT IN 7" DIAMETER AREA CENTERED
UNDER PEDESTAL LOCATION.

REMOVE BOTTOM COVER PLATES FROM ARMS BY REMOVING 3 1/4" BUTTON HEAD SCREWS.
INSTALL ONE FOUNTAIN ARM ON RIGHT SIDE AS SHOWN. USE 1/4" FLAT HEAD SCREWS (SUPPLIED) TO INSTALL PLATE. USE 3/8" BOLTS AND NUTS (SUPPLIED) AND TORQUE TO 18 FT-LBS TO INSTALL ARM.



INSTALLATION INSTRUCTIONS

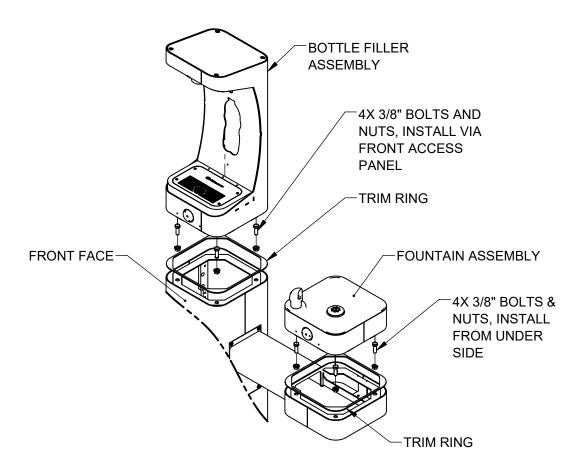


STEP 3

PLACE SQUARE TRIM RING ON BOTTOM OF BOTTLE FILLER AND PLACE BOTTLE FILLER ON TOP OF PEDESTAL, FACING THE FRONT. USE 3/8" BOLTS AND NUTS VIA THE FRONT ACCESS PANEL TO SECURE BOTTLE FILLER TO PEDESTAL. PLACE TRIM RING AND INSTALL FOUNTAIN ON ARM AS SHOWN. CAREFULLY CENTER BOTTLE FILLER, FOUNTAIN, AND TRIM RINGS, THEN TORQUE BOLTS/NUTS TO 18 FT-LBS



INSTALLATION INSTRUCTIONS

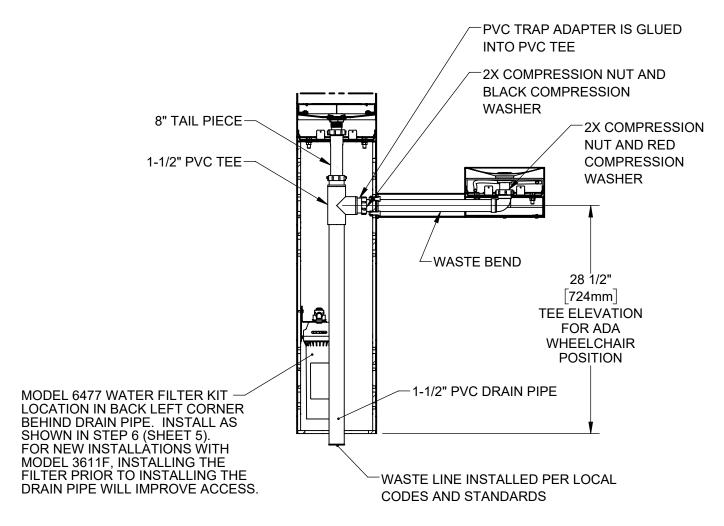

MODEL 3611F (WITH FILTER) SHOWN

STEP 4


INSTALL SUPPLIED DRAIN COMPONENTS AS SHOWN. RED COMPRESSION WASHERS ADAPT FROM 1-1/4" TO 1-1/2" AT EACH DRAIN TAIL PIECE. BLACK COMPRESSION WASHERS ARE USED IN TRAP ADAPTERS AT TEE. USE APPROPRIATE PVC CEMENT TO MAKE SOLVENT CEMENT CONNECTIONS.TRIM WASTE BEND AND/OR TAIL PIECE LENGTH IF REQUIRED. NOTE THATEXTRA PARTS MAY BE INCLUDED TO FACILITATE OTHER CONFIGURATIONSOF THIS FOUNTAIN.

(1) Haws	
----------	--

1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM

2

FV 09/16/21 SCALE: 1:24 DRAWING TYPE: INSTALLATION SIZE:

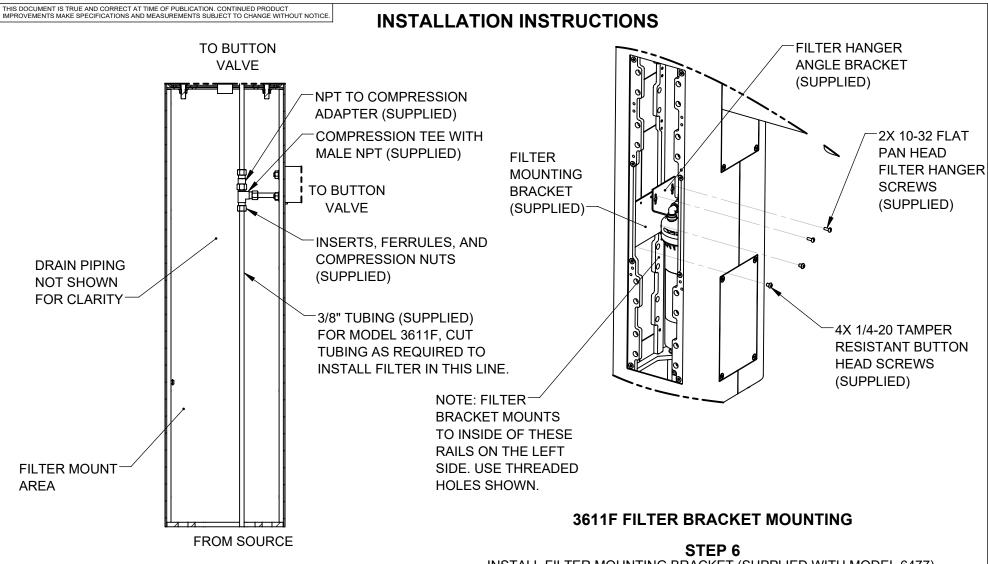

3611 SUPPLY PLUMBING

STEP 5


COMPLETE WATER SUPPLY PLUMBING AS SHOWN. OPEN SUPPLY VALVE(S) AND TEST. REPLACE ARM BOTTOM PLATES AND PEDESTAL ACCESS PLATES.


INSTALL FILTER MOUNTING BRACKET (SUPPLIED WITH MODEL 6477)
TO LEFT INSIDE VERTICAL RAILS USING 2 BUTTON HEAD SCREWS
AS INDICATED ABOVE. INSTALL FILTER HEAD ON HANGER ANGLE WITH
4 SUPPLIED SELF-TAPPING SCREWS. INSTALL FILTER HANGER ANGLE
BRACKET IN RIGHTMOST HOLES AS SHOWN. SEE MODEL 6477 OPERATION
AND MAINTENANCE MANUAL FOR ADDITIONAL DETAILS.



NOTES ON OPTIONAL CONFIGURATIONS

HAWS 3600/3600F SERIES OUTDOOR FOUNTAINS ARE MODULAR AND CAN BE ASSEMBLED AND CONFIGURED MANY DIFFERENT WAYS. DISPLAYED HERE ARE A FEW EXAMPLES. CONFIGURATIONS OTHER THAN THAT SHOWN IN THE INSTALLATION INSTRUCTIONS FOR THE 3611/3611F MAY AFFECT COMPLIANCE WITH ADA REGULATIONS. IT IS THE RESPONSIBILITY OF THE INSTALLER TO UNDERSTAND LOCAL, STATE, AND FEDERAL REGULATIONS AS APPLICABLE IF INSTALLING THIS FOUNTAIN IN CONFIGURATIONS OTHER THAN THAT INDICATED ON SHEET 1 (PAGE 6 OF 11).

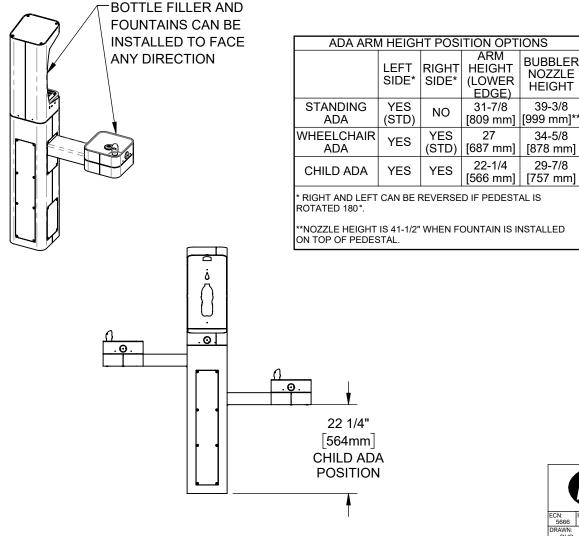

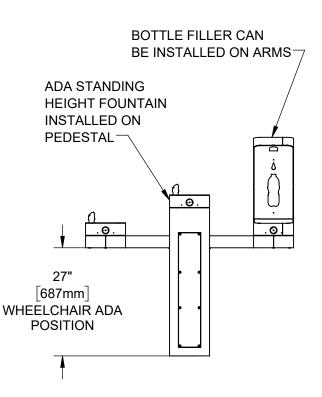



1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM WEBSITE: WWW.HAWSCO.COM

REV. ECN: MODEL(S) 5719 FV DATE: CHK'D. 6/11/20 BJM

3611 & 3611F

PART NUMBER 0510001189.D 2

SHEET 6 OF 6