




BumperWrap Instruction Addendum



1. Due to the diameter and size of your columns, you will need to use a fishing tape to push the strapping through the slots in the bumperwrap.
2. Below are some pictures of how the strapping buckles are used:

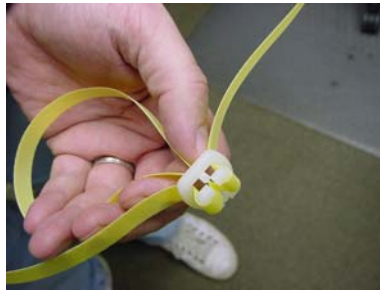

10120 Gottschalk Parkway
Chagrin Falls, OH 44023
phone 800-516-9287 fax 440-543-8661
INNOPLAST.com