

NEED HELP?

Call or Email us first

Our service team is ready to answer your questions...

1-800-265-1833 (English) / 1-800-567-2513 (French)

IN CANADA - ressailecanada@canarmna.ca - IN USA - ressaileusa@canarmna.ca

Monday – Friday
8 AM - 5 PM EST.




INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS
READ ALL INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

TOOLS AND MATERIALS REQUIRED:



Phillips
Screwdriver



Wire Cutters



Pliers



Wrench


Wiring supplies
as required by
local electrical
code

SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. TO CLEAN THE FIXTURE, TURN OFF THE POWER, WAIT FOR IT TO COOL, AND WIPE THE FIXTURE WITH A CLEAN, SOFT CLOTH.

NOTE: Product may not look exactly as shown in figures.

INSTALLATION:

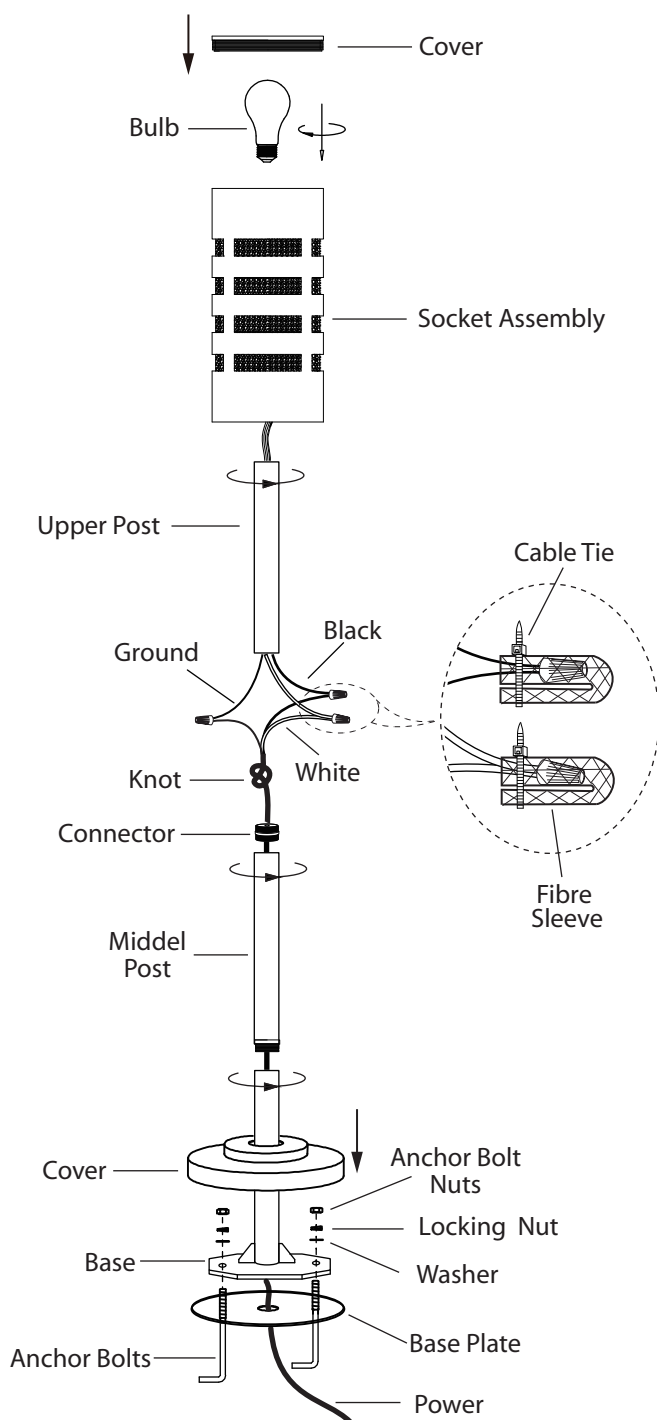

1. Pour cement base for the lamp.

2. Place anchor bolts into the cement with the base plate sitting on top of the cement holding the bolts in proper position. Make sure the anchor bolts are above the cement sufficiently to clear through the base when assembled. Make sure the power supply passes through the center hole of the base plate. (Note: make sure the surface of the cement is level). After the cement is cured, proceed with the next step.

3. Feed the power leads up through the base, cover, middle post and connector as shown. Tie a knot on the power supply.

4. Threading the wires through the upper post and screwing it to the socket assembly.

5. Connect the power supply to the head assembly. Attach the black wire to the black wire. Attach the white wire to the white wire. Attach the ground wire to the ground wire.

6. Wrap up the black wires and white wires with fibre sleeves. Tighten the fibre sleeve with a cable tie.

7. Once connections of wires are completed, carefully tuck wires and wire nuts into the upper post. Making sure no bare wire (on the black and white) is visible at the wire nuts.

8. Screw the connector, middle post and base into the upper post as shown.

9. Bolt the base to the anchor bolts using washers, locking nuts and anchor bolt nuts.

10. Position the cover in place.

11. Install the proper bulb type and wattage (not included).

12. Push cover onto the fixture.