

ASSEMBLY INSTRUCTIONS

HEAVY DUTY RIVET SHELVING



Post (A)

Particle Board (C)

Side beam (B)

Cross beam (D)

Plastic foot cover (E)

Center support (F)



1



Place the plastic foot cover (E) on the bottom of each post (A).



2


Next, position the lower side beams (B) in the structure using a nylon mallet, starting from the bottom to the top.

Before tapping the pieces, make sure the side beams (B) are placed at a 90° angle with respect to the post (A).

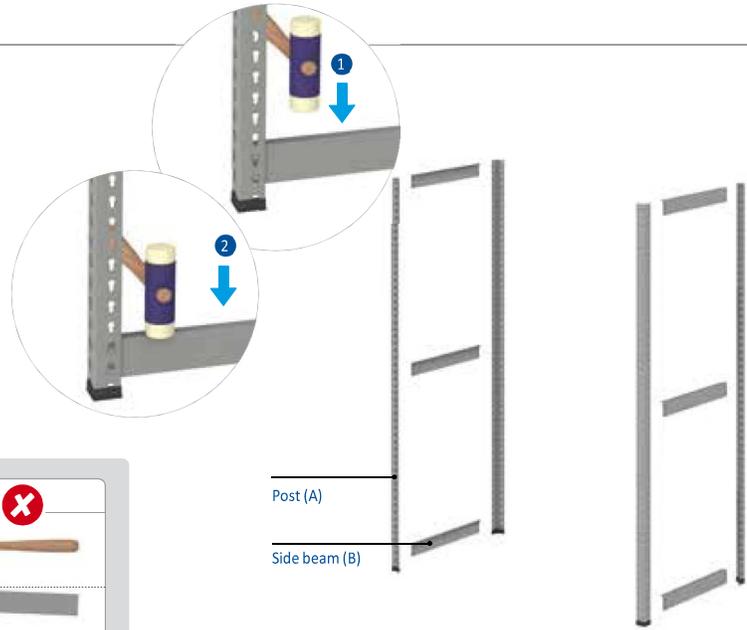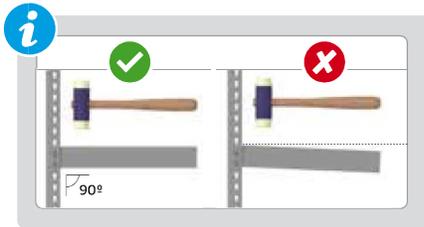

3


Place the Cross beams (D) so they stay joined to the post (A) and side beam (B) of the corresponding level.

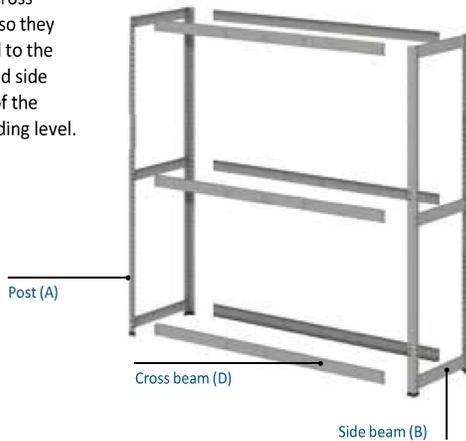

4

Insert a center support (F) in the middle of each level using a rubber mallet to strengthen the structure.

Widths of 72", 84" and 96" include center supports.

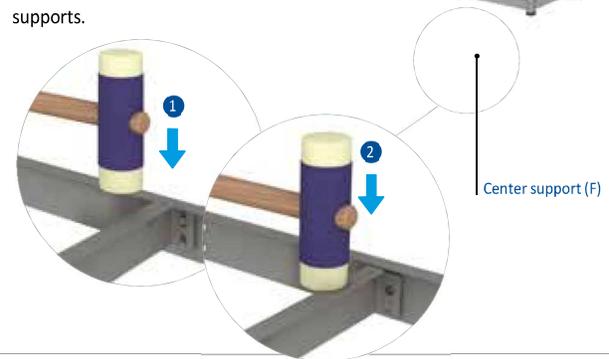

5

When the shelf's structure is put together, fit a particle board (C) into each level.

