

#257SGCW800


Garden Cart

ASSEMBLY TIPS


- Read these instructions thoroughly before proceeding.
- Tighten all parts by hand. Do not use power tools.
- For your safety, do not overload.

PARTS LIST


1 Base (1 pc)

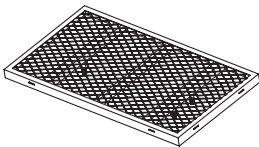


2 Yoke (1 pc)

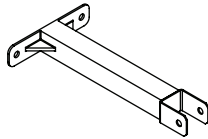


3 Front Axle (1 pc)

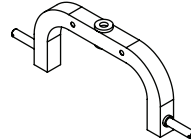


4 Rear Axle (1 pc)

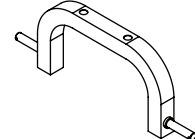


5 Front/Rear Panel (2 pcs)

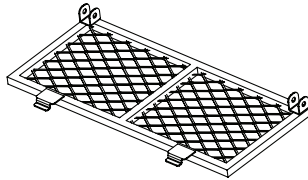


6 Side Panel (2 pcs)

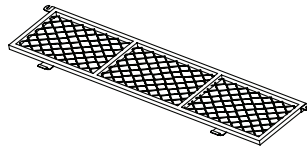


7 Wheels (4 pcs)

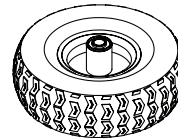


8 Handle (1 pc)

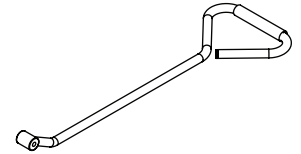


A Bolts, Nuts, & Washers
M10 (2 sets)

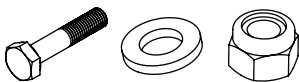

B Bolts, Nuts, & Washers
M8 (1 set)

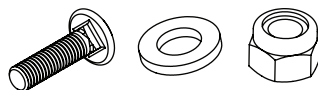


C Locking Bar
(2 Right, 2 Left)

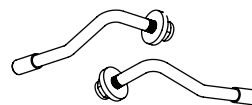


D Wheel Pin (4 pcs)




E Plastic Washer
M14 (1 pc)

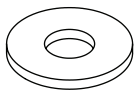


F Washer
M16 (8 pcs)

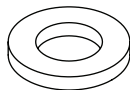

G Washer
M14 (3 pcs)

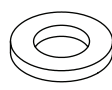


H Lock Nuts M14 (3 pcs)

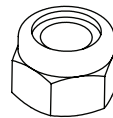

STEP 1

Prepare Assembly


Turn the base (1) upside down.

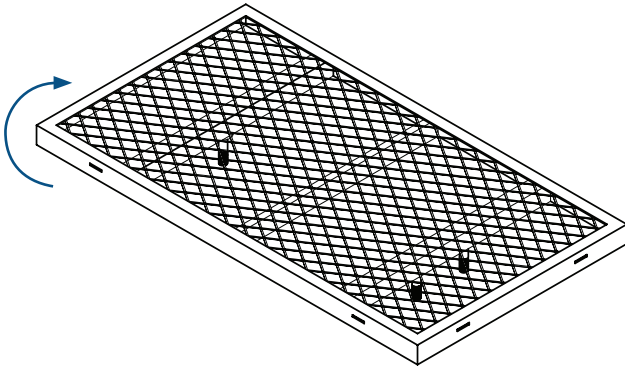

STEP 2

Front Axle Assembly


Attach the yoke (2) to the front axle (3) by using two sets of M10 bolts, nuts, and washers (A).

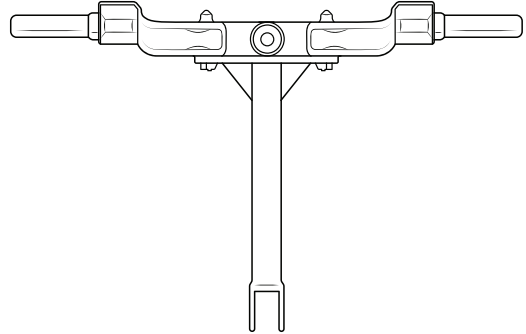

STEP 3

Front Axle to Base Assembly


Attach the front axle (3) assembly to the base (1). Next, slide the front axle assembly onto the pre-assembled pivot bolt. Finally, secure by using a plastic washer M14 (E), another washer M14 (G), and lock nut M14 (H). Do not over-tighten the lock nut M14 (H).

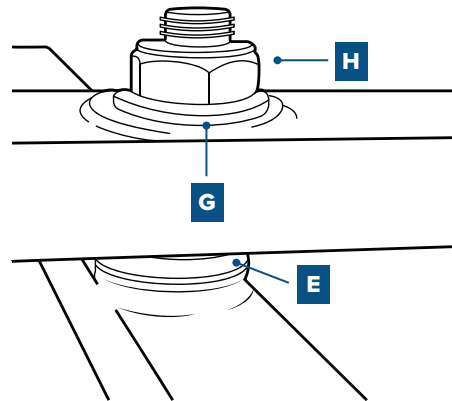

STEP 4

Rear Axle Assembly


Attach the rear axle (4) to the base (1). First, slide the rear axle (4) onto the pre-assembled pivot bolts. Next, secure by using 2 washers M14 (G) and 2 lock nuts M14 (H).

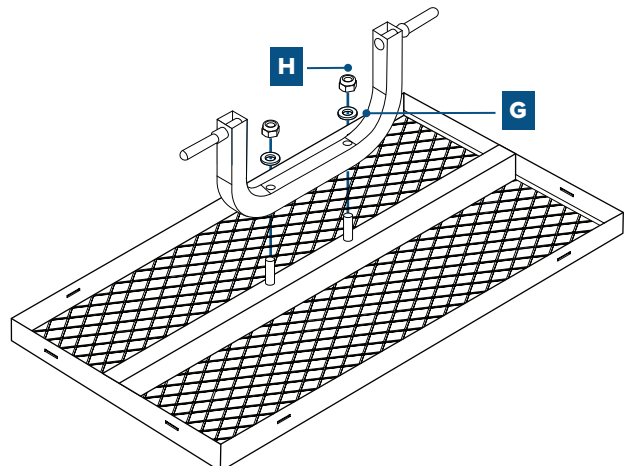

STEP 5

Wheel Assembly


First, attach the wheels (7) onto each axle. Next, insert 2 washers M16 (F) for each axle. Then, insert the wheel pins (D) into the axle's hole. Next, bend back the ends of the wheel pins with pliers to keep them in place.

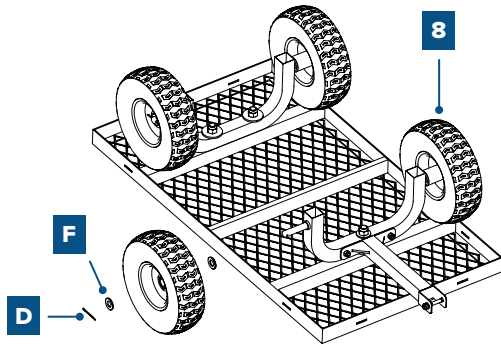

STEP 6

Turn the Cart Upright


Attach the handle (8) with the yoke (2) by using the M8 bolts, nuts, and washers (B) to lock it. Do not over-tighten.

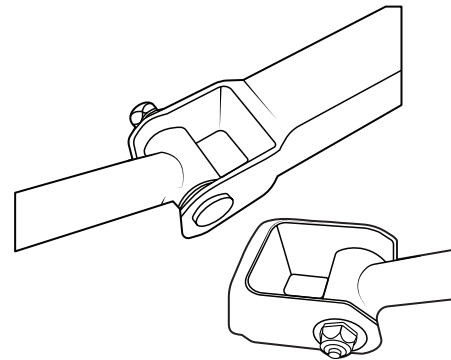

STEP 7

Panel Assembly

Insert the front panel and rear panel (5) and 2 side panels (6) onto the base.

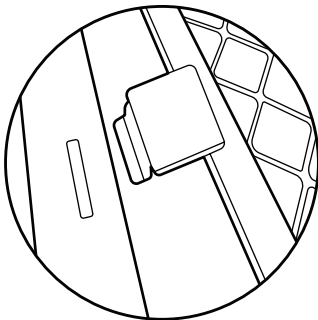

Latch the front panel and rear panel (5) to the side panels (6). Secure by using the 2 sets of locking bars (C).

