
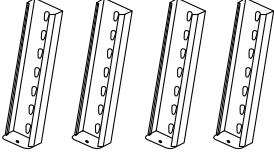
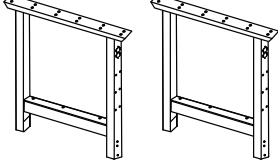



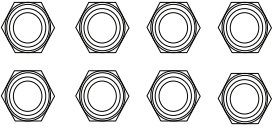
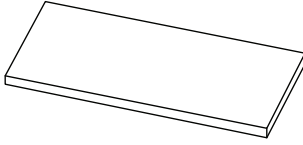


INSTALLATION INSTRUCTIONS

PLASTIC LAMINATE TABLETOP WORKTABLE




PARTS

A (4) Adjusting Feet 	B (2) Leg Frames 	C (4) Nylon Rivets 	D (1) Lateral Channel Bracing 
E (8) Screws 	F (8) Nylon Lock Nuts 	G (1) Laminate Tabletop 	H (8) Hexagon Flange Head Tapping Screws 

ASSEMBLY


STEP 1

Insert one of the adjusting feet (A) into a step rivet of one of the leg frames (B). Choose your desired height and use a nylon rivet (C) to secure the foot.

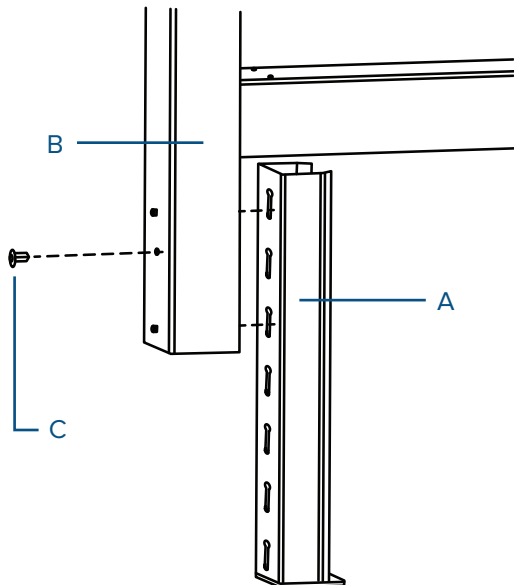

STEP 2

Repeat Step 1 to install all four adjusting feet.

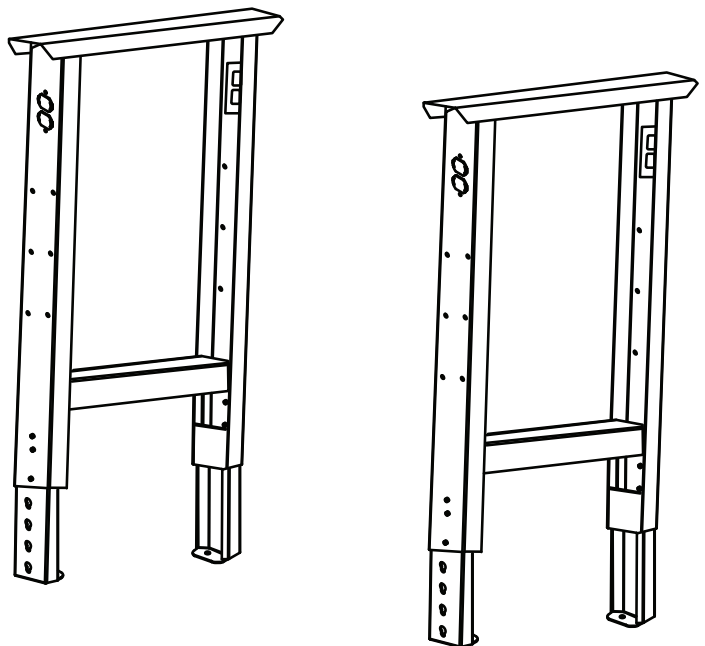


INSTALLATION INSTRUCTIONS

PLASTIC LAMINATE TABLETOP WORKTABLE




STEP 3

Secure the lateral channel bracing (D) to the leg frames using the screws (E) and nylon lock nuts (F) provided.

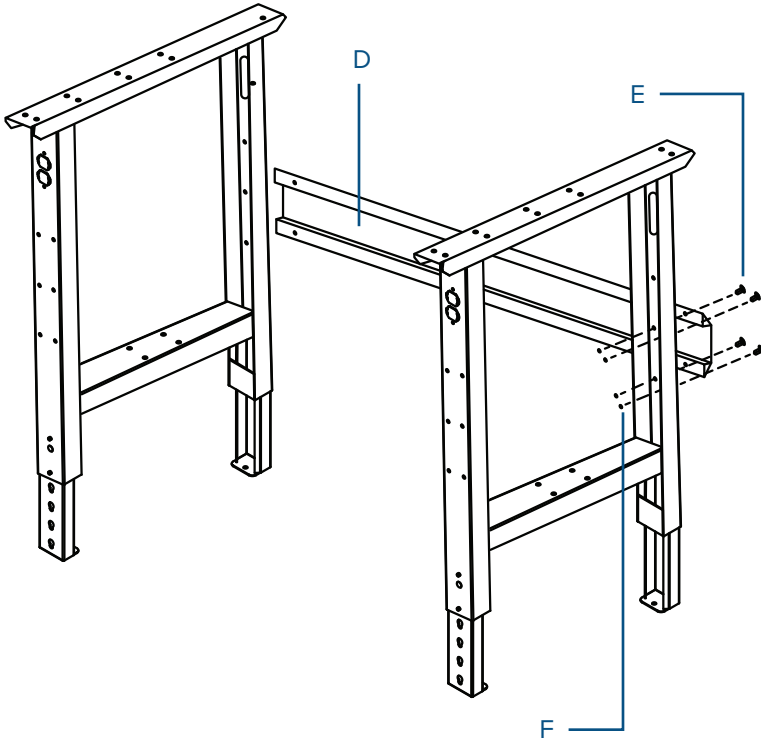


STEP 4

Place the tabletop (G) upside down on a surface that won't scratch it.

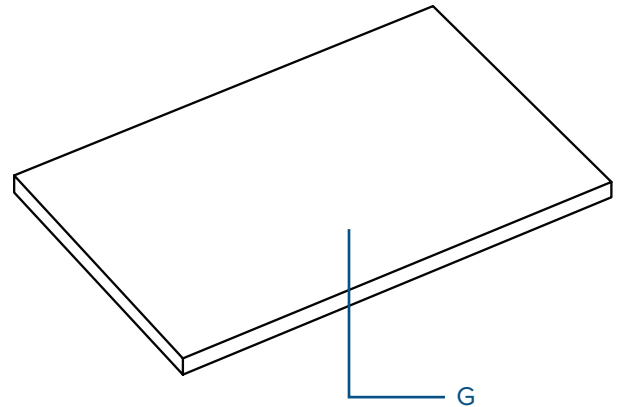

STEP 5

Secure the tabletop to the leg frames using the hexagon flange head tapping screws (H).

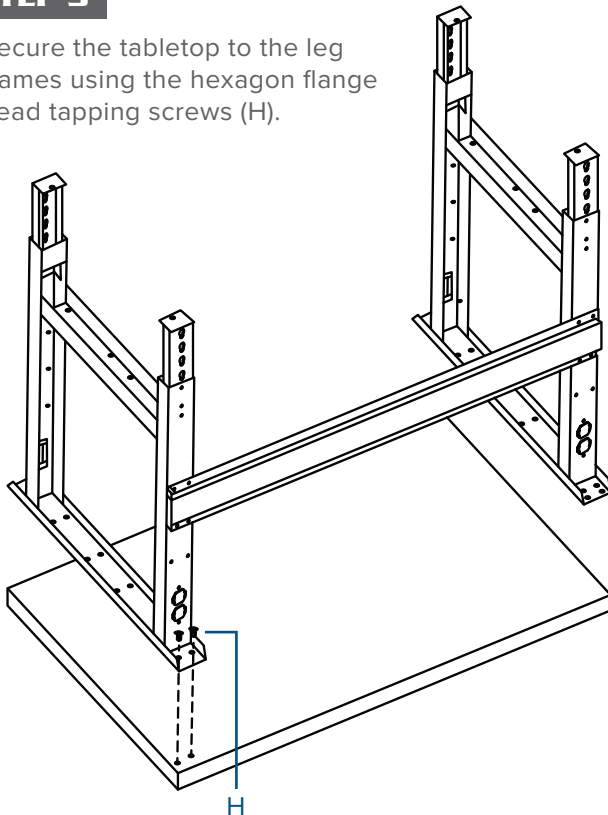

INSTALLATION FINISHED

