



LLMC Modular Charging Cabinet Assembly Instructions

Tools Required:
Phillips Head Screwdriver




Parts Key

A x1

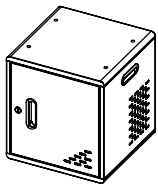


Charging Cabinet

B x1

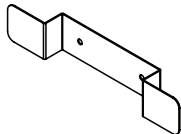

Cord Wrap

C x2





Bolt,
Phillips Head

D x4




Thumbscrew



- 1 Position cord wrap on the rear of the cabinet, over the corresponding threaded mount holes.

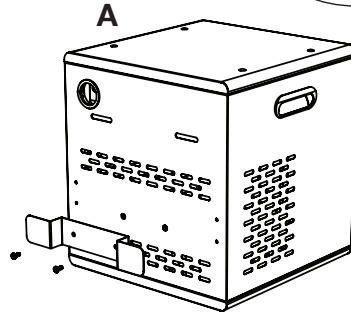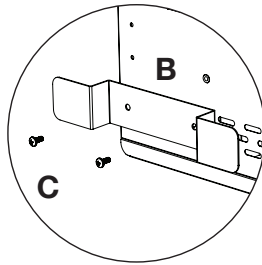



- 2 Insert each bolt into a lock washer, then a flat washer, then use to attach the casters to the Dolly.

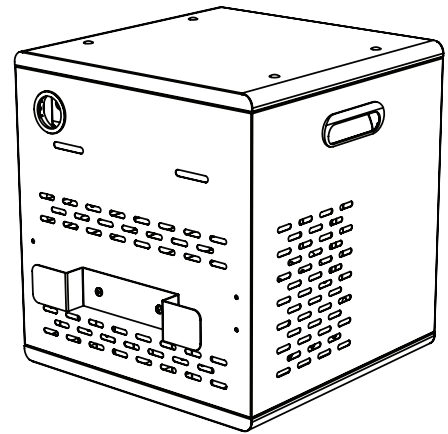


- 3 Remove the drawer from the bottom/lower cabinet by pressing the release lever on each side of the drawer track.

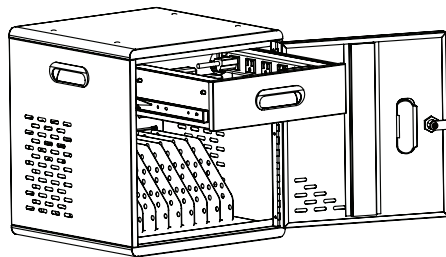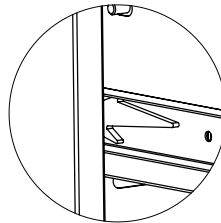


- 4 Remove the rubber caps from the top of the cabinet.

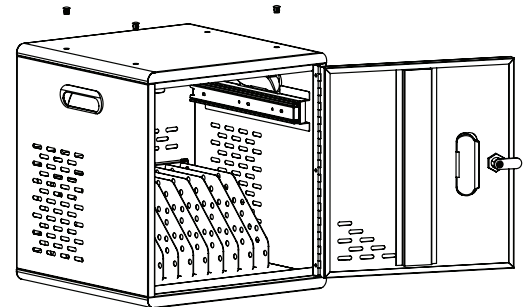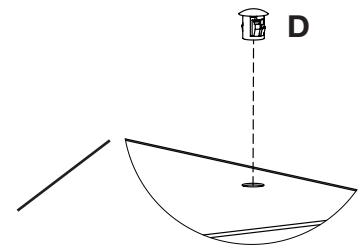

- 5 Position a second cabinet on top, aligning the threaded mount holes.

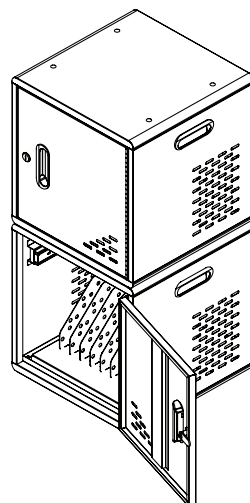

- 6 Using the thumbscrews attach the lower Cabinet to the upper Cabinet.

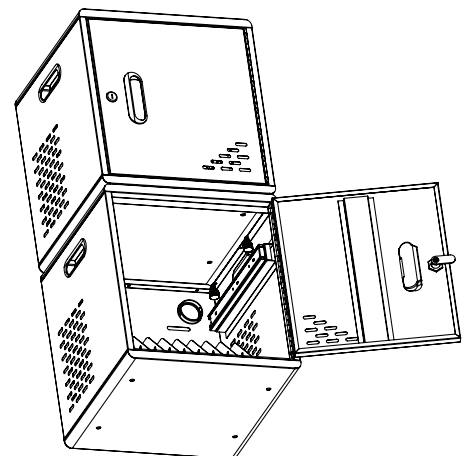


LLMCDP Modular Charging Cabinet – Double Dolly

Assembly Instructions


Tools Required:

Phillips Head Screwdriver



Parts Key

A x2

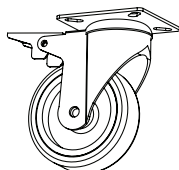


Caster,
Locking

B x2



Caster,
Non-Locking

C x16



Bolt,
Phillips Head

D x16



Lock Washer

E x16



Flat
Washer

F x8




Thumbscrew

1


Flip the Dolly over and position the casters over the corresponding threaded mount holes.

IMPORTANT: Position the locking casters on the end next to the power strip.

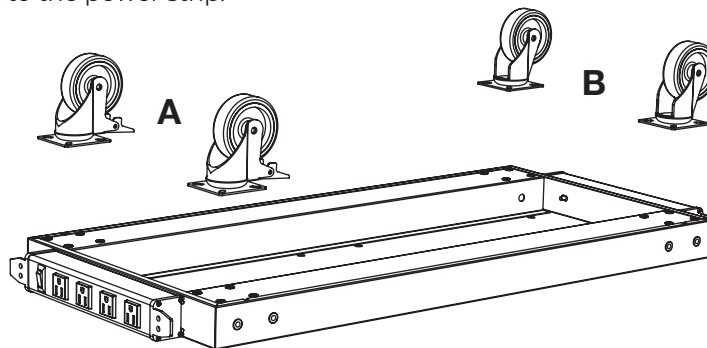

2




Insert each bolt into a lock washer, then a flat washer, then use to attach the casters to the Dolly.

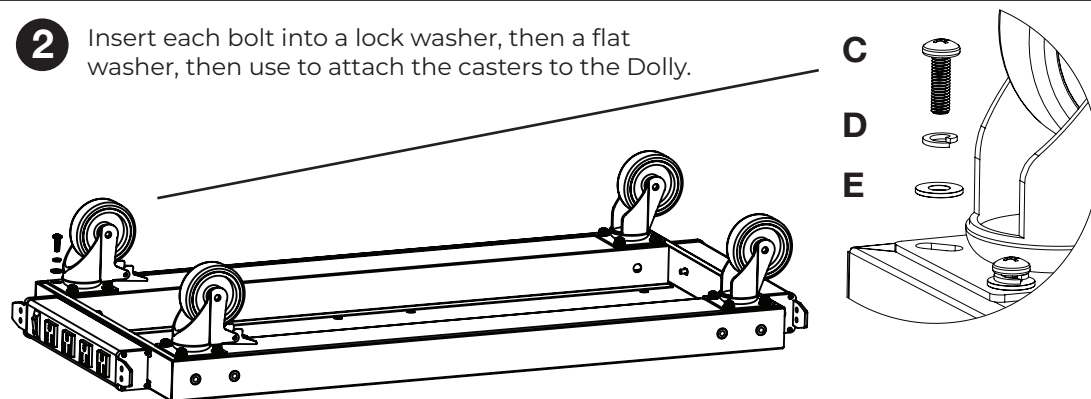

3

Using the thumbscrews, attach the Modular Charging Cabinets.

IMPORTANT: Position the Charging Cabinets so the cabinet doors face perpendicular to the edges of the Dolly with the power strips.

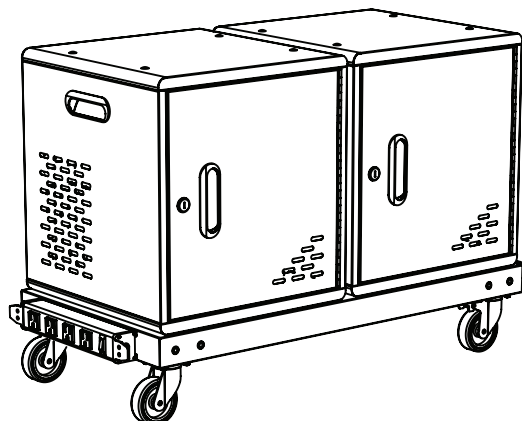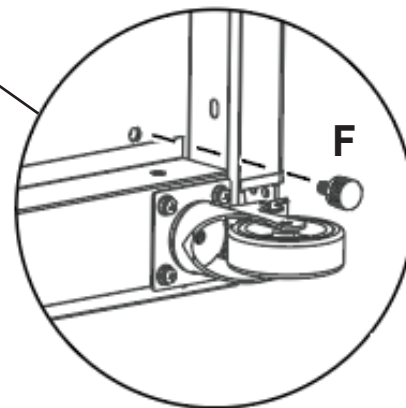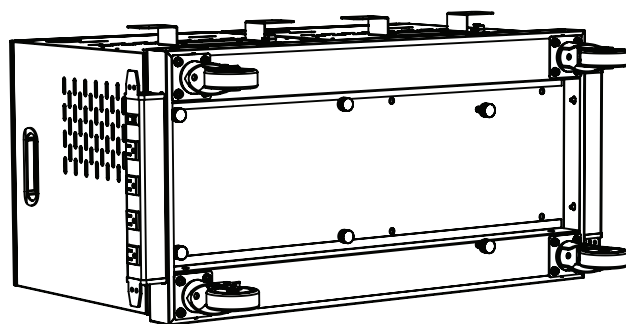


LUXOR

WORKSPACES

www.luxorworkspaces.com
800-323-4656

LLMCDC Modular Charging Cabinet - Dolly Connection Plate Assembly Instructions


Tools Required:
Phillips Head Screwdriver



* Phillips head bolts come with the Dolly assemblies.
** Thumbscrews come with the Modular Charging Cabinet assemblies.


Parts Key

A x1

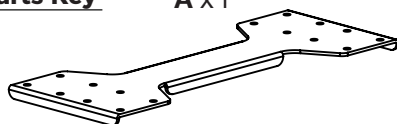

Connection Plate

B x4

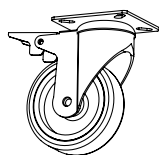

Caster,
Locking

C x4



Caster,
Non-Locking

D x32



Bolt,
Phillips Head

E x32



Lock Washer

G x8



Thumbscrew

F x32




Flat
Washer

1


Flip the Dollies over, position them end-to-end with the power strips facing out, and position the casters at each corner over the corresponding threaded mount holes.

IMPORTANT: Position at least one set of locking casters on one end. If desired, you can place a locking caster at all four corners.

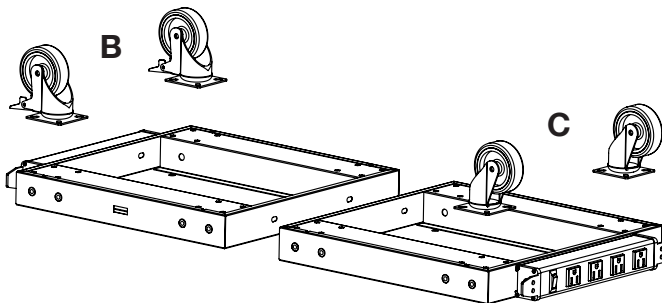


2

Position the Connection Plate over the corresponding threaded mount holes where the two Dollies are joined.

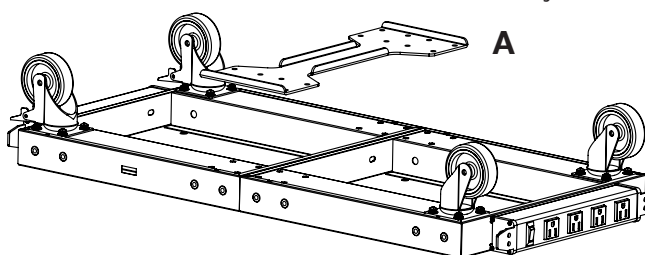


3

Insert each bolt into a lock washer, then a flat washer, then use 16 bolts to attach the casters to the Dollies.

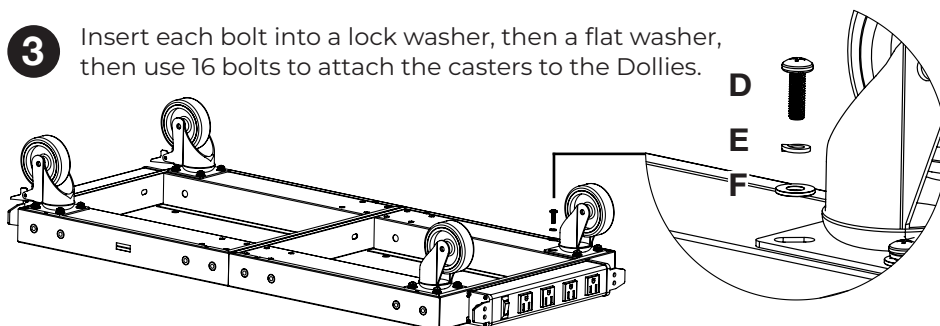




4

Use the remaining 16 bolts to attach Connection Plate to the Dollies.

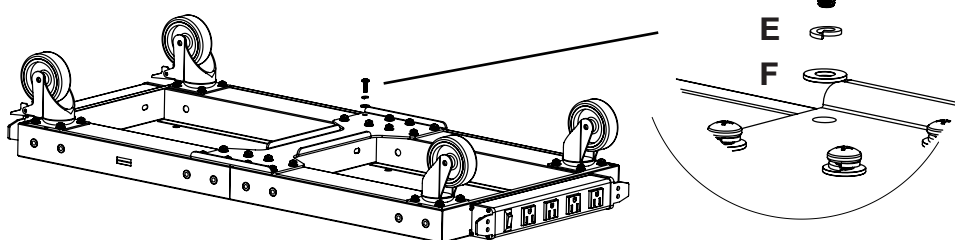

5

Using the thumbscrews, attach the Modular Charging Cabinets.

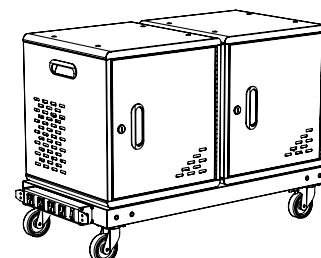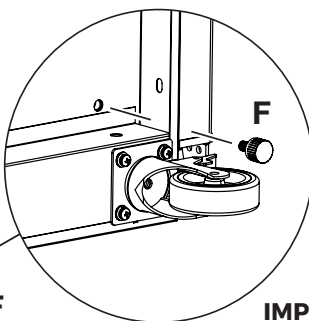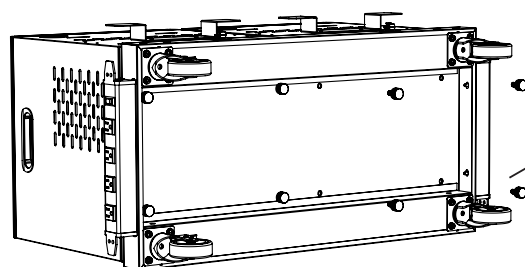


IMPORTANT: Position the Charging Cabinets so the cabinet doors face perpendicular to the power strips.

LLMCPH Modular Charging Cabinet – Dolly Handle Assembly Instructions

Parts Key

B x4

A x1

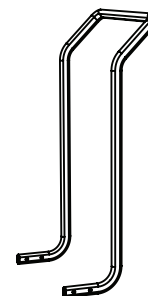

Handle



Bolt, Socket Head


C x4



Split Washer

- 1 Line the handle up with the corresponding threaded mount holes on the sides of the Dolly.

NOTE: While the handle can be attached to either end, it's generally best to attach the handle to the end with the power strip and caster locks.

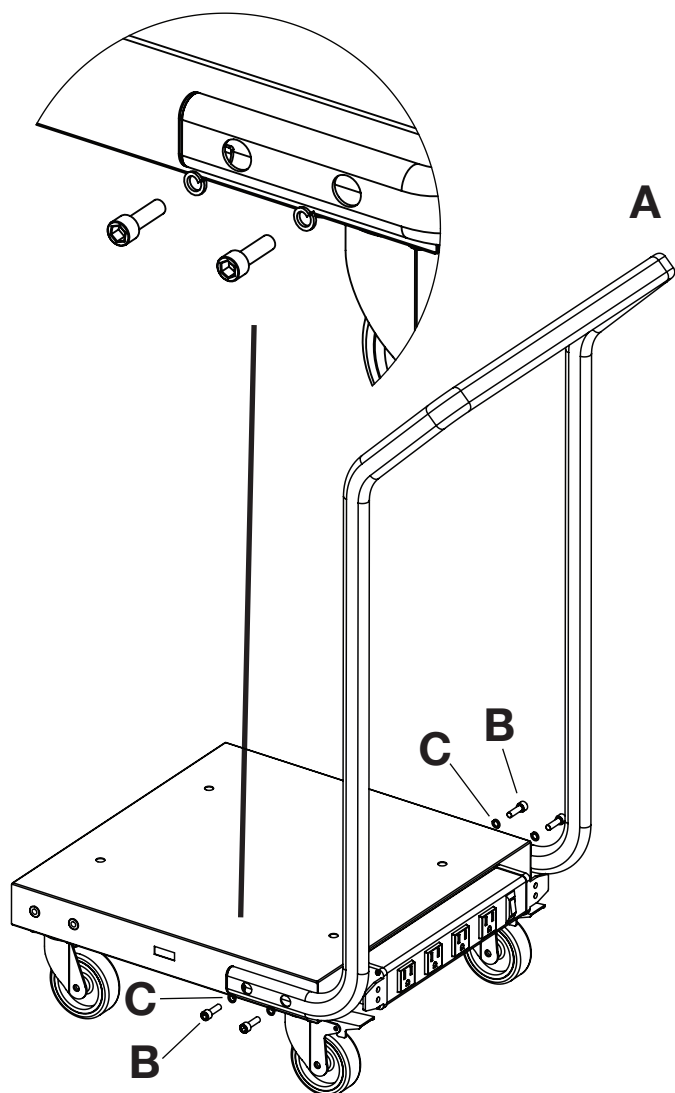

- 2 Use the socket head bolts and split washers to attach the handle to the Dolly.

