Bellman Cart

ASSEMBLY INSTRUCTIONS



STEP 1

Lay out all the components: bag of hardware (12 small bolts, 6 big bolts), 2 pneumatic swivel casters, 2 pneumatic stationary casters, base board, 2 side handles, a top connector.



STEP 2


Lay the base board upside down and screw in casters. Make sure that 2 swivel casters are on one side (side with the two holes closest to each other) and 2 stationary casters are on the other. Fasten with wrench.





STEP 3

Leave large corner hole open on each caster for bolt to install the handles. These screw directly into the side bars.

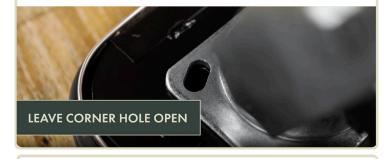

STEP 4

Flip the base over onto the casters and insert two large bolts with fasteners into large hole. Screw in one of the sides and fasten with a wrench. Put the 2 metal circles underneath each side bar handle on the carpet.



continued on next page


Bellman Cart

ASSEMBLY INSTRUCTIONS



STEP 5

Repeat step 4 with the other side railing.

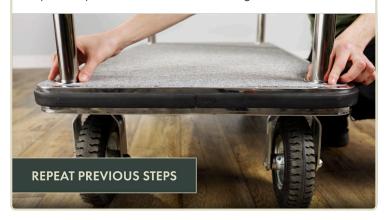

STEP 6

Attach top crossbar. Use screws to tighten top bar. Fasten screws with a wrench.



STEP 7

Tighten all screws and bolts to ensure everything is tightly in place. If wheels feel out of air, use an air pump to fill tires to desired air pressure.

