Bucket Barstool

ASSEMBLY INSTRUCTIONS



CONTENTS: A Frame 1/PC



HARDWARE:

C Bolts 4/PC



Plat Washers 4/PC



HARDWARE NEEDED:


 Phillips Screwdriver or Allen wrench

NOTES:

- Inspect all pieces for damage before assembly. Do not assemble if any pieces are broken or damaged. Ensure you have all required pieces before assembly.
- 2. Power drill is optional for assembly.

STEP 1

Unfasten bolts and flat washers from the bottom of the cushion by hand. Place to the side.

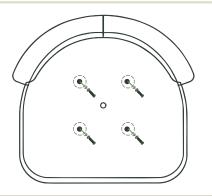


STEP 4

Place the cushion on the swivel, aligning the front of the swivel with the front of the seat. The seat should be titled slightly backwards.



STEP 2

Ensure swivel plate is fastened tightly to the frame. Rotate top piece of the swivel so that all four holes are accessible.



STEP 5


Align the four swivel holes with the holes in the bottom of the cushion and use an allen wrench to insert and tighten the bolts. Ensure all bolts are inserted with a flat washer attached.





STEP 3

Locate the front of the barstool by finding the "front top" text & arrow or the highest side of the swivel.

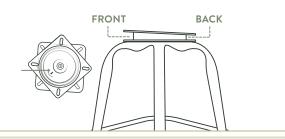

- CLEANING & MAINTENANCE:
- Periodically tighten bolts as needed
- Wipe chair with slightly damp cloth