

# MILLENNIUM BOLT DOWN BASE ASSEMBLY INSTRUCTIONS

## PARTS

(A)



Dust Cover  
1PC

(B)



Base Plate  
1PC

(C)



Column/Spider x1  
1PC

(D)



Serrated Flange Bolt  
1PC

(E)




Tabletop Screws  
8PCS

## TOOLS

### Tools not included:

- Wrench
- Screwdriver
- Drill (optional)

## STEP 1

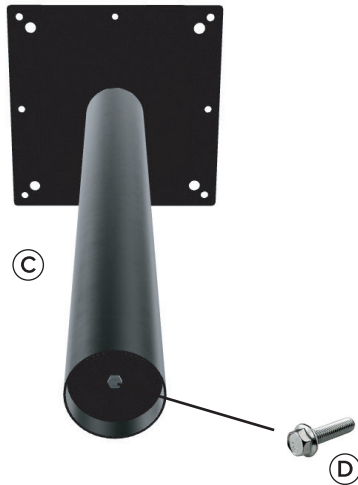

Flip the column and spider upside down with the spider resting on the ground. Remove the bolt from the bottom of the column.

## STEP 2



Slide dust cover onto column, upside down.

## STEP 3



Place base plate on column and secure with bolt

## STEP 4



Flip the assembled base right side up

# MILLENNIUM BOLT DOWN BASE ASSEMBLY INSTRUCTIONS

## STEP 5



Place base plate at the desired location and bolt to the floor. Slide dust cover down to cover the base plate. (*Mounting hardware is not included, professional installation recommended.*)

## STEP 6



Slide dust cover over the mounting plate. The tabletop can now be mounted to the base.