



## Personal Portable Safety Partition Installation Instructions

### Components included in this Kit:



1. (1) Screen Assembly
2. (2) Posts, Side
3. (2) Foot, 12"
4. (2) 5/16-18 x  $\frac{3}{4}$ " Hex Bolt
5. (2) Foot Adapter, C-Bracket
6. (8) Screw, Pan Head 10-32 x 1-1/2" L.
7. (8) Nut, 10-32
8. (8) Washer, Flat, #10

### Assemble the Unit

- Assemble the Unit A. Attach each Side Post to the Top Beam with two (2) Screw, Pan Head 10-32 x 1-1/2" L, two (2) Washer, Flat, #10, and two (2) Nut, 10-32.
- B. Attach the Bottom Beam to the ideal hole on the lower end of the Side Posts using one (1) Screw, Pan Head 10-32 x 1-1/2" L., one (1) Washer, Flat, #10, and one (1) Nut, Lock 10-32 each.
- C. Adjust the tension of the Screen by sliding the Bottom Beam up or down and tightening the Nut when the desired tension is achieved.
- D. Using one (1) Foot, one (1) 5/16-18 x  $\frac{3}{4}$ " Hex Bolt, one (1) Foot Adapter, and (1) "C" Bracket, build the Foot Assembly. See Exploded View.

Note: Foot Adapter, C-Bracket orients so that the 10-32 screw fits beneath the top flange to hold the foot in place.

- E. Slide the Foot Assembly into the bottom of the Side Post.
- F. Using one (1) Screw, Pan Head 10-32 x 1-1/2" L, one (1) Washer, Flat, #10, and one (1) Nut, Lock 10-32, attach the Foot Assembly using the bottom hole on the Post.

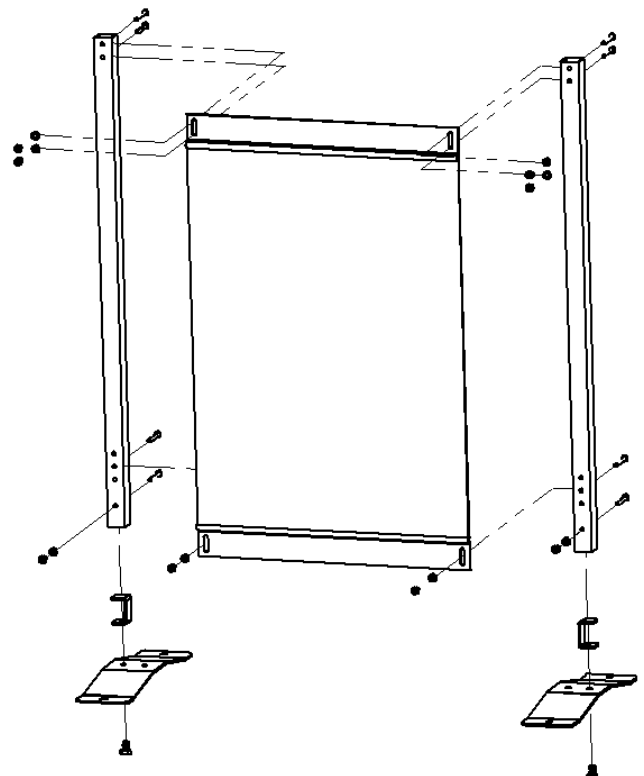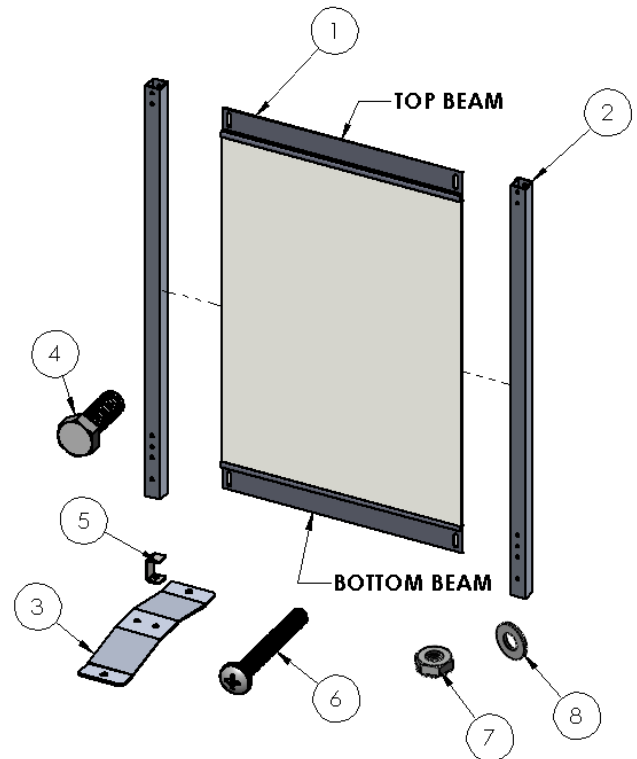

**NOTE: Seek the help of a professional, or contact Technical Support, if you are having trouble assembling your Personal Portable Safety Partition.**