


MOBILE RECEIVING DESK - 257RD2224C

ASSEMBLY INSTRUCTIONS




PARTS

- | | |
|--|---|
| A (2) Side Underframe | J (1) Drawer Box |
| B (2) Top Horizontal Tube | K (1) MS743 Lock |
| C (1) Shelf | L (1) Top Cover Plate |
| D (4) Cross recessed pan head screw | M (1) Top Storage Compartment |
| E (4) ¼" Flat Washer | N (4) M6 x 12mm Cross Recessed Flat Head Screw |
| F (4) ¼–20" Nylon Lock Nut | O (4) M6 Flat Washer |
| G (12) ⅝–18" x 1½" Hex Screw | P (4) M6 Flange Nut |
| H (8) ⅝–18" Nylon Lock Nut | Q (2) Caster with Break |
| I (8) ⅝–18" Flat Washer | R (2) Caster without Break |

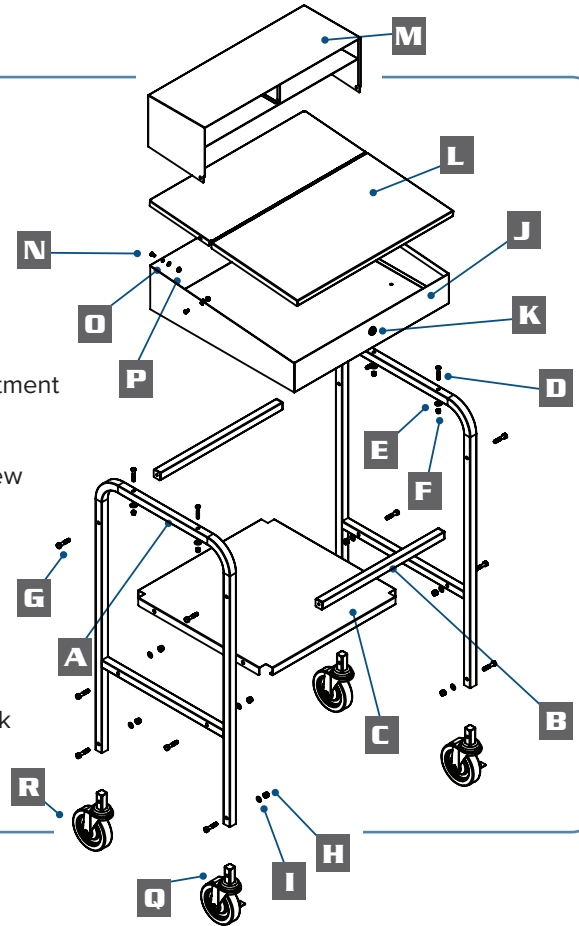


1

Figure 1

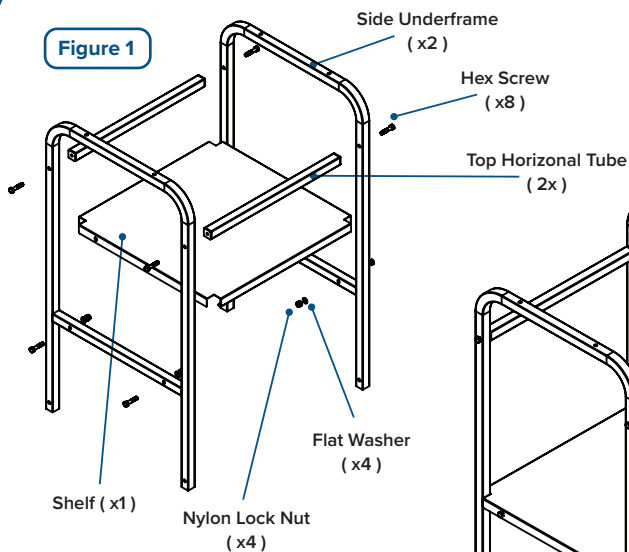

Install the underframes and the shelf. Use ⅝–18" x 1½" hexagon screws to install the top horizontal pipes and use ⅝–18" x 1½" hexagon screws, flat washers, and nylon lock nuts to fix the shelf. See figures 1 & 2.

Figure 2

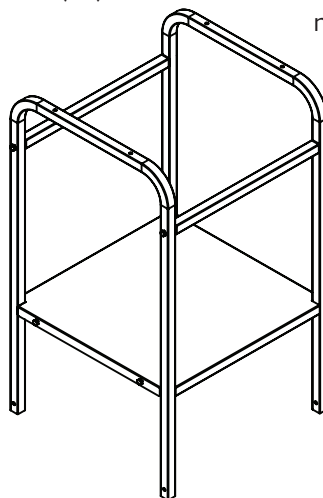


MOBILE RECEIVING DESK - 257RD2224C

ASSEMBLY INSTRUCTIONS




2

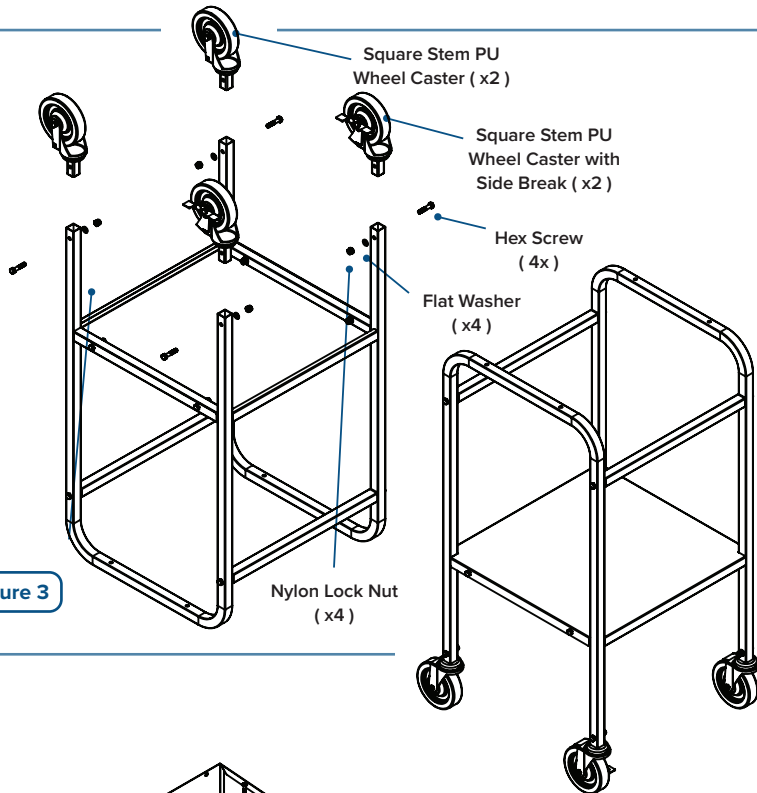

Install the casters. Turn around the assembled under frames, insert the square stems of the casters into the square tubes, align the holes, and fix with $\frac{5}{16}$ –18" x $1\frac{1}{2}$ " hexagon screws, flat washers, and nylon lock nuts. See figures 3 & 4.

Figure 4

3

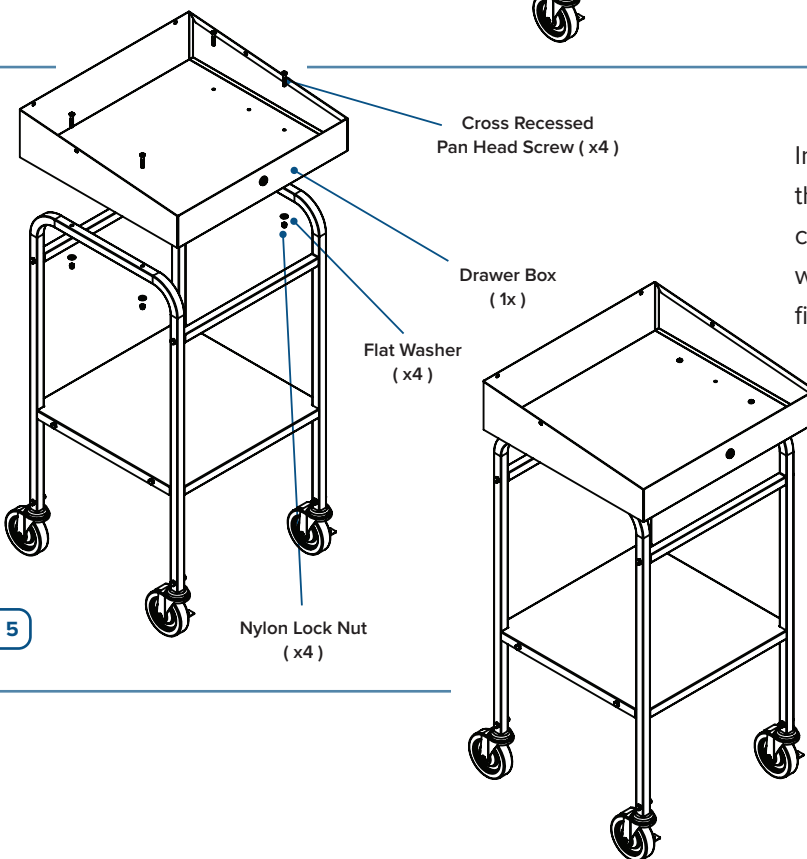

Install the drawer box. Fix the box to the under frames with $\frac{1}{4}$ –20" x $1\frac{1}{2}$ " cross recessed flat head screws, flat washers, and nylon lock nuts. See figures 5 & 6.

Figure 6

MOBILE RECEIVING DESK - 257RD2224C

ASSEMBLY INSTRUCTIONS



4


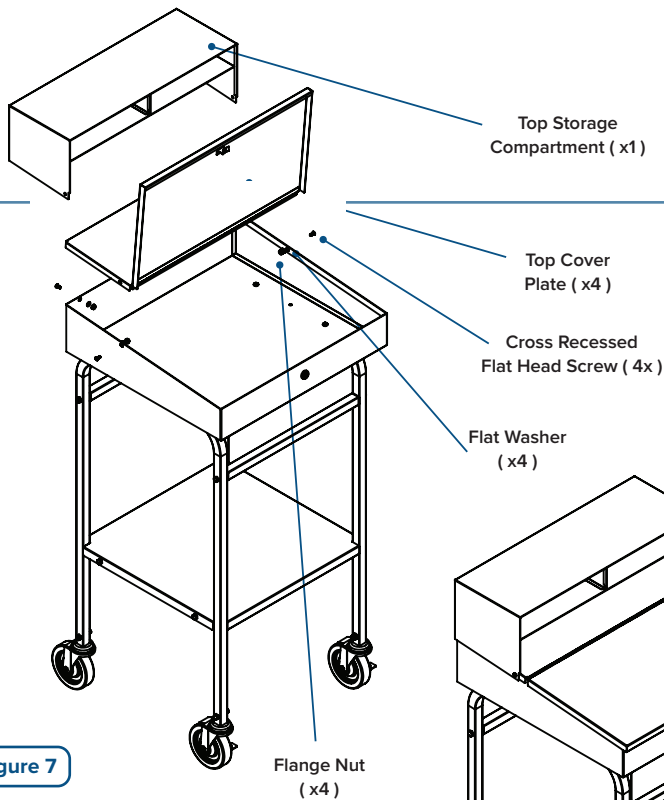


Figure 7

Install the top cover plate and the top storage compartment. Use M6 x 12mm cross recessed flat head screws, flat washers, and nylon lock nuts to fix the top cover plate and the top storage compartment to the drawer box. Turn up the cover plate when installing the screws for convenient assembly. See figures 7 & 8.

Figure 8

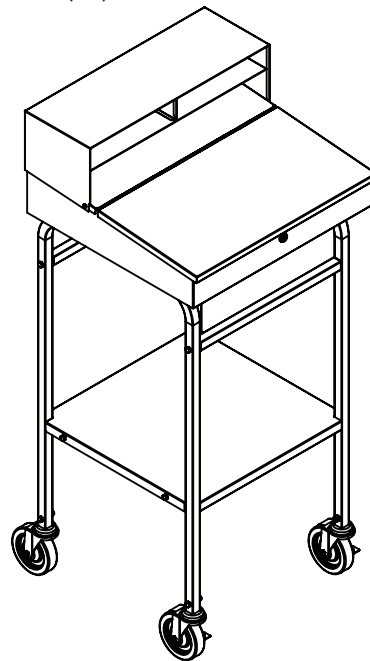

ASSEMBLY COMPLETE