



Mobile Personal Safety Partition Installation Instructions

Components included in this Kit:

1. (1) Clear Curtain Assembly
2. (2) Posts, Side
3. (2) Foot, 12"
4. (6) Screw, Pan Head 10-32 x 1-1/2" L.
5. (6) Nut, Lock 10-32

Assemble the Unit

- A. Attach each Side Post to the Top Beam with two (2) Screw, Pan Head 10-32 x 1-1/2" L. and two (2) Nut, Lock 10-32.
- B. Using one (1) Screw, Pan Head 10-32 x 1-1/2" L. and one (1) Nut, Lock 10-32, attach the Bottom Beam, Side Post, and Foot simultaneously.
- C. Repeat for the other end of the Bottom Beam, the other Side Post, and the other Foot.

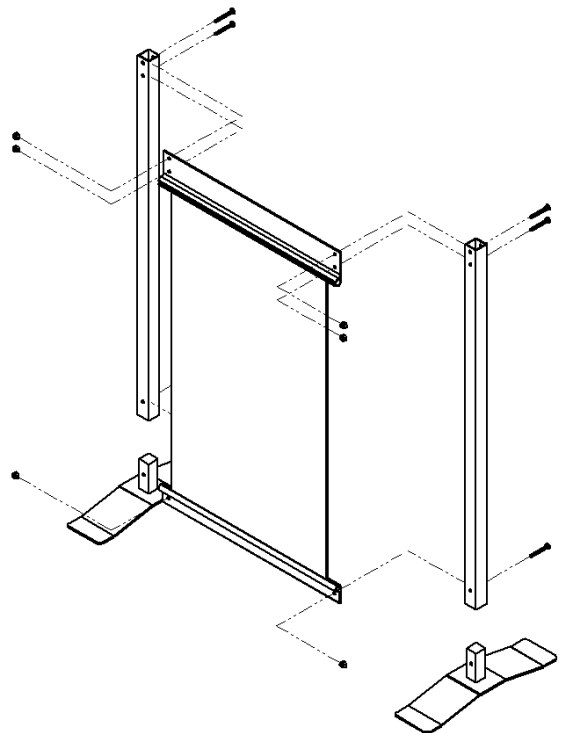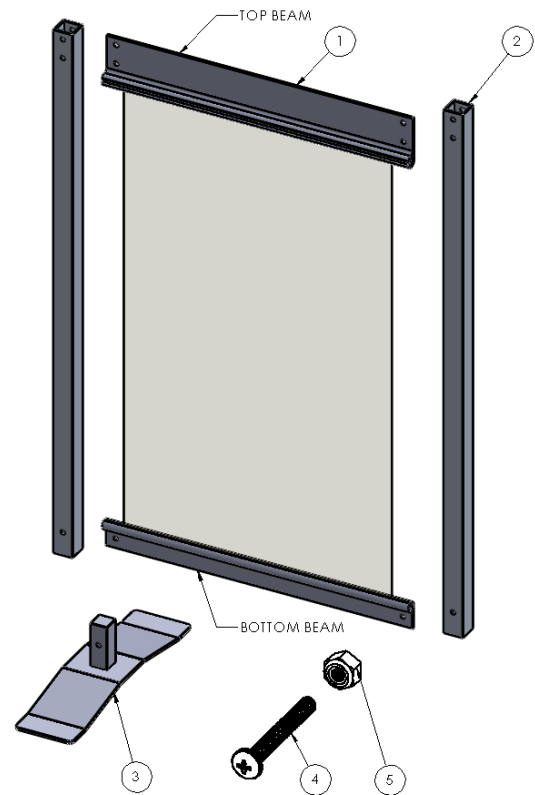

NOTE: Seek the help of a professional, or contact Goff's Technical Support at the number above, if you are having trouble assembling your Mobile Personal Safety Partition.