



**MODFENCE**

# MOD-PICKET

## 6ft Fence Panel Assembly Instructions

### Unpack all contents

#### Contents:

- 1-Top Rail
- 1-Bottom Rail
- 2-Top Rail hooks
- 2-Bottom Rail hooks
- 10-Mod-Vertical Vertical Pickets
- 8-Pop Rivets
- 6-Self-Tapping Screws


#### You Will Also Need:

- Pop Rivet Tool  
(Included with Mod-Posts)
- Tape Measure
- Screw Driver or Drill



### Step 1

Layout Top Rail and Bottom Rail with the screw holes facing up. The bottom rail is only open on one side and should be positioned so the open slots are facing the top rail. Place Rails so the screw holes on the flat side of the panel are facing up.

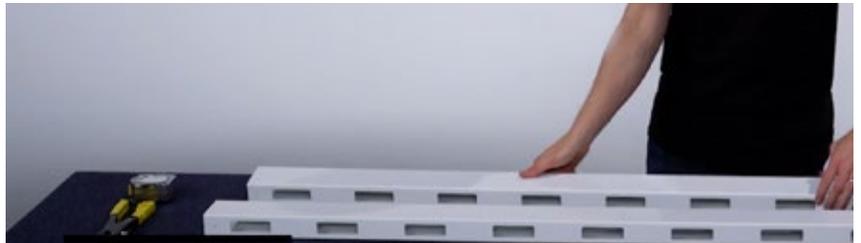

### Step 2

Insert the smaller rail hooks into either side of the Top Rail with the hooks pointing down. Secure the hooks to the rails with the pop rivets.



### Step 3

Insert the larger rail hooks into either side of the Bottom Rail with the hooks pointing down. Secure the hooks to the rails with the pop rivets.



#### Step 4

Insert 4 Mod-Picket Vertical Pickets with red stickers through Top Rail and through to the bottom rail. Position one on each end and every 2 slots. Slide the Pickets down through the Top Rail into the Bottom rail. Ensure Pickets snap into Bottom Rails.



#### Step 5

Hold Pickets to the bottom of the Rail and screw bottom rail to the 4 pickets at the 4 screw holes.



#### Step 6

Measure 25" from bottom rail to bottom of top rail. Screw the top rail to the 4 Pickets at the 4 screw holes.



#### Step 7

Slide remaining pickets through top rail and into bottom rail.



**You have now successfully  
built your Mod-Picket Panel!**

#### Questions?

Reach out to our Customer Support team at:

[Sales@mod-fence.com](mailto:Sales@mod-fence.com)

562-269-1411

[mod-fence.com](http://mod-fence.com)

 **MODFENCE**

