



MODFENCE


MOD-FENCE POSTS

Assembly Instructions

Unpack all contents

Contents:

- 2-Posts Uprights
- 2-Post Bases
- 4-Post Loop Connectors
- 8-White Rivets
- 1-Pop Rivet Tool

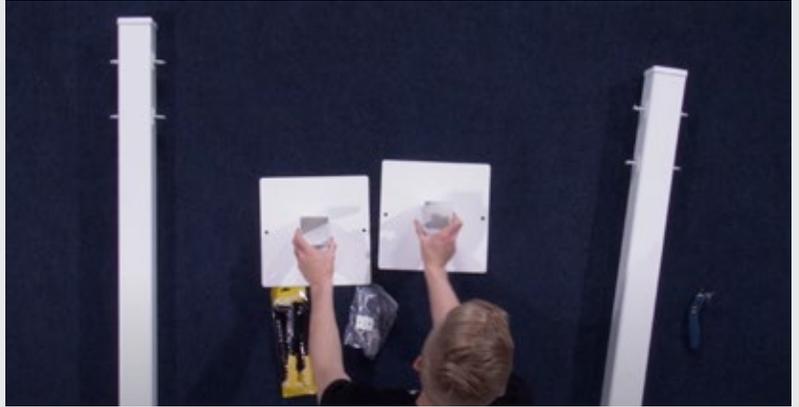

Step 1

Remove nose piece from rivet tool and replace with middle nose piece on the tool shaft. Make sure to save the Pop Rivet Tool as you will need this to build the Mod-Fence Panels.



Step 2

Slide Post Upright onto Post Base. Ensure holes on Post line up with the holes on Base.



Step 3

Align first Post Loop Connector with holes in Post. Rivet Loop Connector to Post using 2 Rivets.



Step 4

Repeat on remaining Post(s) and Connectors.

**You have now successfully
built your Mod-Fence Posts!**

Questions?

Reach out to our Customer Support team at:

Sales@mod-fence.com

562-269-1411

mod-fence.com

