



MODFENCE

MOD-TRADITIONAL

6ft Fence Panel Assembly Instructions

Unpack all contents

Contents:

- 1-Top Rail
- 1-Bottom Rail
- 2-Top Rail hooks
- 2-Bottom Rail hooks
- 13-Mod-Traditional Vertical Pickets
- 8-Pop Rivets
- 6-Self-Tapping Screws

You Will Also Need:

- Pop Rivet Tool
(Included with Mod-Posts)
- Phillips Screw Driver or Drill




Step 1

Layout Top Rail and Bottom Rail with the screw holes facing up. The holes on the Picket fence on both rails should face each other.



Step 2

Insert longer bottom rail hooks into either side of the bottom rail with hooks pointing down. Rivet bottom hooks to bottom rail.

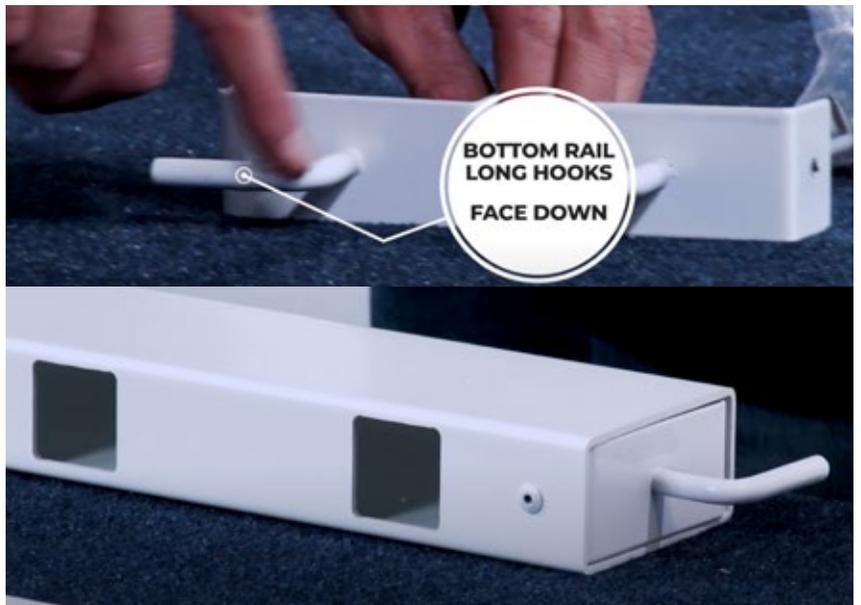

Step 3

Insert shorter top rail hooks into either side of the top rail with hooks pointing down. Rivet top hooks to rail top.



Step 4

Insert the 13 Mod-Traditional Vertical Pickets into bottom rail first, then top rail.



Step 5

Pull rails together tightly and screw top and bottom rails to the pickets at the 6 screw holes.



You have now successfully built your Mod-Traditional Panel!

Questions?

Reach out to our Customer Support team at:
Sales@mod-fence.com
562-269-1411
mod-fence.com

