### MODULAR-KART™ ASSEMBLY INSTRUCTIONS

#### K3624B and KT3624B

Available in Grid or Solid Top

K4824B and KT4824B


Step 2

K6624B and KT6624B


#### **COMPONENTS:**



Panels: (2) 2'x3' Legs: (4) 24" Internal Stackers: (4) Casters: (4)



Step 1 Step 2




(4) Internal Leg Stackers Step 3





#### **COMPONENTS:**




Panels: (2) 2'x4' Legs: (6) 24" Internal Stackers: (6) Casters: (6)

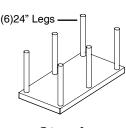

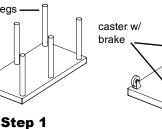

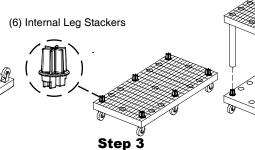

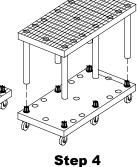

**COMPONENTS:** 



Panels: (2) 2'x5.5' Legs: (6) 24" Internal Stackers: (6) Casters: (6)

Step 1

(6) 24" Legs

brake

(6) Internal Leg Stackers caster w/ Step 3




#### **COMPONENTS:**



Panels: (2) 2'x8' Legs: (8) 24" Internal Stackers: (8) Casters: (8)



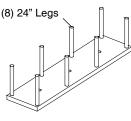

Step 1

## caster w/ (8) Internal Leg Stackers brake

K9624B and KT9624B

Step 2

Step 2



#### Step 4

Align Kart panel with posts over the leg stackers and push all the way down until the leg stackers are inserted into the posts.

#### Step 1

Lay one of the Kart panels up-side-down on the floor and insert 24" posts into sockets as shown. Return to upright position.

#### Step 2

Invert the next Kart panel on the floor and insert Casters into sockets as shown. Place Casters with Brakes in opposite corners. Return to upright position.

#### Step 3

Insert Internal Leg Stackers over outside row sockets of Kart panel with Casters as shown.

Step 3

## Modular-Kart™


#### ASSEMBLY INSTRUCTIONS

#### K3624A

#### **COMPONENTS:**



Panels: (1) 2'x3' Legs: (4) 24" Internal Stackers: (4)

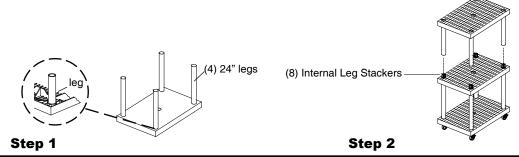


K6624A

K9624A

#### COMPONENTS:



Panels: (1) 48"x24" Legs: (6) 24" Internal Stackers: (6)

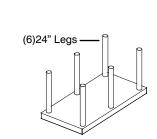

Step 1


Step 1

K4824A


(6) Internal Leg Stackers


Step 2

#### **COMPONENTS:**




Panels: (1) 2'x5.5' Legs: (6) 24" Internal Stackers: (6)

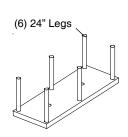


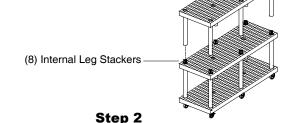

#### COMPONENTS:



Panels: (1) 2'x8' Legs: (8) 24" Internal Stackers: (8)

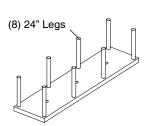



(8) Internal Leg Stackers

Step 1

# **Step 1**Lay one of the Kart panels up-side-down on the floor and insert 24" posts into sockets as shown. Return to upright position.


#### Step 2

Invert the next Kart panel on the floor and insert **Casters** into sockets as shown. Place **Casters with Brakes** in opposit corners. Return to upright position.



#### **ASSEMBLY INSTRUCTIONS**

2- Options to Secure Legs to Panels

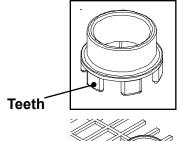



Leg Collar

#### How to use the Leg Collar


First, place the collar over socket aligning teeth of collar to fit through grids.

Second, Leg is inserted into the leg collar.

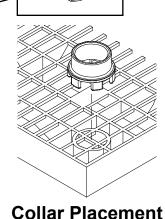


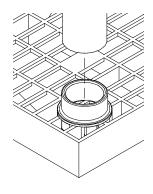


Leg Placement on Collar

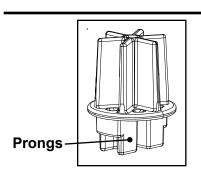

#### Internal Leg Stacker

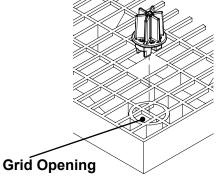

Internal Leg Stacker
Placement

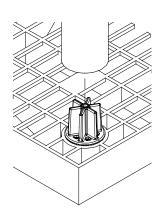

Leg Placement on Internal Leg Stacker

# How to use the Internal Leg Stacker

First, Place the stacker over socket aligning the prongs with the D-shaped holes, and push down.

Second, leg is inserted over the leg stacker.