





Assembly Instructions

MODEL NO.N102


DESK SHELL

TUN010CL	TUN011KC		TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	
								
Cam lock 14Pcs+1Pc(spare)	Klix Cam 14Pcs+1Pc(spare)	Cam Cover 14Pcs+1Pc(spare)	Dowel 9Pcs+1Pc(spare)	Adjustable Glide 4Pcs	6Hole L-Bracket 5Pcs	Screw#4*5/8" 30Pcs+1Pc(spare)	60mm Black Grommet 2 Pcs	Cover 4Pcs+1Pc(Spare)


STEP1

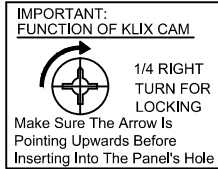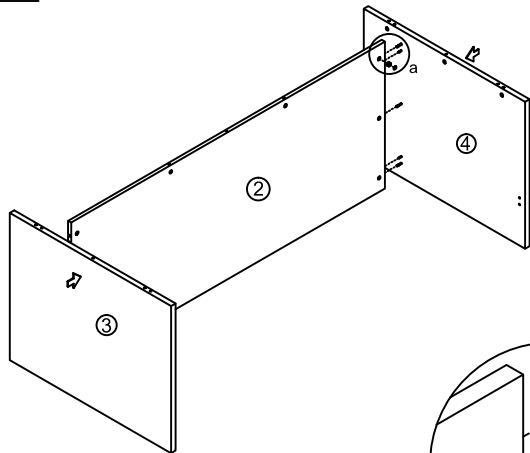







STEP2

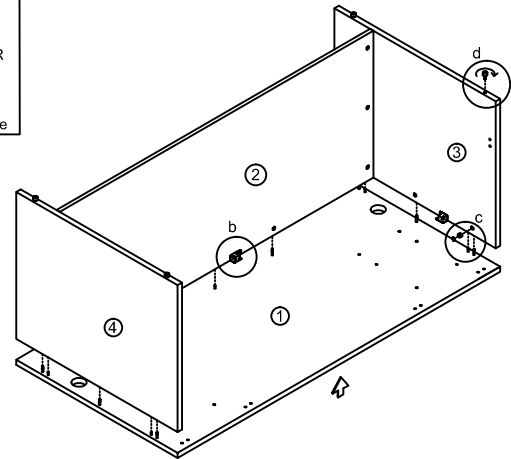

STEP3

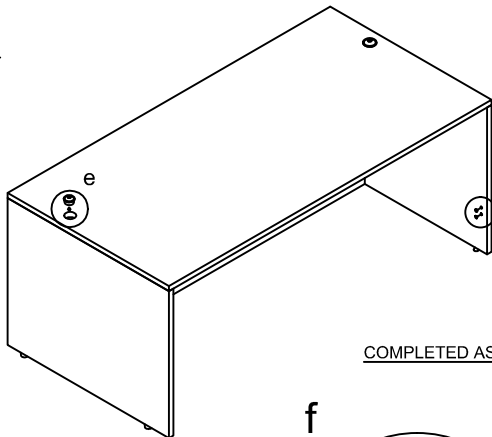

COMPLETED ASSEMBLY

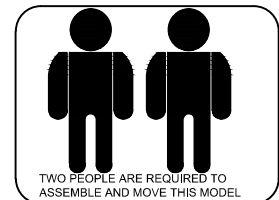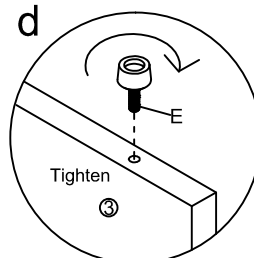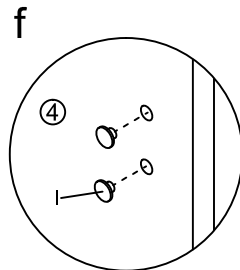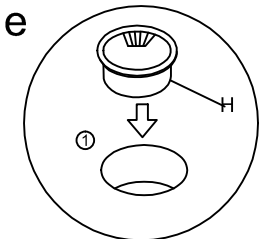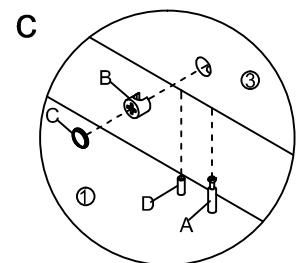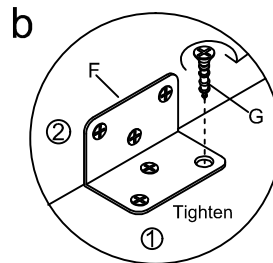

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.boschair.com


Assembly Instructions

MODEL NO.:N196

Return

TUN010CL	TUN010KL		TUN026	TUN021AG	TUN013LB	TUN0166C	TUN0191B			TUN0166G	
											
Cam lock 7Pos+1Pos(spare)	Klix Cam 7Pos+1Pos(spare)	Cam Cover 7Pos+1Pos(spare)	Dowel 3Pos+1Pos(spare)	Adjustable Glide - 4 Pos	Slide L-Bracket - 3Pos	screw 1/4" 12Pos	L-Bracket 3Pos	Cover 3Pos	Cover 3Pos	60mm Black Glueball - 2 Pos	90°12 screw 12Pos

STEP1

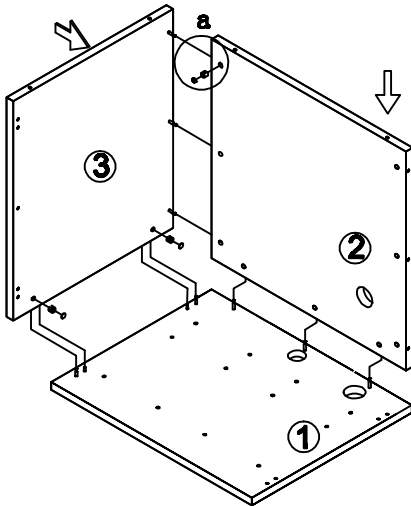


IMPORTANT:
FUNCTION OF KLIX CAM




1/4 RIGHT
TURN FOR
LOCKING


MAKE SURE THE ARROW IS
POINTING UPWARDS BEFORE
INSERTING INTO THE PANELS
HOLE

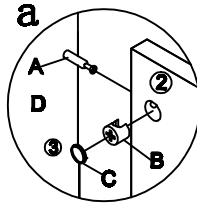







STEP2

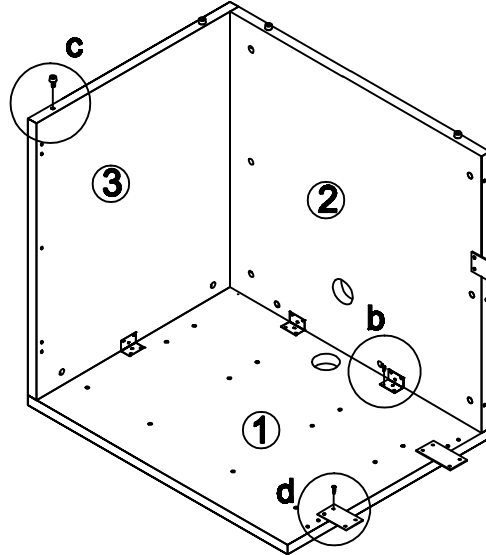

STEP3

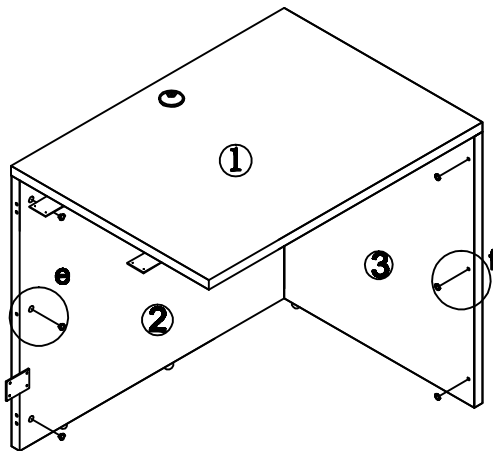

COMPLETED ASSEMBLY

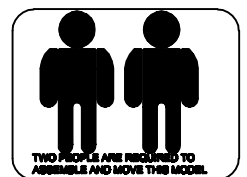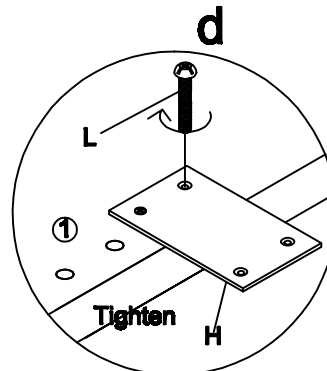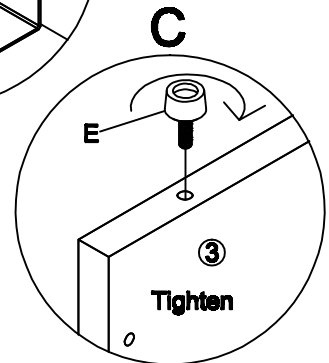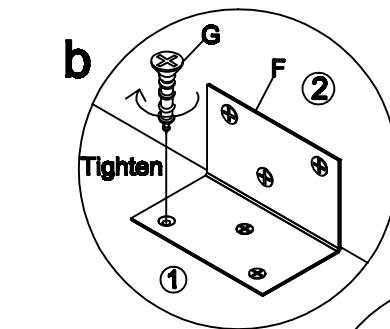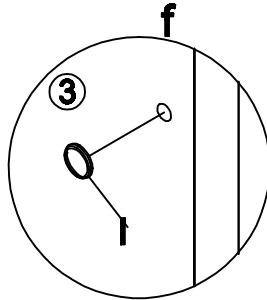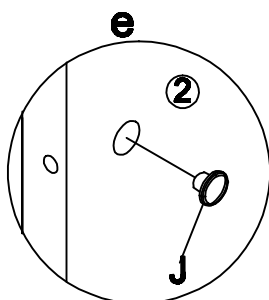


IMPORTANT NOTE:



- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

MODEL NO.: N166





BOX/FILE PEDESTAL

TUN030AG	TUN005MH	TUN001FC	TUN002AB	
A  Adjustable Glide 4 Pcs	B  32mm Metal Scallop Shape Handle 3 Sets	C  File Clip 2 Pcs+1 Pc(spare)	D  300*16*3mm Aluminium Bar 1 Pcs	E  Keys 1 Set

STEP1

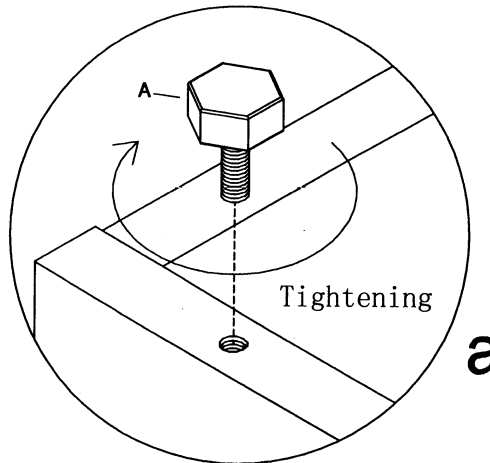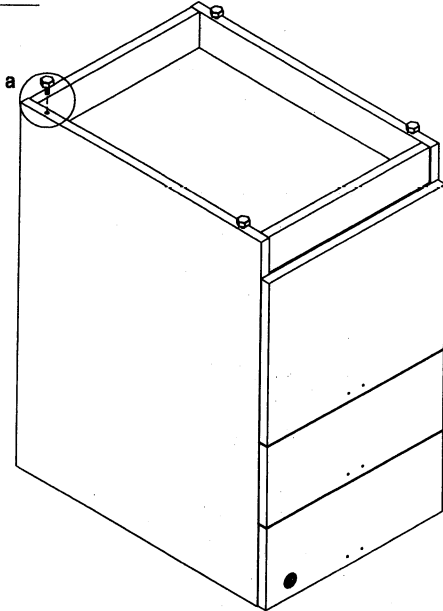

STEP2

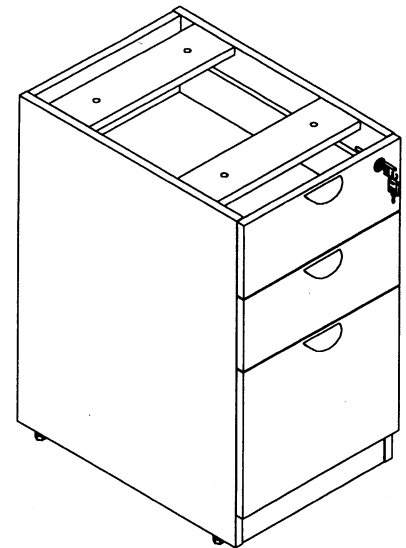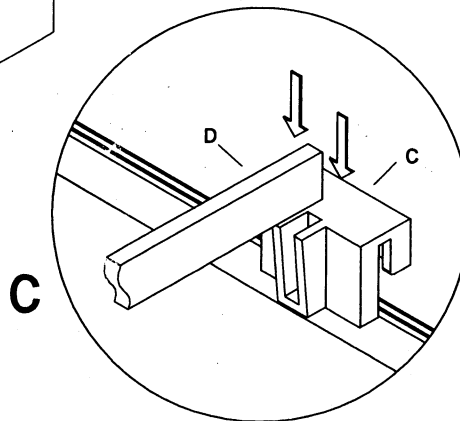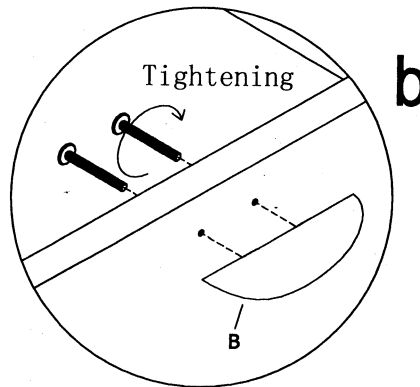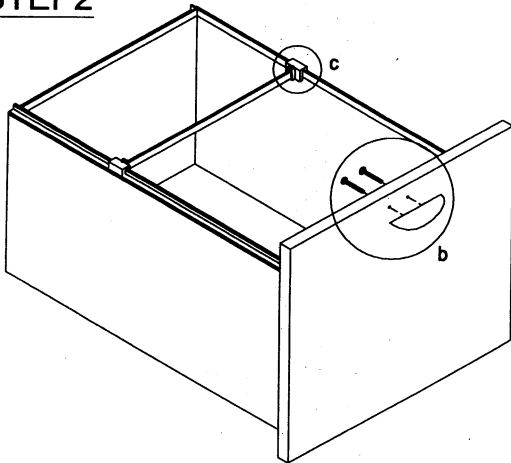

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.