



FRYCLONE™

09/23



#2590PMC10, #2590PMC16, #259SMRTPLB, #259SMRTPLXB

OIL PAIL MOBILE BASE ASSEMBLY INSTRUCTIONS

INCLUDED PARTS

- | | |
|-------------------|-----------------------------------|
| (4) NUTS | (4) CASTERS |
| (4) SCREWS | (1) FRAME BAR TOP (FRYCLONE LOGO) |
| (4) FLAT WASHERS | (1) FRAME BAR BOTTOM |
| (4) SPLIT WASHERS | (1) PHILLIPS HEAD SCREWDRIVER |


REQUIRED TOOLS

ADJUSTABLE WRENCH

STEP 1

INSERT CASTERS THROUGH THE HOLES ON THE ENDS OF THE FRAME BARS.

Inserte las ruedas a través de los agujeros en los extremos de las barras del estructura.

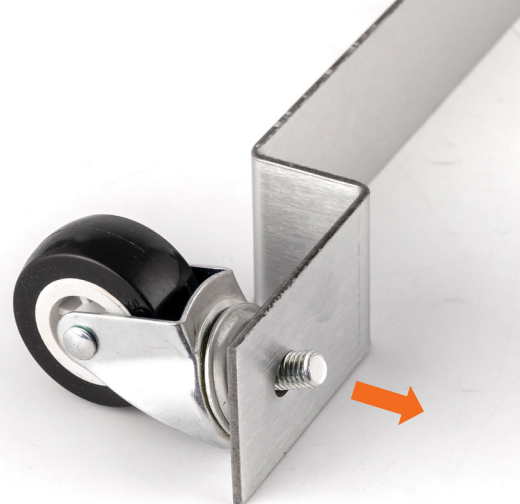

STEP 2

ATTACH THE WASHERS AND NUTS TO EACH CASTER STEM IN THE MANNER SHOWN AND SECURE.

Fije las arandelas y tuercas al tallo de cada rueda como se muestra y asegúrelas.



STEP 3

LINE UP THE SCREW HOLES IN THE CENTER OF THE FRAME BARS. (THE FRAME BAR WITH THE FRYCLONE LOGO WILL GO ON TOP)

Alinee los orificios para tornillos en el centro de las barras del marco.
(La barra del marco con el logo de Fryclone irá arriba)



STEP 4

FASTEN THE FRAME BARS TO EACH OTHER USING SCREWS.

Fije las barras del marco entre sí con tornillos.

