


PHDSCOVR Splash Cover Installation Instructions


For 1200W, 1800W, and 2100W Space Saver Microwaves

Rev. 07.15.2019


Step 1: Fit the cover to the grooved splash cover cutout (this part is located on the roof of your microwave).

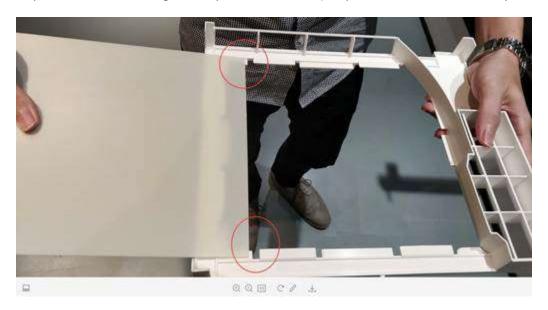

Step 2: Slide the cover between the tabs, until it is in all the way.

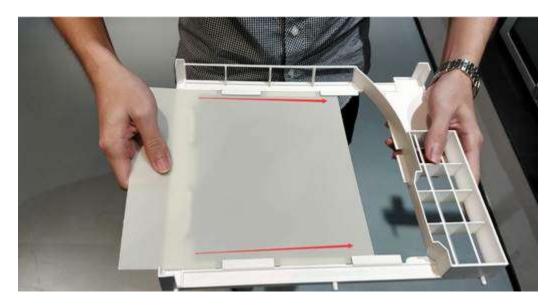

Step 3: Slide the end of the cover under the end tabs to lock it in place.

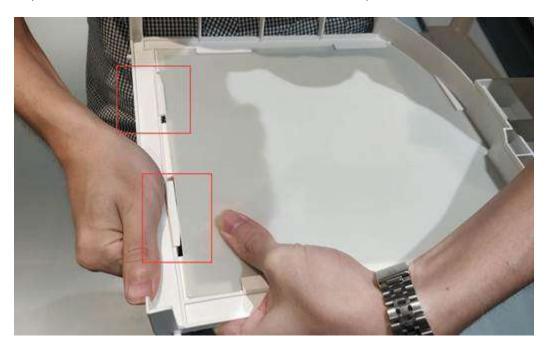

Step 4: Check to make sure that the cover is fixed to the bracket.

