





# PJN3/PH03 SERIES CONVENIENCE SHELF PRODUCT INSTRUCTIONS

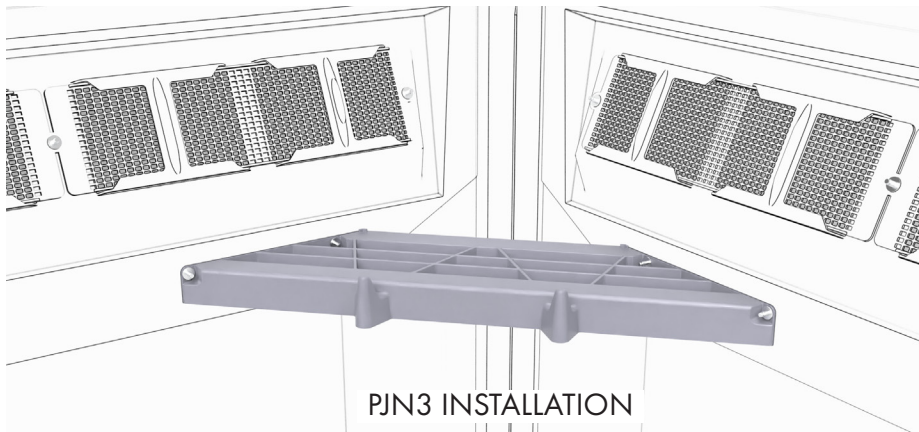

PJN3 INSTALLATION

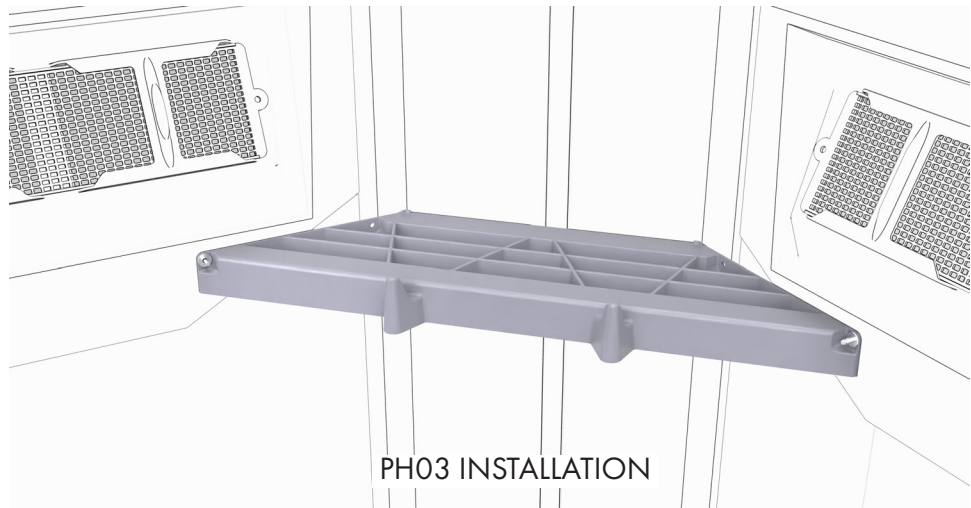

PH03 INSTALLATION


## GENERAL OVERVIEW

The SU3-0002PJ - PJN3/PH03 Series Convenience Shelf is an optional injection molded shelf available in pewter grey for the PJN3 and Comfort XL Series Portable Restrooms. It is designed to fit in the right rear corner. Shipped along with the SU02-0200 - Small Parts Kit that contains all the fasteners necessary for mounting.


## SPECIFICATIONS

Length	23.00 in	58.42 cm
Width	7.25 in	18.42 cm
Depth	1.50 in	3.81 cm
Weight	16 oz	0.45 kg

## FULL SIZE SCALE FASTENERS



(4) PC-000102 Rivet



(4) PC-000106 Washer

## TOOLS REQUIRED FOR ASSEMBLY



Drill



13/64" Drill Bit



Rivet Gun


## INSTALLATION INSTRUCTIONS

**NOTE:** The PJN3 series convenience shelf installation will require two people.

### PJN3 INSTALLATION


#### STEP 1:

Place the shelf in the location as shown to the right. Making sure the shelf is level and tight up against the side wall and rear panel, use a marker and mark the 4 mounting hole locations on the side and rear panel.

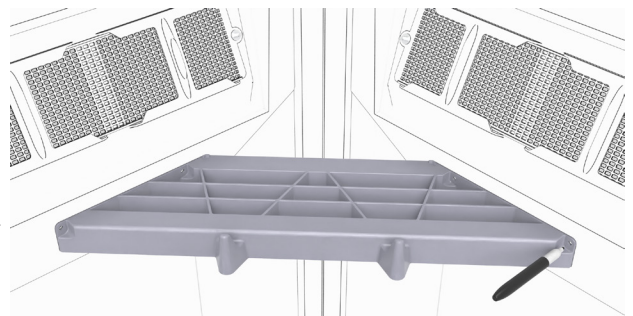

#### STEP 2:

Using a drill with a 13/64" drill bit, drill the mounting holes in the locations that were marked on the side wall and rear wall.

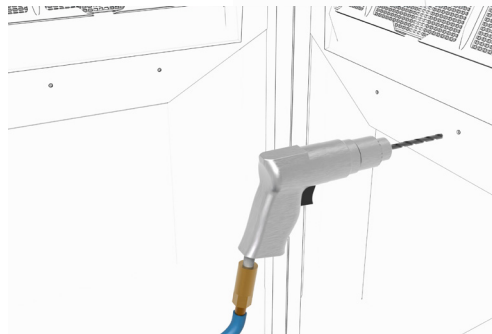


# INSTALLATION INSTRUCTIONS

## PJN3/PH03 CONVENIENCE SHELF

### STEP 3:

Rivet in place using PC-000102 rivets from the outside with PC-000106 washers on the inside.


Installation is complete.

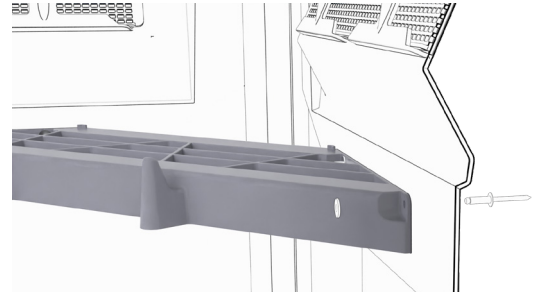

## COMFORT XL INSTALLATION


### STEP 1:

Place the shelf in the location as shown to the right. Making sure the shelf is level and tight up against the side wall and rear panel, use a marker and mark the 2 front mounting hole locations on the side and rear panel.

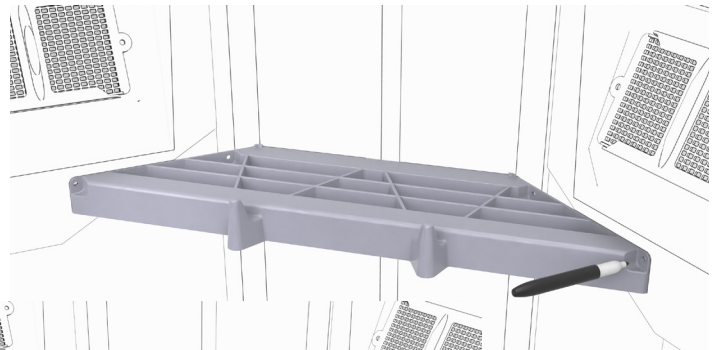


### STEP 2:

Using a drill with a 13/64" drill bit, drill the mounting holes in the locations that were marked on the side wall and rear wall.

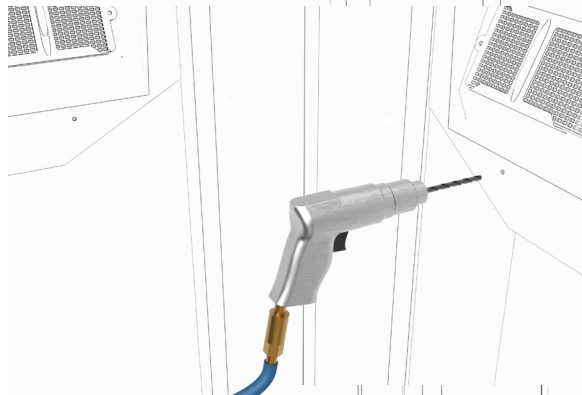

### STEP 3:

Rivet in place using (2) PC-000102 rivets from the outside with (2) PC-000106 washers on the inside.

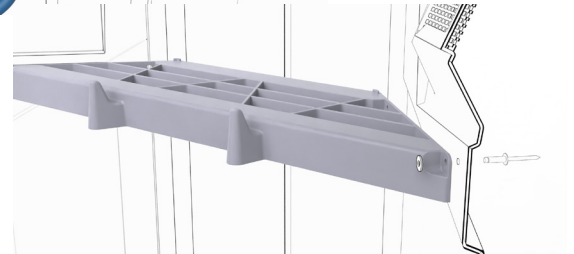


### STEP 4:

Making sure the shelf is level from front to back, from the outside, drill 2 - 13/64" holes through the right rear corner and into the shelf. The holes should be located 3/4" away from the riveted wall of the corner panel and even in height with the rivets located second from the top as shown to the right.

### STEP 5:

Rivet the back of the shelf in place with (2) PC-000102 rivets from the outside with (2) PC-000106 washers on the inside.

Installation is complete

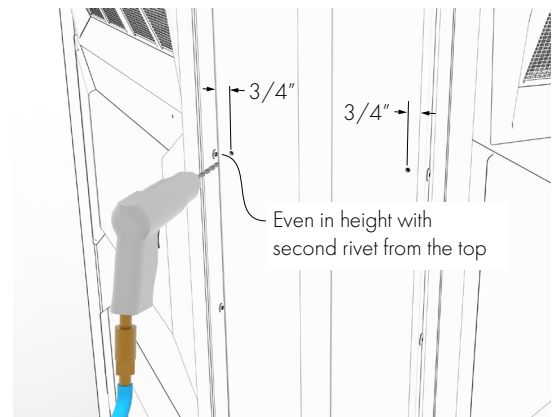

# OUR MISSION STATEMENT

"PolyJohn is a family owned, state of the art, plastics manufacturing company dedicated to providing its employees with a work environment committed to excellence, and its customers with innovative products, services and technology that meet or exceed their requirements."

THANK YOU FOR PURCHASING POLYJOHN PRODUCTS!



POLYJOHN USA  
+1 800-292-1305  
Whiting, Indiana  
[www.polyjohn.com](http://www.polyjohn.com)

POLYJOHN INTERNATIONAL  
UNITED KINGDOM  
+44 (0) 1937-583333  
Yorkshire, England  
[www.polyjohn.co.uk](http://www.polyjohn.co.uk)

POLYJOHN INTERNATIONAL  
CZECH REPUBLIC  
+420 608 876 983  
Karlovy Vary, Czech Republic  
[www.polyjohn.eu](http://www.polyjohn.eu)

POLYJOHN SOUTHERN AFRICA  
+27 (011) 615-3804  
Johannesburg, South Africa  
[www.polyjohn.co.za](http://www.polyjohn.co.za)

POLYJOHN CANADA  
+1 800-465-9590  
Orillia, Ontario  
[www.polyjohn.ca](http://www.polyjohn.ca)  
[www.fr.polyjohn.ca](http://www.fr.polyjohn.ca)

POLYJOHN LATIN AMERICA  
+01 800-953-1307  
Chihuahua, Mexico  
[www.polyjohn.mx](http://www.polyjohn.mx)

POLYJOHN AUSTRALIA  
+61 7 3277 5727  
Brisbane, Australia  
[www.totalsanitationsolutions.com.au](http://www.totalsanitationsolutions.com.au)

POLYJOHN NEW ZEALAND  
+64 (0)27 257 6321  
Auckland, New Zealand  
[www.polyjohn.co.nz](http://www.polyjohn.co.nz)

POLYJOHN SOUTH AMERICA  
+57 318 696 7744  
Bogotá, Colombia  
[www.polyjohn.com](http://www.polyjohn.com)