

Wire Wall Shelving Kit

Mounting Instructions

**TOOLS SUGGESTED
(NOT INCLUDED)**





- Drill
- Level
- Tape Measure
- 3/8" Masonry Drill Bit
- 10mm Socket Wrench

PARTS

- Ⓐ (1) - Regency Shelf
- Ⓑ (2) - Regency Wall Brackets
- Ⓒ (8) - Sleeve Anchor Sets

SLEEVE ANCHOR ASSEMBLY

- ① (8) - Hex Nuts
- ② (8) - Lock Washers
- ③ (8) - Flat Washers
- ④ (8) - Sleeve Anchors
- ⑤ (8) - Threaded Bolts

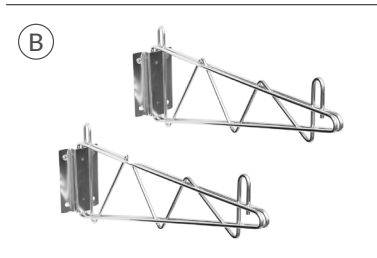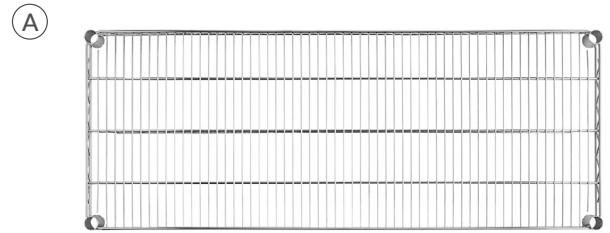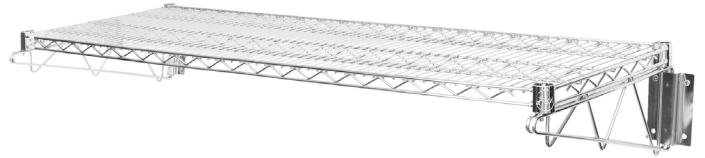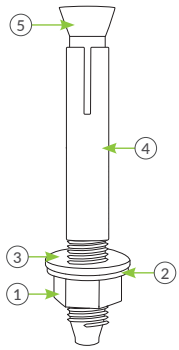



Mounting Instructions

1. Lay out all parts to ensure all are included and undamaged.
2. Determine shelf placement and note desired height.
3. Place the first wall bracket at the desired height on the wall. Level the bracket and mark the mounting holes.
4. Drill a hole at least 1 5/8" deep in the center of each mark using a 3/8" masonry drill bit.

NOTE: Avoid drilling the hole into the mortar joints of the wall if the wall is a block wall.

5. Insert the threaded bolt into the bottom of the sleeve anchor as shown. Push the anchor into the drilled mounting hole. Repeat for all four holes.

NOTE: The threaded portion of the bolt should be sticking out of the mounting hole.

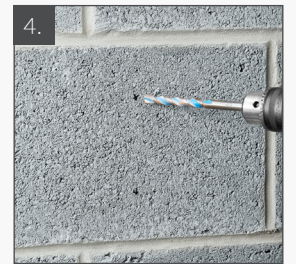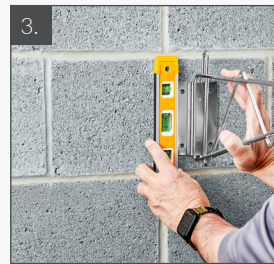

Mounting Instructions (continued)

6. Place the mounting bracket (with the loops facing up) over each threaded bolt and then install a flat washer, lock washer, and hex nut over each bolt in that order. Use a 10 mm wrench to ensure the hex nuts are tightened so that the mounting bracket is flush with the wall.
7. Use a tape measure and level to determine where to install the second mounting bracket based on shelf size.
8. Repeat Steps 3 - 6 for the second mounting bracket.
9. Once both brackets are secure, install the shelf by inserting the corners over each of the loops on the mounting brackets.
10. Test shelf weight and ensure shelf is level. Installation is complete.

