


Metal Bed Base Assembly Instructions

Parts included:


- (2) Side Panels
- (2) End Panels
- (4) Corner Top Blocks
- (4) Corner Bottom Blocks
- (6) Plastic Leg Guides
- (3) Cross Rails
- (6) Plastic End Caps




- 1 Connect the head panel to the side panel by inserting the tab on the top of the head panel into the slot on the top of the side panel. Slide down until the slot in the bottom of the head panel slips over the tab on the bottom of the side panel. Repeat on the other sides.

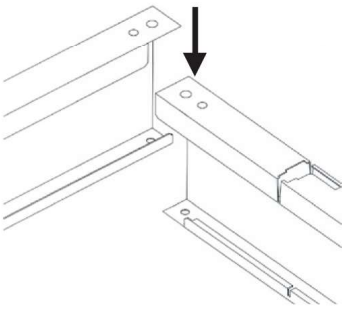


- 2 Holding both panels, lift the corner and place a corner bottom block under the corner. The plug in the block should snap into the hole in the corner of the panels.

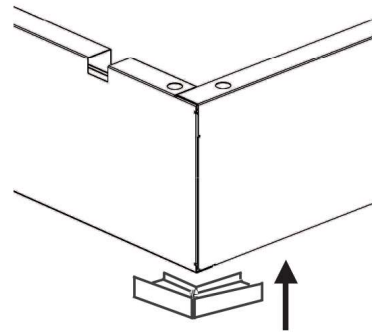


- 3 Slide a corner top block over the top of the panels at each corner. Press down to secure into place. Repeat on all corners.

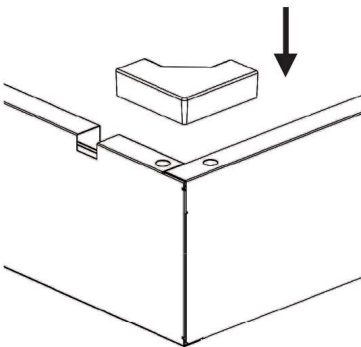


- 4 Insert the six plastic leg guides into all of the openings at the top of the side panels.

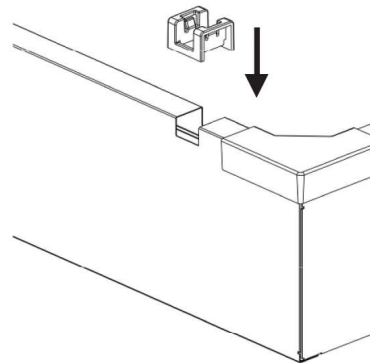

- 5 Slide the six plastic end caps onto the ends of the cross supports.

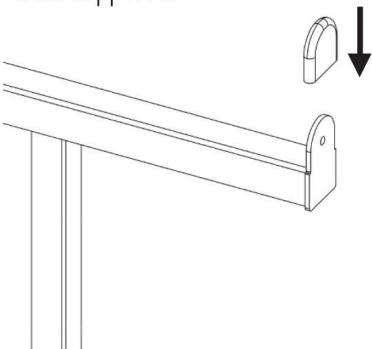

- 6 Slide the three cross supports into the leg guides on the side panels.

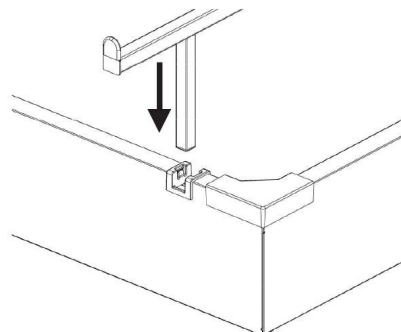

rize