



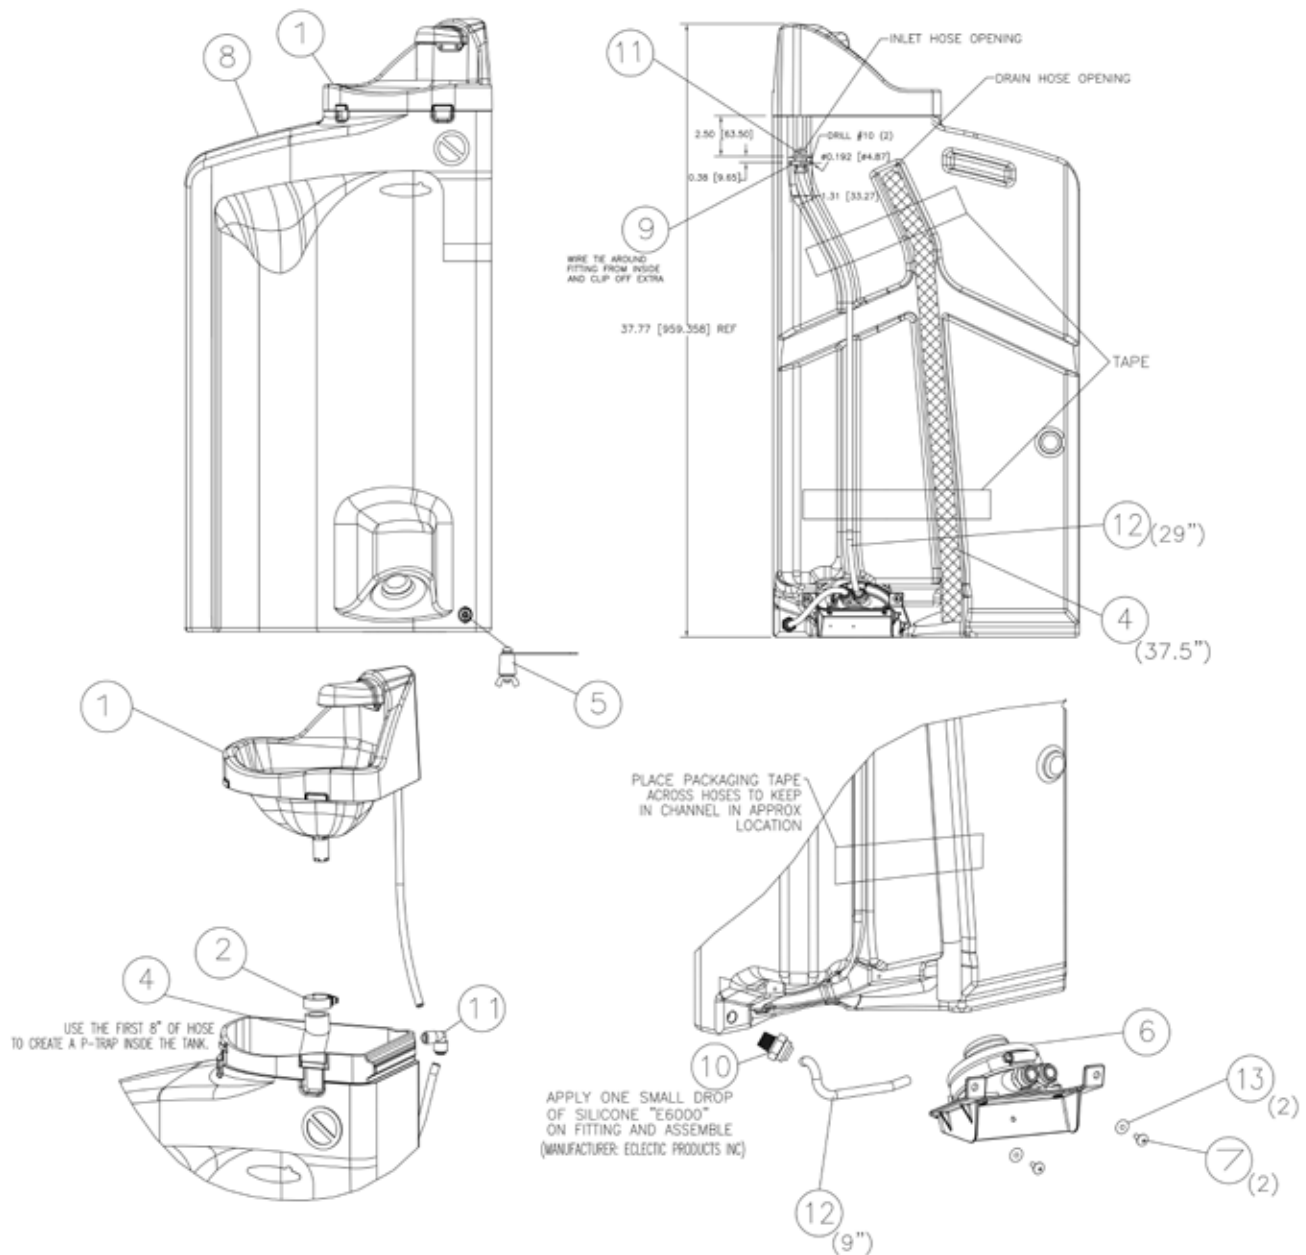

This part was used on slimmates from 1998 TO 2009

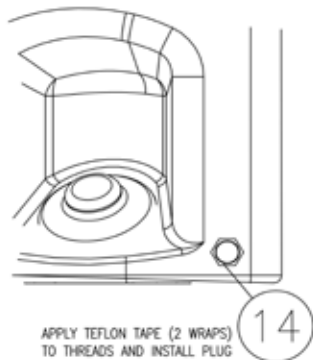

4. ABBREVIATION: (DGRY)= DARK GREY
 3. CHECK AND REMOVE ANY FLASH AROUND PARTING LINE IF SHARP EDGES ARE PRESENT.
 2. BLOW OUT TANK TO REMOVE ANY PLASTIC CHIPS

1. PARTS FOR ITEM 3 HARDWARE KIT ARE TO BE PLACED IN SEPARATE BAG AND TAPED TO INSIDE OF TANK.

NOTES:

REPLACEMENT PARTS AND KITS.

ITEM #	PART #	QTY	DESCRIPTION
14	14203	1	PLUG, 1/2 HEX HEAD PLSTC PIPE
13	11315	2	WASHER- 3/16 RIVET STNLS
12	16304	38"	TS HOSE, 3/8 OD TUBING
11	16656	1	TS FITTING, 90DEG 3/8 HOSXHOS
10	16302	1	TS FITTING, 3/8 HOS X NPTF
9	11261	1	TIE, WIRE 6in
8	20623	1	TANK, SLIMMATE II GREY
7	16393	2	SCREW, #10 X 1/2 HI-LO PHPN
6	22156	1	PUMP ASSY, SLIMMATE II GREY
5	20576	1	PLUG, 3/4 EXPANDING W/TETHER
4	16392	37.50"	HOSE, 3/4 LOW PRESSURE
3	22257	1	HWDE KIT, SLIMMATE II (NOT SHOWN)
2	12588	1	CLAMP, WORMDRIVE #12
1	20626	1	BASIN ASSY, SLIMMATE II DGRY

DESIGNED BY: J. WOOD (DW) DRAWN BY: J. WOOD (DW) CHECKED BY: J. WOOD (DW) DATE: 10/10/00	SIGNATURES: _____ DATE: _____ TITLE: _____ SCALE: _____ SHEET: 1 OF 1	DESCRIPTION: SLIMMATE II, DGRY PART NO: 20621 SCALE: NTS SUPERSEDES:
---	---	--

REV A ITEM #	PART#	QPU	DESCRIPTION
	23131	1	SLIMMATE 3- DGRY
1	20626	1	BASIN ASSY- SLIMMATE II GREY
2	12588	1	CLAMP- WORMDRIVE #12
3	23136	1	HDWE KIT- SLIMMATE 3
4	16392	37.50"	HOSE- 3/4 LOW PRESSURE
5	20576	1	PLUG- 3/4 EXPANDING W/TETHER
6	22156	1	PUMP ASSY- SLIMMATE II GREY
8	20623	1	TANK- SLIMMATE II DGRY
9	11261	1	TIE- WIRE 6in
10	16302	1	TS FITTING- 3/8 HOS X NPTF
11	16656	1	TS FITTING- 90DEG 3/8 HOSxHOS
12	16304	38"	TS HOSE- 3/8 OD TUBING
13	11315	2	WASHER- 3/16 RIVET STNLS
	20508	1	BOOT - BABY FOOT PUMP (BLACK)
* Only sold in multiples of 100			